 


KNC

W-48

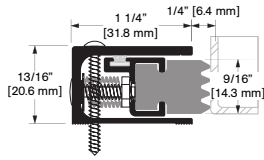

Adjustable Perimeter Seals

Installation Instructions

1. Set adjustment to mid range, so it can be adjusted equally in or out.
2. Cut to length.
3. With door closed, position seal, mark screw holes.
4. Drill pilot holes for screws using a 7/64" (#36) drill bit.
5. Install with screws provided, working from one end to the other.
Do not overtighten, or adjustment ability may be affected.
6. Adjust seal so gasket is slightly compressed against door, but does not impede proper closing or latching.

 


Intertek's directory of Building Products



KNC

W-48

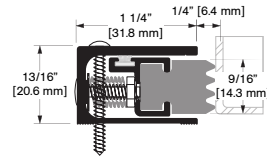

Adjustable Perimeter Seals

Installation Instructions

1. Set adjustment to mid range, so it can be adjusted equally in or out.
2. Cut to length.
3. With door closed, position seal, mark screw holes.
4. Drill pilot holes for screws using a 7/64" (#36) drill bit.
5. Install with screws provided, working from one end to the other.
Do not overtighten, or adjustment ability may be affected.
6. Adjust seal so gasket is slightly compressed against door, but does not impede proper closing or latching.

 


Intertek's directory of Building Products



KNC

W-48

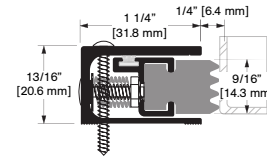

Adjustable Perimeter Seals

Installation Instructions

1. Set adjustment to mid range, so it can be adjusted equally in or out.
2. Cut to length.
3. With door closed, position seal, mark screw holes.
4. Drill pilot holes for screws using a 7/64" (#36) drill bit.
5. Install with screws provided, working from one end to the other.
Do not overtighten, or adjustment ability may be affected.
6. Adjust seal so gasket is slightly compressed against door, but does not impede proper closing or latching.

 


Intertek's directory of Building Products



KNC

W-48

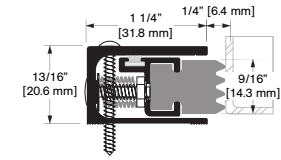

Adjustable Perimeter Seals

Installation Instructions

1. Set adjustment to mid range, so it can be adjusted equally in or out.
2. Cut to length.
3. With door closed, position seal, mark screw holes.
4. Drill pilot holes for screws using a 7/64" (#36) drill bit.
5. Install with screws provided, working from one end to the other.
Do not overtighten, or adjustment ability may be affected.
6. Adjust seal so gasket is slightly compressed against door, but does not impede proper closing or latching.



Intertek's directory of Building Products

