

STEP 1

DETERMINE DOOR SIZE/HEADER HEIGHT BASED ON DIMENSIONS SHOWN IN DETAIL VIEWS AND CLEARANCE REQUIRED BELOW DOOR. SECURE TRACK TO HEADER IF THERE IS ROOM TO INSTALL THE DOORS FROM ONE END OF THE TRACK, OTHERWISE DOORS WILL HAVE TO BE INSTALLED IN TRACK PRIOR TO SECURING TO HEADER. STEP 2

A) LOCATE CLEARANCE HOLE FOR HANGER STUD AND BEARING AT CENTER OF DOOR (DOOR WIDTH DIVIDE BY 2), DRILL WITH 1-1/4" BIT AT LEAST 1-1/2" DEEP.

B) PLACE HANGER STUD IN HOLE, MARK SCREW HOLE LOCATIONS ON TOP PLATE AND PRE-DRILL WITH 1/8" BIT AT LEAST 1-1/2" DEEP.

STEP 3

MOUNT TOP PLATE ON DOOR AND SECURE WITH #10 X 1-3/4" FLATHEAD SCREWS (8 PER HANGER).

STEP 4

PREPARE DOOR FOR INSTALLATION OF OPTIONAL PRODUCTS IF PURCHASED SUCH AS GUIDE CHANNELS, CUP PULLS, DOOR LOCKS, ETC. INDIVIDUAL INSTRUCTIONS ARE PROVIDED WITH THE RESPECTIVE PRODUCT.

STEP 5

LOAD DOOR(S) ONTO TRACK AND SECURE TO HEADER (IF TRACK WAS NOT SECURED IN STEP 1).

RECOMMENDATION:


IT IS RECOMMENDED TO USE C-914 GUIDE CHANNEL RECESSED IN FLOOR WITH C-913 GUIDE ON BOTTOM, 0 CENTERED ON DOOR(S). THIS WILL PROVIDE A SMOOTH OPERATION AND REDUCE IMPROPER TWISTING AND SWINGING OF DOOR(S).



K.N. CROWDER MFG. INC. 1220 BURLOAK DRIVE BURLINGTON, ONTARIO, CANADA, L7L 6B3 TELEPHONE: 905-315-9788 - FAX: 905-315-8090 TELEPHONE: 1-716-754-8247 TOLL FREE FAX: 1-800-567-0123

WEBSITE: www.kncrowder.com --- E-MAIL: customerservice@kncrowder.com


1-1/4"Ø X 1-1/2" DEEP HOLE (CENTER OF DOOR)

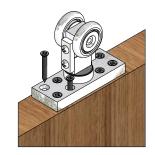


CAUTION: IN OPERATION DOORS **MUST BE MOVED INDIVIDUALY**

K.N. CROWDER INC. 210 EIGHTH STREET SOUTH LEWISTON, NEW YORK, U.S.A. 14092 TOLL FREE FAX: 1-800-567-0123

C-180-HD HANGER FOR C-975 TRACK

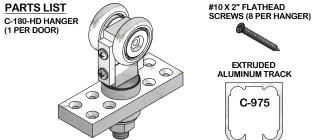




-TWO WHEEL DUAL-THRUST BEARING HANGER FOR HEAVY DUTY CENTER **PIVOT FOLDING DOORS.**

-HEAVY-DUTY BALL BEARING WHEELS WITH STEEL TIRE.

- TOP PLATE CAN BE SURFACE MOUNTED OR RECESSED, AS REQUIRED.

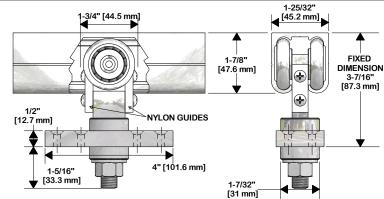

STEP 1

DETERMINE DOOR SIZE/HEADER HEIGHT BASED ON DIMENSIONS SHOWN IN DETAIL VIEWS AND CLEARANCE REQUIRED BELOW DOOR. SECURE TRACK TO HEADER IF THERE IS ROOM TO INSTALL THE DOORS FROM ONE END OF THE TRACK, OTHERWISE DOORS WILL HAVE TO BE INSTALLED IN TRACK PRIOR TO SECURING TO HEADER.

STEP 2

A) LOCATE CLEARANCE HOLE FOR HANGER STUD AND BEARING AT CENTER OF DOOR (DOOR WIDTH DIVIDE BY 2). DRILL WITH 1-1/4" BIT AT LEAST 1-1/2" DEEP.

B) PLACE HANGER STUD IN HOLE, MARK SCREW HOLE LOCATIONS ON TOP PLATE AND PRE-DRILL WITH 1/8" BIT AT LEAST 1-1/2" DEEP.

STEP 3

MOUNT TOP PLATE ON DOOR AND SECURE WITH #10 X 1-3/4" FLATHEAD SCREWS (8 PER HANGER).

STEP 4

PREPARE DOOR FOR INSTALLATION OF OPTIONAL PRODUCTS IF PURCHASED SUCH AS GUIDE CHANNELS, CUP PULLS, DOOR LOCKS, ETC. INDIVIDUAL INSTRUCTIONS ARE PROVIDED WITH THE RESPECTIVE PRODUCT.

STEP 5

LOAD DOOR(S) ONTO TRACK AND SECURE TO HEADER (IF TRACK WAS NOT SECURED IN STEP 1).

RECOMMENDATION:

IT IS RECOMMENDED TO USE C-914 GUIDE CHANNEL RECESSED IN FLOOR WITH C-913 GUIDE ON BOTTOM, CENTERED ON DOOR(S). THIS WILL PROVIDE A SMOOTH OPERATION AND REDUCE IMPROPER TWISTING AND SWINGING OF DOOR(S).



K.N. CROWDER MFG. INC. 1220 BURLOAK DRIVE BURLINGTON, ONTARIO, CANADA, L7L 6B3 TELEPHONE: 905-315-9788 - FAX: 905-315-8090 TELEPHONE: 1-716-754-8247 TOLL FREE FAX: 1-800-567-0123

K.N. CROWDER INC. 210 EIGHTH STREET SOUTH LEWISTON, NEW YORK, U.S.A. 14092 TOLL FREE FAX: 1-800-567-0123

WEBSITE: www.kncrowder.com --- E-MAIL: customerservice@kncrowder.com





CAUTION:

IN OPERATION DOORS

MUST BE MOVED

INDIVIDUALY