



# C-200D-XXX GUIDE SYSTEM INSTRUCTION SHEET

new



## PARTS LIST

C-201 GUIDE CHANNEL

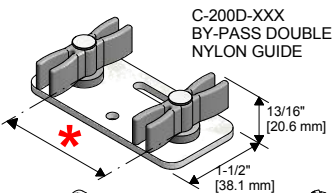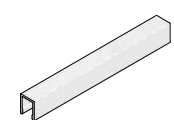

#10 X 1-1/4" PAN HEAD  
SCREWS (2 PER C-913D)

SMALL EXTERNAL  
TOOTH WASHER  
(2 PER C-913D)

**\* C-200D DOUBLE GUIDE CENTER TO CENTER  
DIMENSIONS & PRODUCT REFERENCE:**


### C-200D-134

FOR BY-PASSING 1-3/4" DOORS  
(I.E. C-500 SERIES);  
CENTER TO CENTER = 2-1/8" [54 mm]



### C-200D-138

FOR BY-PASSING 1-3/8" DOORS  
(I.E. C-538 SERIES);  
CENTER TO CENTER = 1-3/4" [44.5 mm]

## TYPICAL INSTALLATION LOCATION FOR BY-PASSING FLOOR GUIDES: GUIDE CHANNEL IN DOOR WITH BY-PASSING GUIDE ON FLOOR

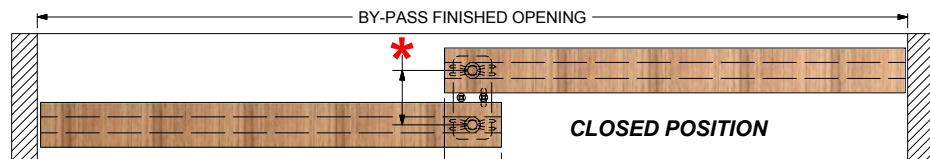

## TYPICAL MINIMUM OVERLAP OF BY-PASSING DOORS: 2" [50.8 mm]

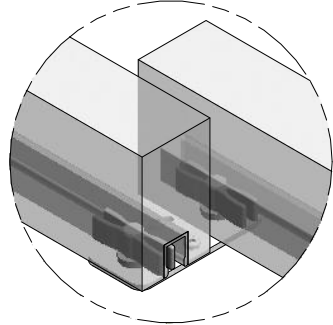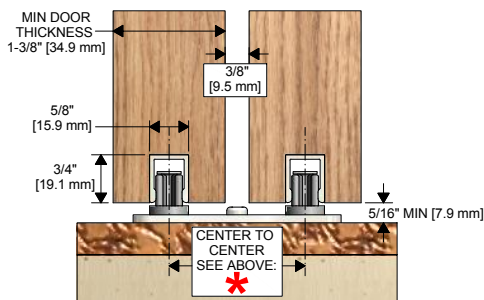

### STEP 1

CUT C-201 ALUMINUM GUIDE CHANNEL TO CORRECT LENGTH IF REQUIRED (TYPICALLY, LENGTH EQUALS DOOR WIDTH. EXAMPLE: DOOR WIDTH IS 36" THEREFORE CHANNEL IS 36".)

### STEP 2

PREPARE SLOT IN DOORS AT LEAST 5/8" [15.9 mm] WIDE IN CENTER OF DOOR, AND AT LEAST 3/4" [19.1 mm] DEEP. IT IS RECOMMENDED TO MAKE THE SLOT AS ACCURATE AS POSSIBLE FOR SECURE FIT AND NEAT APPEARANCE.

### STEP 3

DRILL HOLES IN C-201 CHANNEL, AND PRE-DRILL HOLES IN DOORS. SCREW CHANNEL INTO PLACE WHILE KEEPING IT FLUSH WITH THE EDGE OF THE DOORS. (#8 SCREW SIZE RECOMMENDED)

### STEP 4

LOCATE C-200D-138 (FOR 1-3/8" BY-PASSING DOORS) OR C-200D-134 (FOR 1-3/4" BY-PASSING DOORS) FLOOR GUIDE AS REQUIRED AND SECURE TO FLOOR WITH #10 X 1-1/4" PAN HEAD SCREWS (2) TYPICALLY IN THE MIDDLE OF A DOUBLE BY-PASSING DOOR OPENING WIDTH. EXAMPLE: IF OPENING IS 72" WIDE THE CENTER OF THE C-200D-XXX WOULD BE PLACED AT 36".

### STEP 5

CONTINUE WITH PROJECT BY INSTALLING HANGERS AND PLACING DOOR IN POSITION. **NOTE: IT WILL BE IDEAL TO PLACE THE DOORS ON THE TRACK WITHOUT THE GUIDE IN POSITION TO DETERMINE WHERE THE DOORS ARE PLUMB. MARK THIS POSITION ON THE FLOOR FOR THE GUIDE TO BE PLACED IN THE CORRECT POSITION.**



K.N. CROWDER MFG. INC.  
1220 BURLOAK DRIVE  
BURLINGTON, ONTARIO, CANADA, L7L 6B3  
TELEPHONE: 905-315-9788 - FAX: 905-315-8090  
TOLL FREE PHONE: 1-866-999-1KNC (1562)  
TOLL FREE FAX: 1-800-567-0123

WEBSITE: [www.kncrowder.com](http://www.kncrowder.com) --- E-MAIL: [customerservice@kncrowder.com](mailto:customerservice@kncrowder.com)

K.N. CROWDER INC.  
210 EIGHTH STREET SOUTH  
LEWISTON, NEW YORK, U.S.A. 14092  
TELEPHONE: 1-716-754-8247  
TOLL FREE FAX: 1-800-567-0123



# C-200D-XXX GUIDE SYSTEM INSTRUCTION SHEET

new



## PARTS LIST

C-201 GUIDE CHANNEL

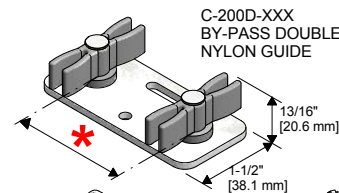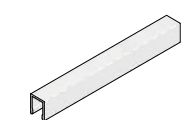

#10 X 1-1/4" PAN HEAD  
SCREWS (2 PER C-913D)

SMALL EXTERNAL  
TOOTH WASHER  
(2 PER C-913D)

**\* C-200D DOUBLE GUIDE CENTER TO CENTER  
DIMENSIONS & PRODUCT REFERENCE:**


### C-200D-134

FOR BY-PASSING 1-3/4" DOORS  
(I.E. C-500 SERIES);  
CENTER TO CENTER = 2-1/8" [54 mm]



### C-200D-138

FOR BY-PASSING 1-3/8" DOORS  
(I.E. C-538 SERIES);  
CENTER TO CENTER = 1-3/4" [44.5 mm]

## TYPICAL INSTALLATION LOCATION FOR BY-PASSING FLOOR GUIDES: GUIDE CHANNEL IN DOOR WITH BY-PASSING GUIDE ON FLOOR

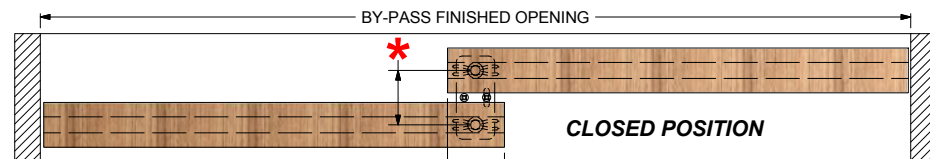

## TYPICAL MINIMUM OVERLAP OF BY-PASSING DOORS: 2" [50.8 mm]

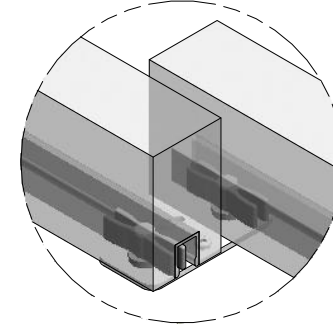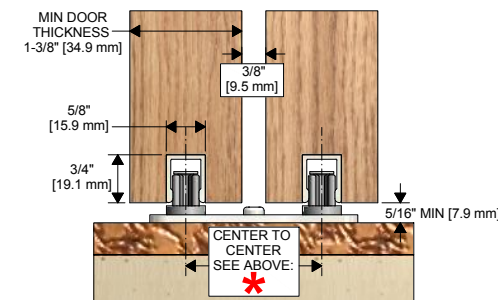

### STEP 1

CUT C-201 ALUMINUM GUIDE CHANNEL TO CORRECT LENGTH IF REQUIRED (TYPICALLY, LENGTH EQUALS DOOR WIDTH. EXAMPLE: DOOR WIDTH IS 36" THEREFORE CHANNEL IS 36".)

### STEP 2

PREPARE SLOT IN DOORS AT LEAST 5/8" [15.9 mm] WIDE IN CENTER OF DOOR, AND AT LEAST 3/4" [19.1 mm] DEEP. IT IS RECOMMENDED TO MAKE THE SLOT AS ACCURATE AS POSSIBLE FOR SECURE FIT AND NEAT APPEARANCE.

### STEP 3

DRILL HOLES IN C-201 CHANNEL, AND PRE-DRILL HOLES IN DOORS. SCREW CHANNEL INTO PLACE WHILE KEEPING IT FLUSH WITH THE EDGE OF THE DOORS. (#8 SCREW SIZE RECOMMENDED)

### STEP 4

LOCATE C-200D-138 (FOR 1-3/8" BY-PASSING DOORS) OR C-200D-134 (FOR 1-3/4" BY-PASSING DOORS) FLOOR GUIDE AS REQUIRED AND SECURE TO FLOOR WITH #10 X 1-1/4" PAN HEAD SCREWS (2) TYPICALLY IN THE MIDDLE OF A DOUBLE BY-PASSING DOOR OPENING WIDTH. EXAMPLE: IF OPENING IS 72" WIDE THE CENTER OF THE C-200D-XXX WOULD BE PLACED AT 36".

### STEP 5

CONTINUE WITH PROJECT BY INSTALLING HANGERS AND PLACING DOOR IN POSITION. **NOTE: IT WILL BE IDEAL TO PLACE THE DOORS ON THE TRACK WITHOUT THE GUIDE IN POSITION TO DETERMINE WHERE THE DOORS ARE PLUMB. MARK THIS POSITION ON THE FLOOR FOR THE GUIDE TO BE PLACED IN THE CORRECT POSITION.**



K.N. CROWDER MFG. INC.  
1220 BURLOAK DRIVE  
BURLINGTON, ONTARIO, CANADA, L7L 6B3  
TELEPHONE: 905-315-9788 - FAX: 905-315-8090  
TOLL FREE PHONE: 1-866-999-1KNC (1562)  
TOLL FREE FAX: 1-800-567-0123

WEBSITE: [www.kncrowder.com](http://www.kncrowder.com) --- E-MAIL: [customerservice@kncrowder.com](mailto:customerservice@kncrowder.com)

K.N. CROWDER INC.  
210 EIGHTH STREET SOUTH  
LEWISTON, NEW YORK, U.S.A. 14092  
TELEPHONE: 1-716-754-8247  
TOLL FREE FAX: 1-800-567-0123