C-207-4 HANGER FOR C-204 TRACK





5/16"-18 X 2-1/2" **HEX BOLT** (2 PER HANGER) 5/16" HEX NUT

5/16" PLAIN WASHER (2 PER HANGER)

EXTRUDED ALUMINUM TRACK

OR C-207-8 HANGER **ASSEMBLED** 7" WIDE (2 PER DOOR) 0



C-204

2-1/8"

[76.2 mm]

[54 mm]


[36.5 mm]

SPECIFICATIONS: -LOAD CAPACITY: C-207-4 HANGERS: 500 LBS PER DOOR C-207-8 HANGERS: 700 LBS PER DOOR

-HEAVY-DUTY PRECISION BALL BEARING STEEL WHEELS.

-CLAMP-TYPE FACE MOUNTING DESIGN. ADJUSTABLE FOR DOOR THICKNESS OF 1-3/4" - 2-1/4".

-FOR BY-PASSING, BI-PARTING, POCKET. AND SURFACE MOUNT/BARN STYLE APPLICATIONS.

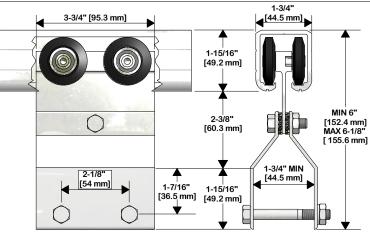

STEP 1

DETERMINE DOOR SIZE/HEADER HEIGHT BASED ON DIMENSIONS SHOWN IN DETAIL VIEWS AND CLEARANCE REQUIRED BELOW DOOR. STEP 2

LOCATE AND DRILL 21/64"Ø HOLES FOR BOLTS USING THE DIMENSIONS SHOWN IN ILLUSTRATION. NOTE: IF USING CAS-2 DOOR STOP ADD 2" TO DIMENSION FROM EDGE OF DOOR.

STEP 3

PREPARE DOOR FOR INSTALLATION OF OPTIONAL PRODUCTS IF PURCHASED SUCH AS GUIDE CHANNELS, CUP PULLS, DOOR LOCKS, ETC. INDIVIDUAL INSTRUCTIONS ARE PROVIDED WITH THE RESPECTIVE PRODUCT.

PLACE HANGER ASSEMBLY ON DOOR AND SECURE CLAMPS TO DOOR WITH 5/16"-18 HEX BOLTS(2), 5/16" WASHERS(2), AND 5/16" HEX NUTS(2).

STEP 5 PLACE DOOR AND HANGERS INTO C-204 TRACK AND SECURE TO HEADER. ALTERNATE: IF TRACK ENDS ARE NOT ACCESSIBLE AFTER MOUNTING: AFTER


PREPARING DOOR FOR HANGERS. INSTALL HANGERS IN TRACK AND MOUNT TRACK. RAISE DOOR INTO POSITION BELOW HANGERS & BOLT THROUGH

PREDRILLED HOLES.

STEP 6

AND PLUMB WITH 1/2" WRENCH ON **HEX NUT OF**

CENTER BOLT.



K.N. CROWDER MFG. INC. 1220 BURLOAK DRIVE **BURLINGTON, ONTARIO, CANADA, L7L 6B3**

TOLL FREE FAX: 1-800-567-0123

K.N. CROWDER INC. 210 EIGHTH STREET SOUTH LEWISTON, NEW YORK, U.S.A. 14092 TELEPHONE: 905-315-9788 - FAX: 905-315-8090 TELEPHONE: 1-716-754-8247 TOLL FREE FAX: 1-800-567-0123

WEBSITE: www.kncrowder.com --- E-MAIL: customerservice@kncrowder.com

C-207-4 HANGER FOR C-204 TRACK





5/16"-18 X 2-1/2" (A) **HEX BOLT** (2 PER HANGER)

5/16" HEX NUT (2 PER HANGER)

C-207-8 HANGER **ASSEMBLED** 7" WIDE (2 PER DOOR)

0 0 0

5/16" PLAIN

(2 PER HANGER)

WASHER

EXTRUDED ALUMINUM TRACK



C-207-8


DETAIL "A"

SPECIFICATIONS:
-LOAD CAPACITY: C-207-4 HANGERS: 500 LBS PER DOOR C-207-8 HANGERS: 700 LBS PER DOOR

-HEAVY-DUTY PRECISION BALL BEARING STEEL WHEELS.

-CLAMP-TYPE FACE MOUNTING DESIGN. ADJUSTABLE FOR DOOR THICKNESS OF 1-3/4" - 2-1/4".

-FOR BY-PASSING, BI-PARTING, POCKET. AND SURFACE MOUNT/BARN STYLE APPLICATIONS.

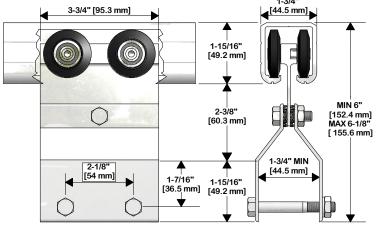

STEP 1

DETERMINE DOOR SIZE/HEADER HEIGHT BASED ON DIMENSIONS SHOWN IN DETAIL VIEWS AND CLEARANCE REQUIRED BELOW DOOR.

LOCATE AND DRILL 21/64"Ø HOLES FOR BOLTS USING THE DIMENSIONS SHOWN IN ILLUSTRATION. NOTE: IF USING CAS-2 DOOR STOP ADD 2" TO DIMENSION FROM EDGE OF DOOR.

STEP 3

PREPARE DOOR FOR INSTALLATION OF OPTIONAL PRODUCTS IF PURCHASED SUCH AS GUIDE CHANNELS, CUP PULLS, DOOR LOCKS, ETC. INDIVIDUAL INSTRUCTIONS ARE PROVIDED WITH THE RESPECTIVE PRODUCT.


PLACE HANGER ASSEMBLY ON DOOR AND SECURE CLAMPS TO DOOR WITH 5/16"-18 HEX BOLTS(2), 5/16" WASHERS(2), AND 5/16" HEX NUTS(2).

STEP 5


PLACE DOOR AND HANGERS INTO C-204 TRACK AND SECURE TO HEADER. ALTERNATE: IF TRACK ENDS ARE NOT ACCESSIBLE AFTER MOUNTING: AFTER PREPARING DOOR FOR HANGERS, INSTALL HANGERS IN TRACK AND MOUNT TRACK. RAISE DOOR INTO POSITION BELOW HANGERS & BOLT THROUGH PREDRILLED HOLES.

STEP 6

AND PLUMB WITH 1/2" WRENCH ON HEX NUT OF CENTER BOLT.



TOLL FREE FAX: 1-800-567-0123

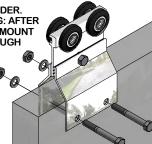

[76.2 mm]

2-1/8"

[54 mm]

1-7/16

[36.5 mm]



K.N. CROWDER MFG. INC. 1220 BURLOAK DRIVE BURLINGTON, ONTARIO, CANADA, L7L 6B3 TELEPHONE: 905-315-9788 - FAX: 905-315-8090 TELEPHONE: 1-716-754-8247

K.N. CROWDER INC. 210 EIGHTH STREET SOUTH LEWISTON, NEW YORK, U.S.A. 14092 TOLL FREE FAX: 1-800-567-0123

WEBSITE: www.kncrowder.com --- E-MAIL: customerservice@kncrowder.com