



# C-21-BHBH Passage Set

Installation Instructions


## Specifications

Door Thickness: 1 3/8 in [34.9 mm] minimum

Not to scale

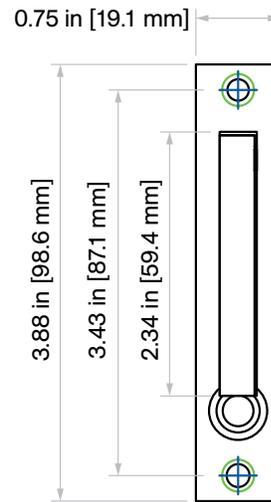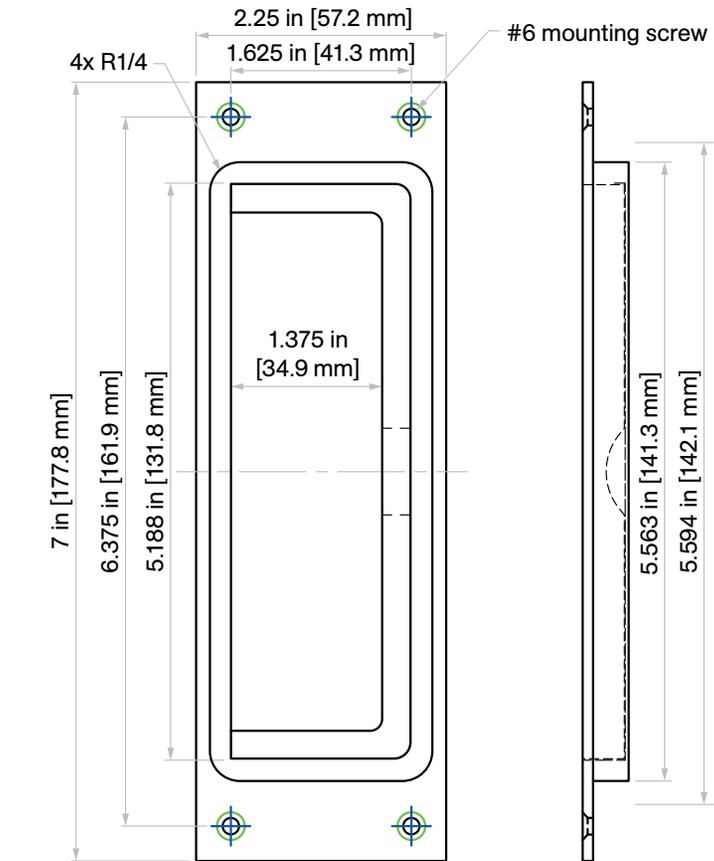




## Included Components

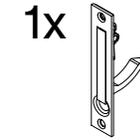

**C-21**  
Edge Pull Body



**C-90BH**  
Swing-Out Handle Flush Pull

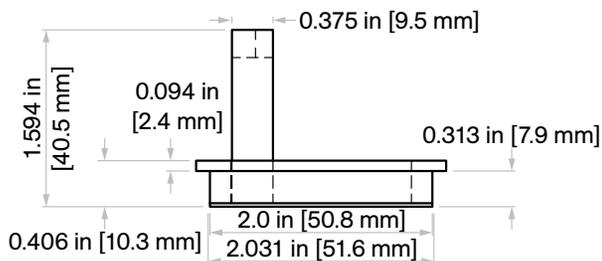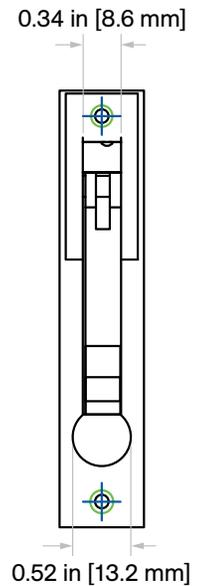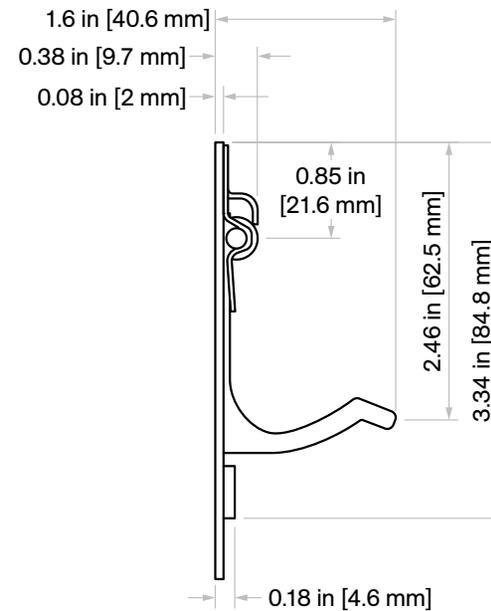

# Door Prep Template


Horizontal and vertical spacing of the flush pulls is up to the end user. However, we do suggest to line up the backset with the other locks on your project.

For example: 2 in [50.8 mm], 2.5 in [63.5 mm], 2.75 in [69.8 mm], 5 in [127 mm], and 6 in [152.4 mm]

## Responsibility

Door and frame manufacturers are responsible for providing adequate construction or reinforcement for proper installation of hardware shown.

### C-90BH

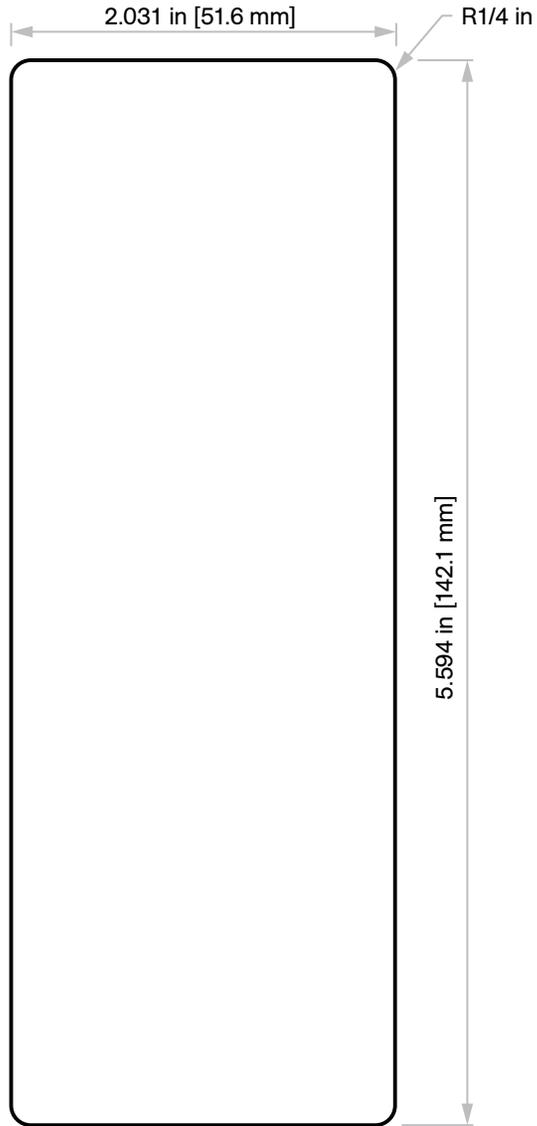

### C-21

