



# C-25 Wood Door Edge Pull

Installation Instructions

Suitable for 1 3/4 in [44.5 mm] thick doors

**Not to scale**

**KNC**  
Door Locks & Pulls

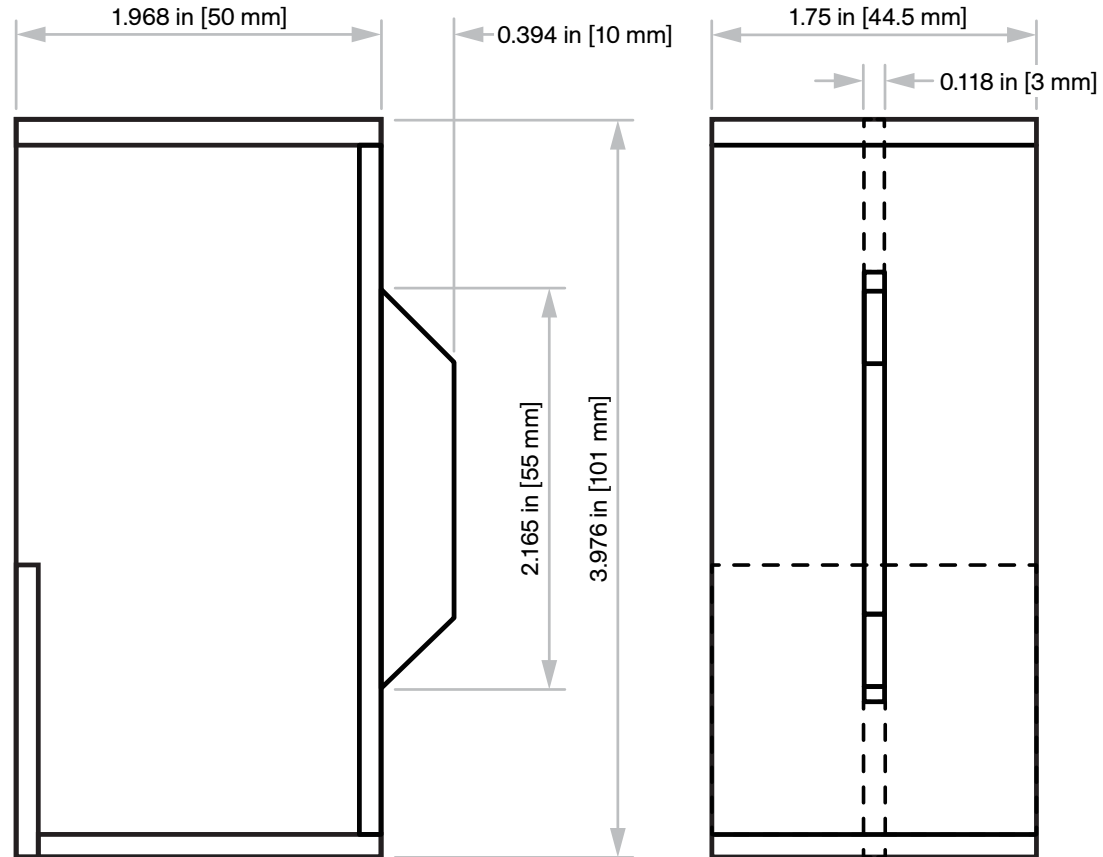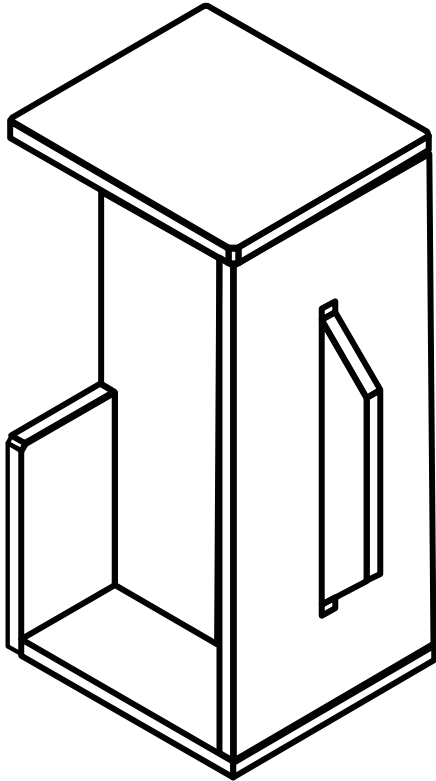

## Step #1:


Cut out a pocket from the door edge to fit the C-25 Edge Pull, including a notch for the 0.118 in [3 mm] x 0.394 in [10 mm] x 2.165 in [55 mm] protrusion on the back.

## Step #2:

Apply some construction adhesive to the notched out area, and on the top, bottom and back of the pull to assist in holding the pull firmly on the door.

## Step #3:

Press-fit into the pocket clean off any excess adhesive and allow the adhesive to dry properly before use.

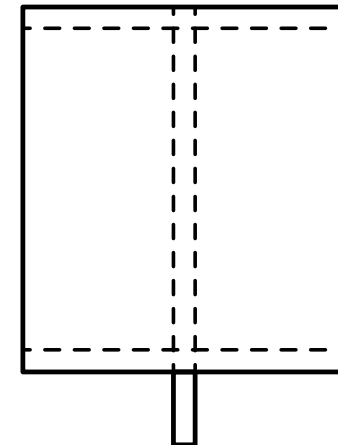

**KN Crowder**

1220 Burloak Drive, Burlington, Ontario, Canada, L7L 6B3  
T. 1-866-999-1562 customerservice@kncrowder.com kncrowder.com  
© 2020-2022 K.N. Crowder Mfg. Inc. All Rights Reserved.