


# C-50FP Pocket Privacy Lockset

## Barrier-Free (ADA Compliant)

Installation Instructions

Suitable for 4.5 in [114.3 mm] - 10 in [254 mm] frame - see chart A  
Door must be aligned to middle of jamb/pocket


**Not to scale**

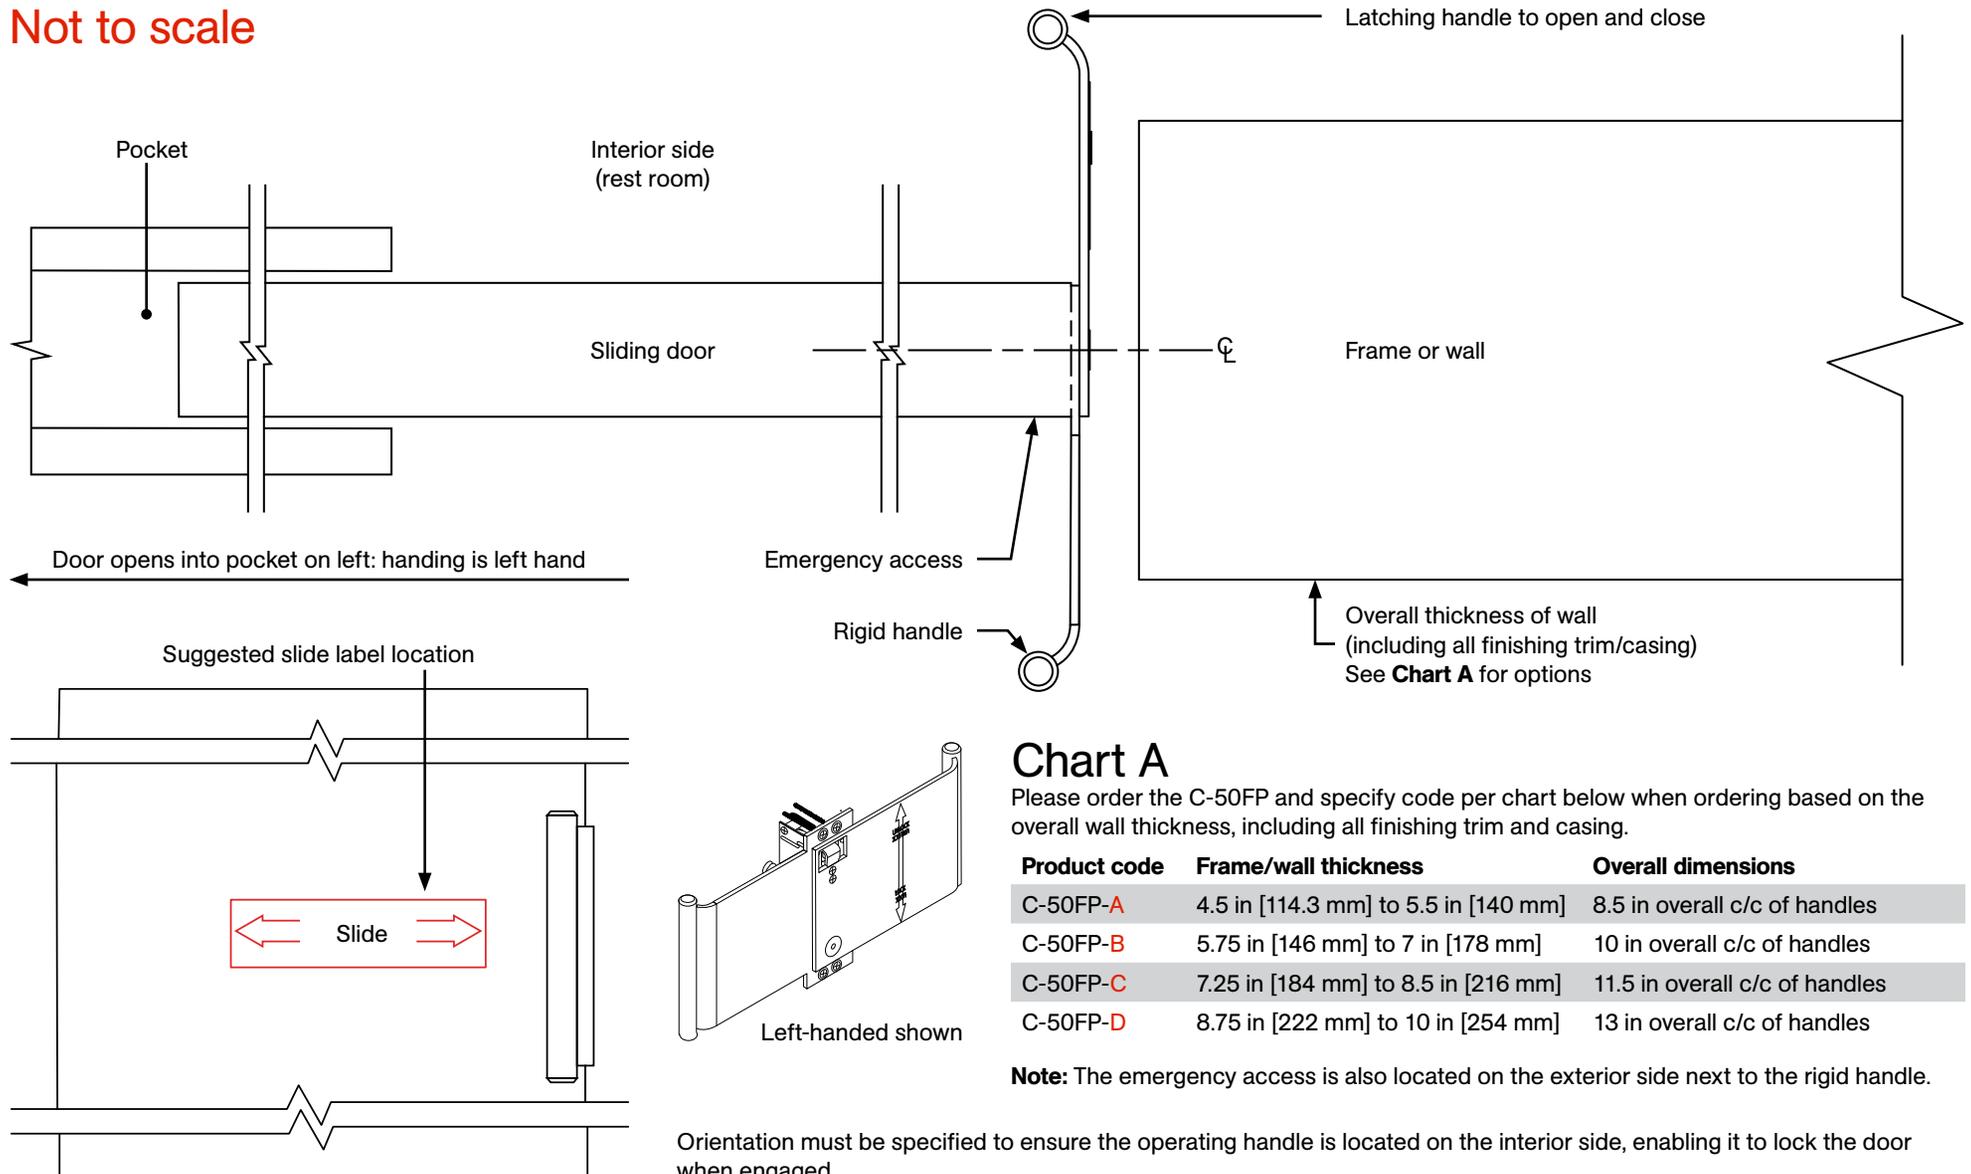

# Installation Steps




1. Our standard C-50FP assembly will work with a frame/wall of up to 5.5 in [139.7 mm] width - see [Chart A](#)
2. To determine handing for C-50FP, please see [Handing Chart](#)
3. To adjust resistance to lock/unlock:
  - a. Turn set-screw cw - use 3/16 in hex key (allen wrench) to increase resistance to lock/unlock
  - b. Turn set-screw ccw - use 3/16 in hex key (allen wrench) to decrease resistance to lock/unlock
4. Prepare door and frame as indicated on page 3, strike preparation is same
5. Insert door pull and install using supplied quantity four (4) #8 x 1-5/8" Flat Head PH drywall screws
6. Install strike using supplied (2) #8 x 3/4" Flat Head WS then test unit
7. Install lock/unlock decal and slide decals as shown on pages 1 and 2
8. For emergency access, please see page 4

## LH Shown Back View

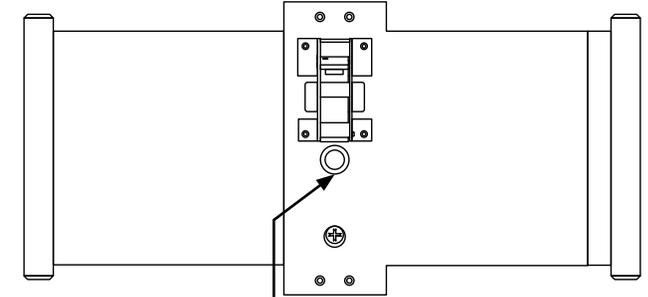

Refer to note 3 to adjust lock/unlock resistance



## LH Shown Front View

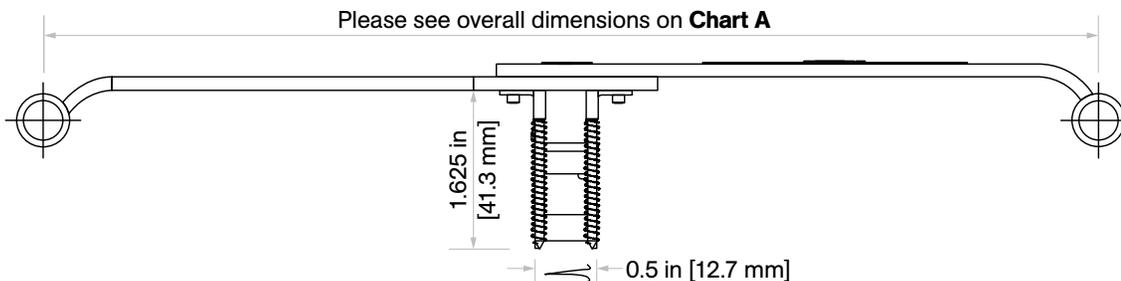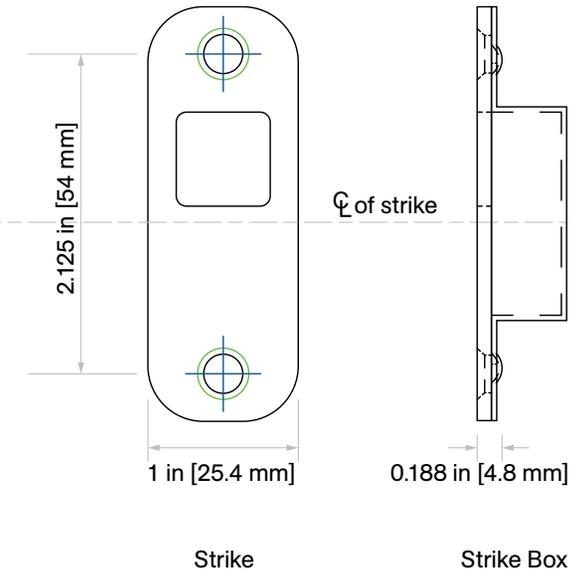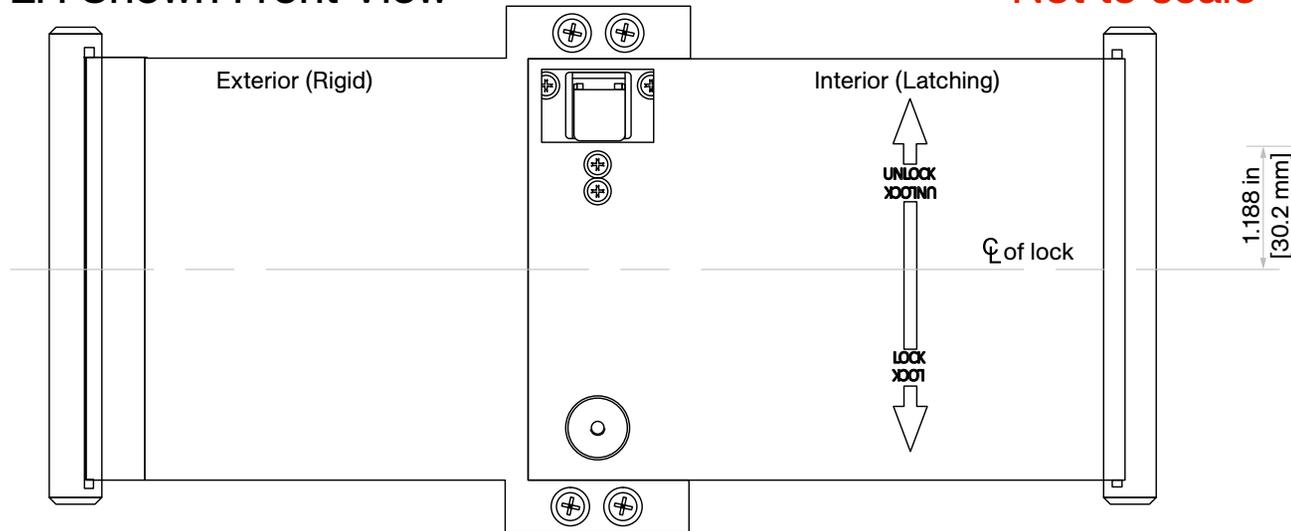

# Door Prep Details

For 1 3/8 in [34.9 mm] to 1 3/4 in [44.5 mm] doors

Not to scale

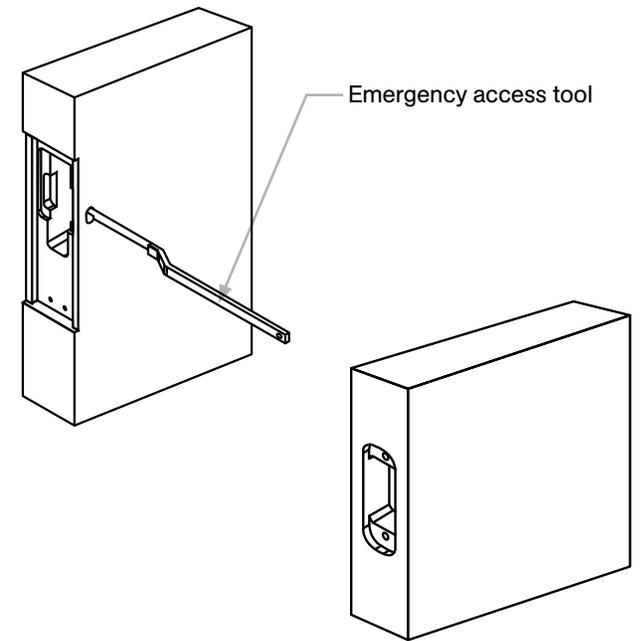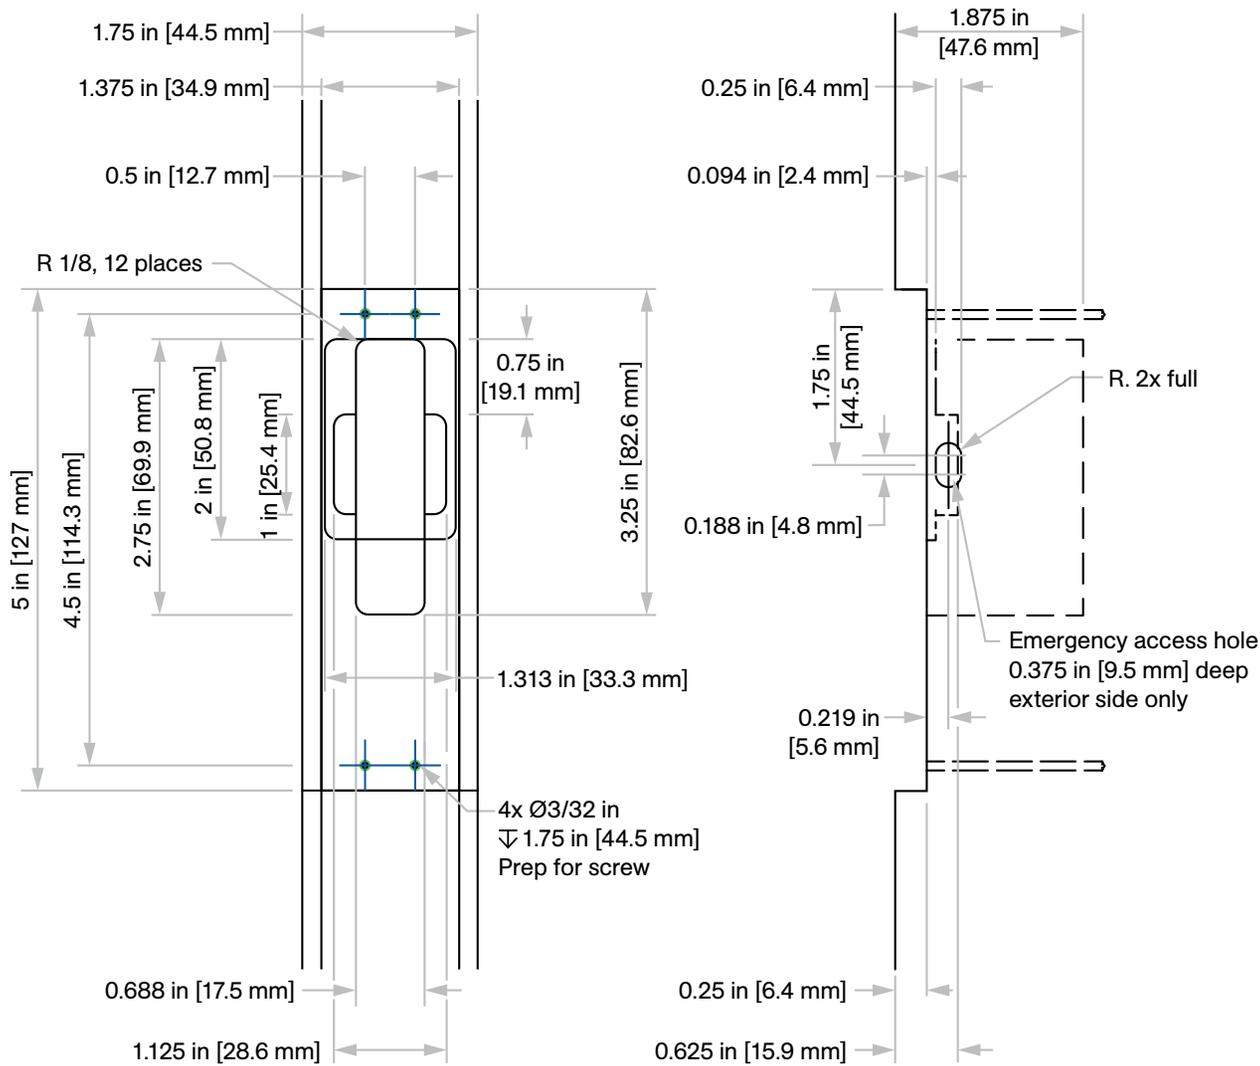

## Strike Prep in Wood Frame

