

C-50FP Full Privacy Pocket Lockset


Barrier-Free (ADA Compliant)

Installation Instructions

Suitable for 4.75 in [120.7 mm] - 10 in [254 mm] frame thickness - see chart A

Door must be aligned to the middle of jamb/pocket


Not to scale

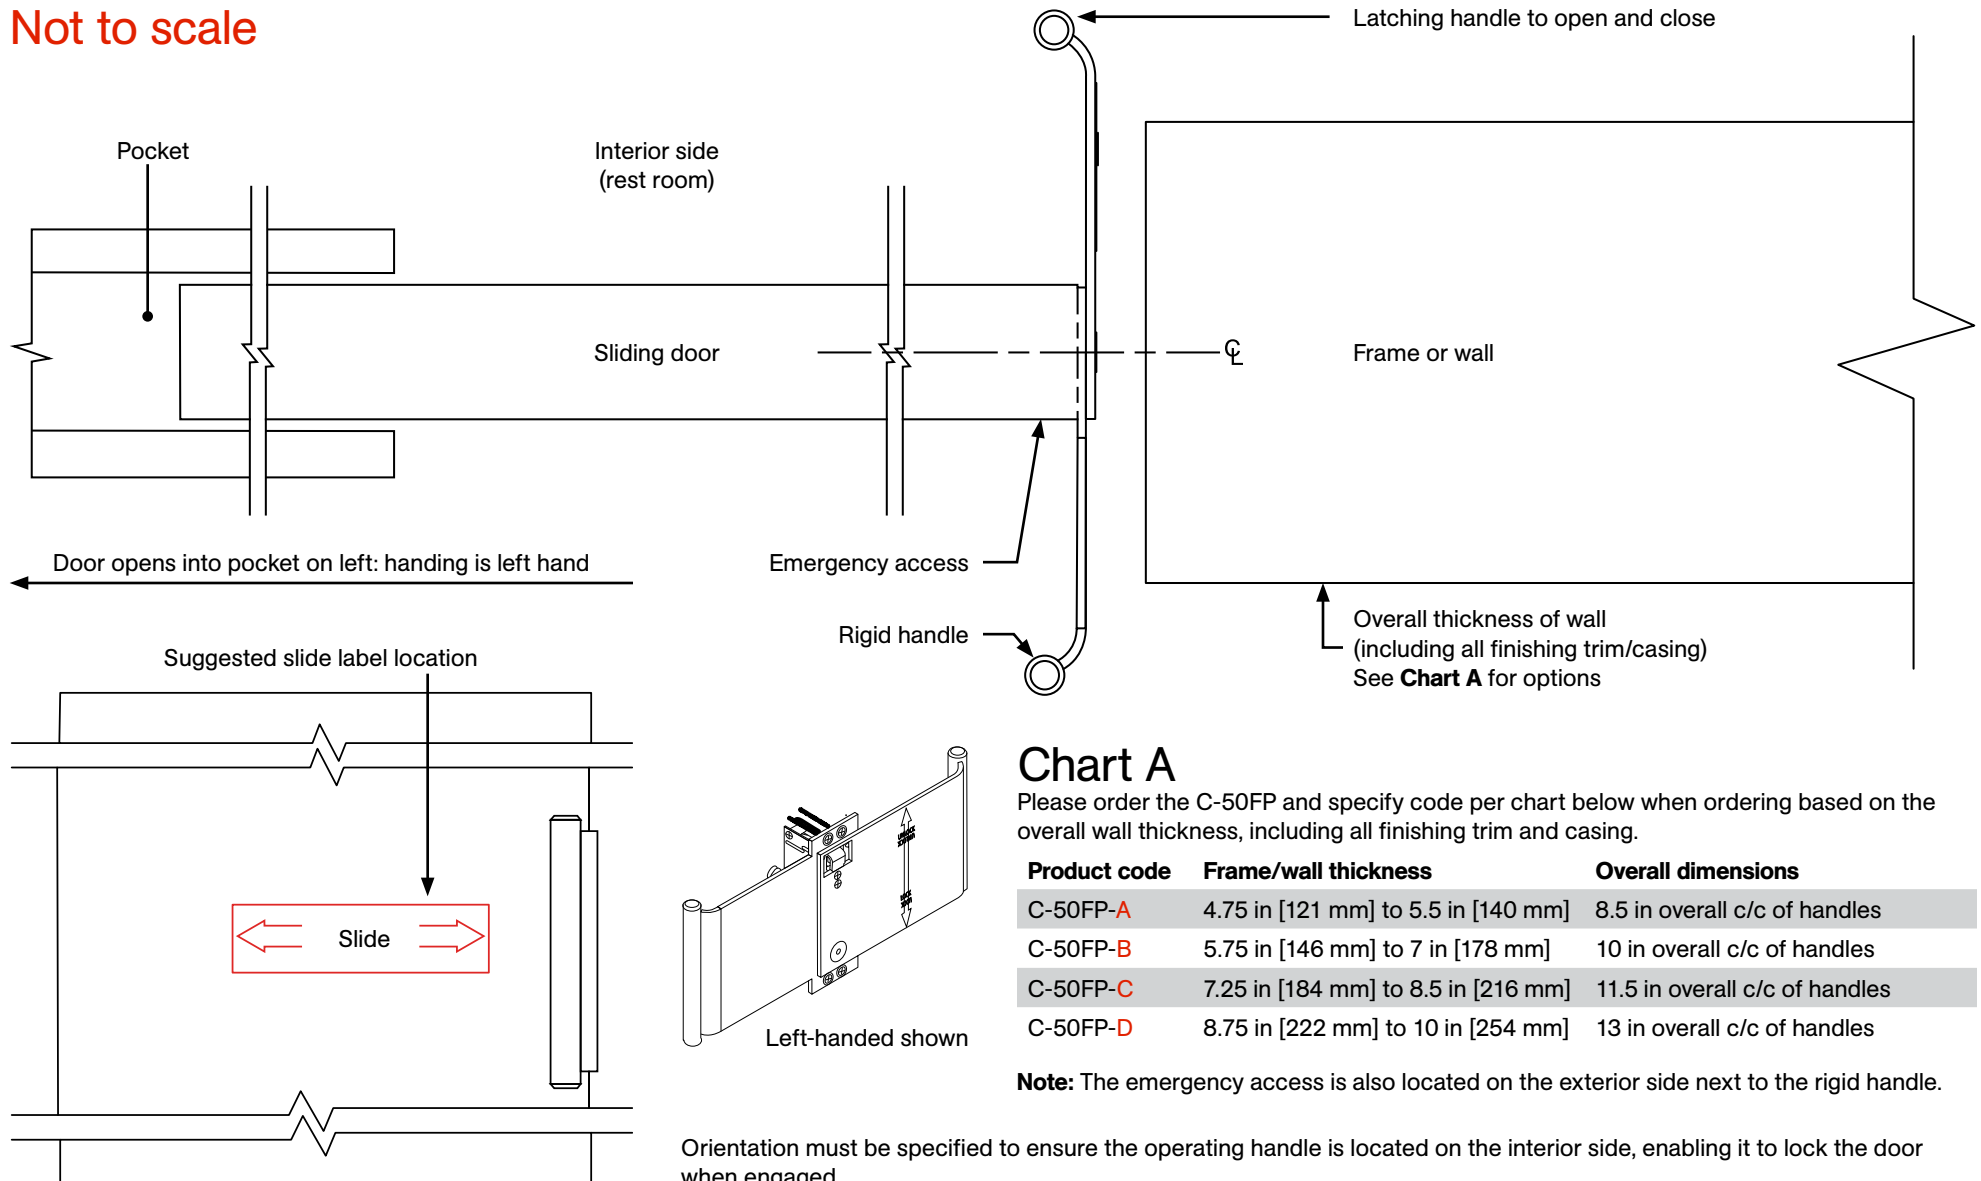


Installation Steps

1. Our standard C-50FP assembly will work with a frame/wall of up to 5.5 in [139.7 mm] width - see [Chart A](#)
2. To determine the handing for C-50FP, please see [Handing Chart](#)
3. To adjust the resistance to lock/unlock:
 - a. Turn set-screw cw - use 3/16 in hex key (allen wrench) to increase resistance to lock/unlock
 - b. Turn set-screw ccw - use 3/16 in hex key (allen wrench) to decrease resistance to lock/unlock
4. Prepare door and frame as indicated on page 3 (strike preparation is the same)
5. Insert door pull and install using supplied quantity four (4) #8 x 1-5/8" FH PH drywall screws
6. Install strike using supplied (2) #8 x 3/4" FH WS then test unit
7. Install lock/unlock decal and slide decals as shown on pages 1 and 2
8. For emergency access, please see page 4.


LH Shown Front View

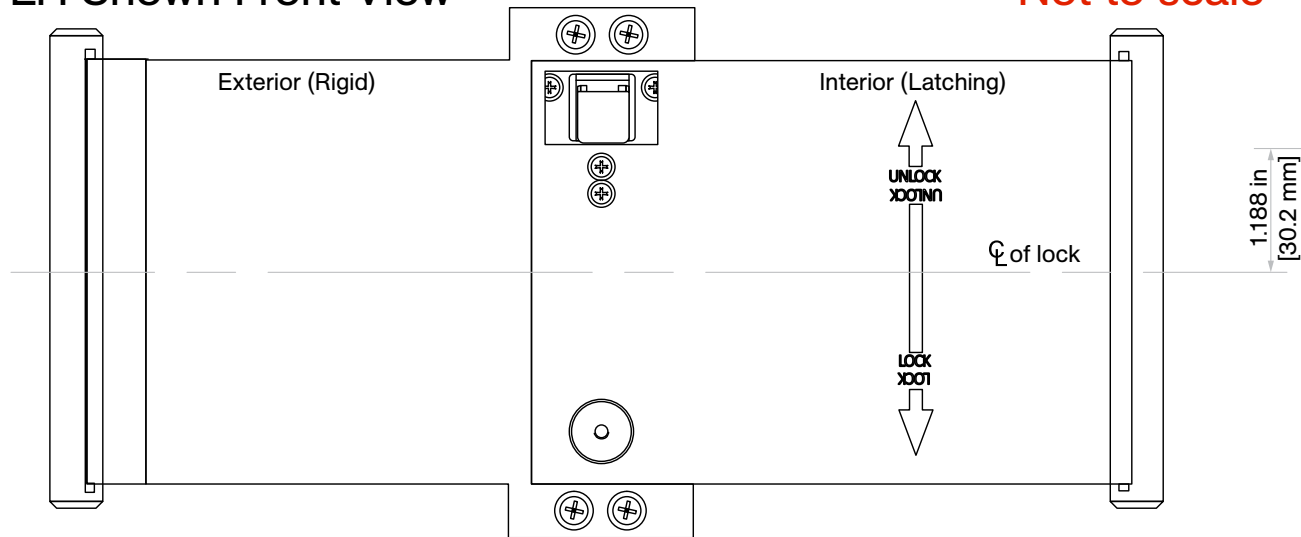


Not to scale

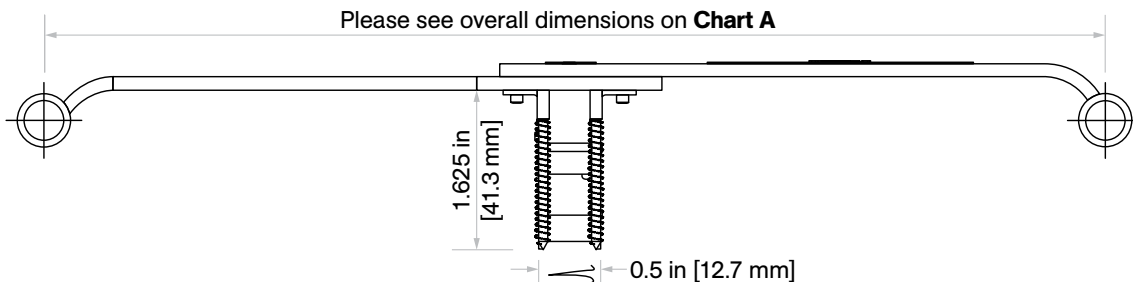

LH Shown Back View

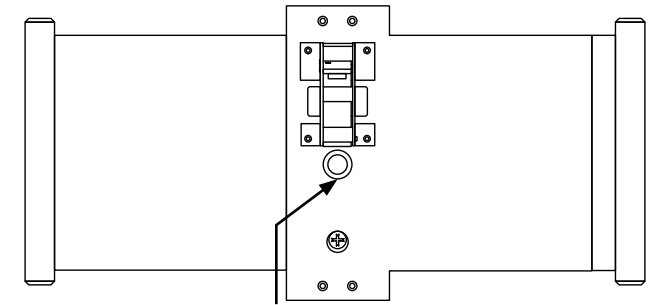



Refer to note 3 to adjust lock/unlock resistance

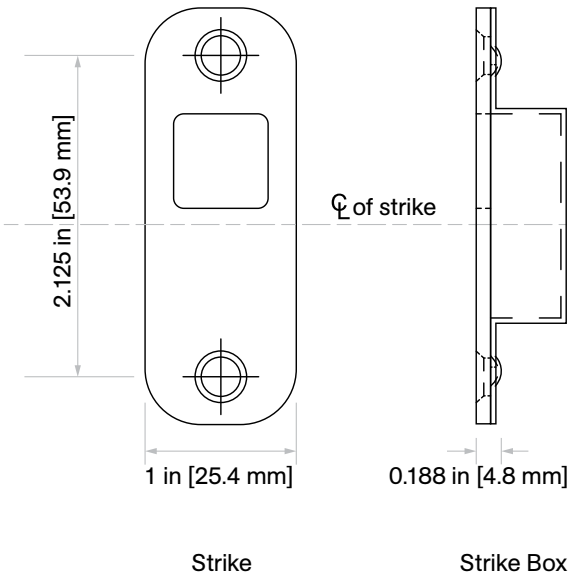

Door Prep Details

For 1 3/8 in [34.9 mm] to 1 3/4 in [44.5 mm] thick doors

Not to scale

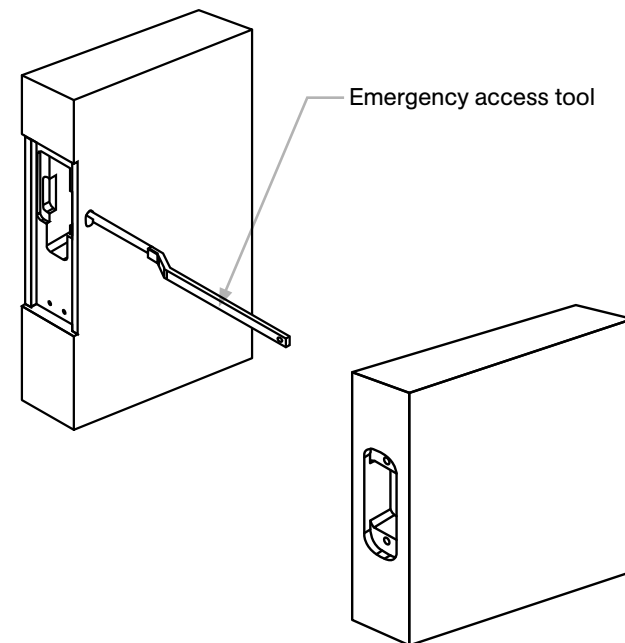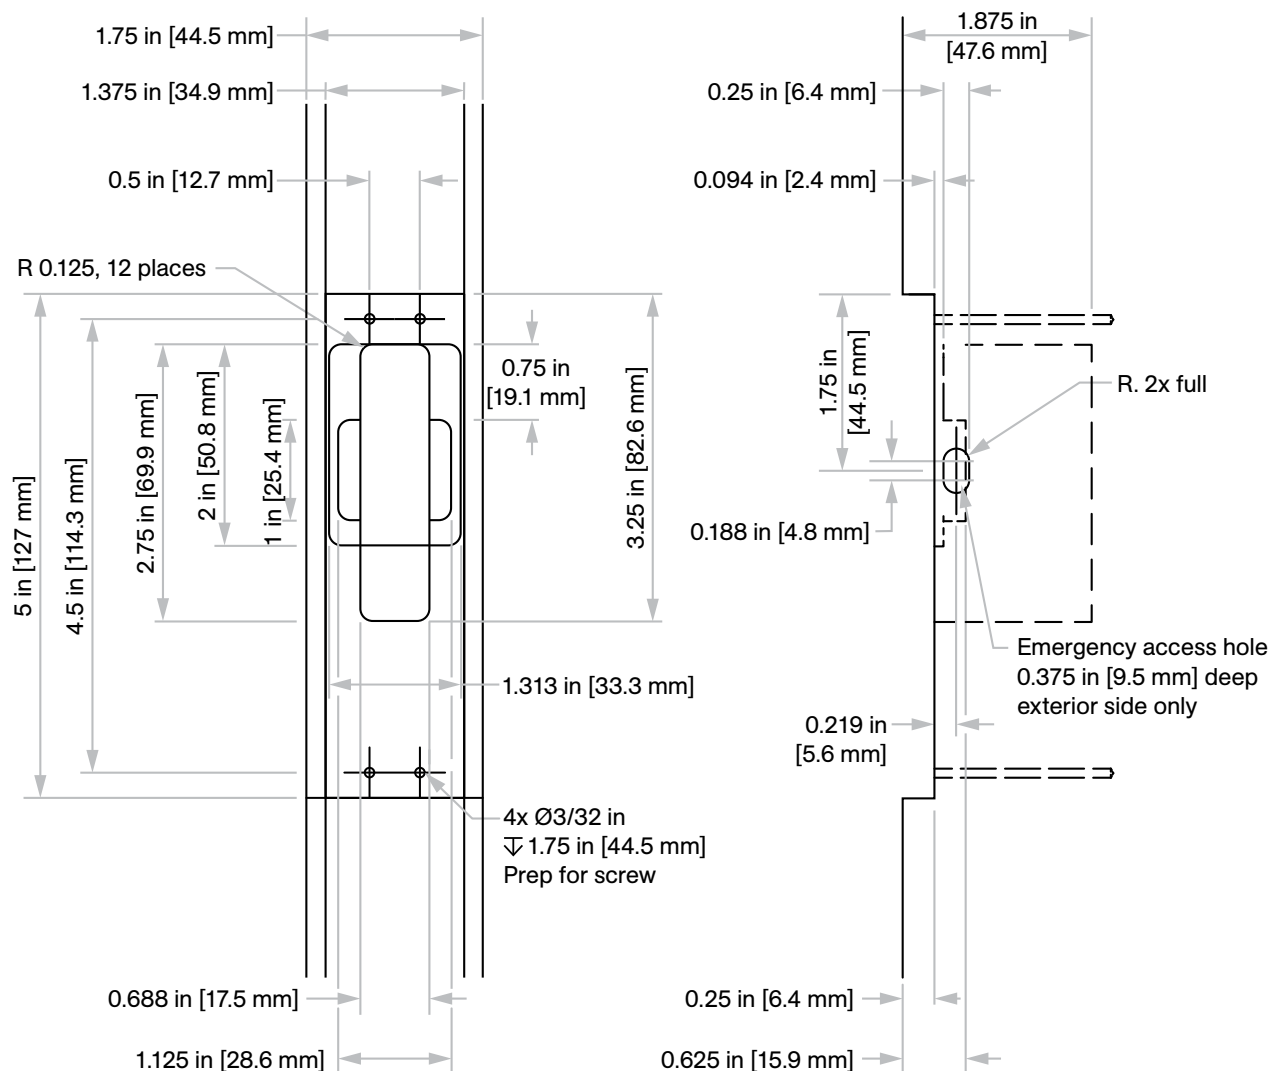

Prep for Strike in Wood Frame

