

C-50P Pocket Passage Pull

Barrier-Free (ADA Compliant)

Installation Instructions

Suitable for 4.75 in [120.6 mm] - 10 in [254 mm] frame thickness - see chart A

Door must be aligned to the middle of jamb/pocket

Not to scale

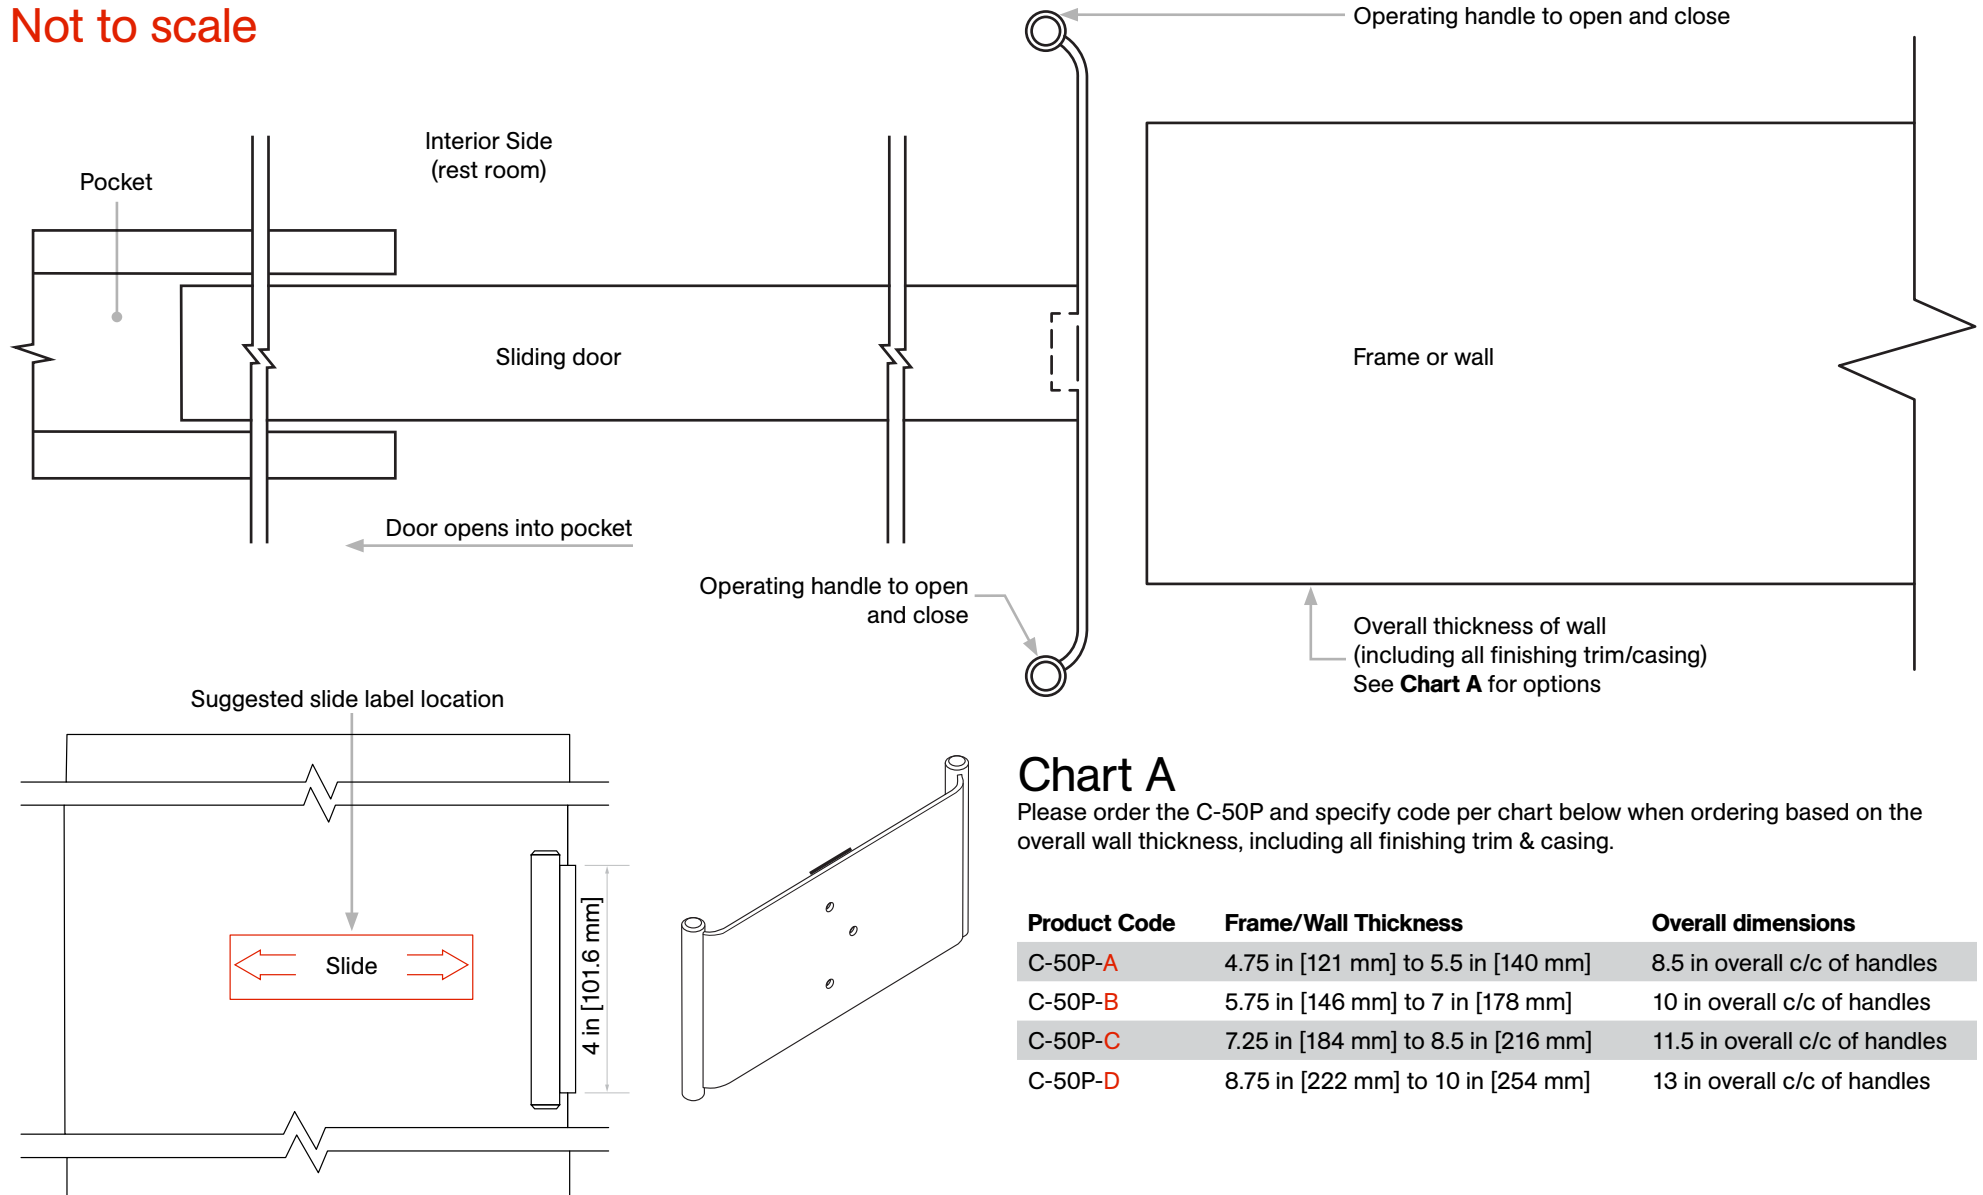


Chart A


Please order the C-50P and specify code per chart below when ordering based on the overall wall thickness, including all finishing trim & casing.

Product Code	Frame/Wall Thickness	Overall dimensions
C-50P-A	4.75 in [121 mm] to 5.5 in [140 mm]	8.5 in overall c/c of handles
C-50P-B	5.75 in [146 mm] to 7 in [178 mm]	10 in overall c/c of handles
C-50P-C	7.25 in [184 mm] to 8.5 in [216 mm]	11.5 in overall c/c of handles
C-50P-D	8.75 in [222 mm] to 10 in [254 mm]	13 in overall c/c of handles

Door Prep Detail

Suitable for 4.75 in [120.6 mm] - 10 in [254 mm] frame thickness - see chart A
 Door must be aligned to the middle of jamb/pocket

Not to scale

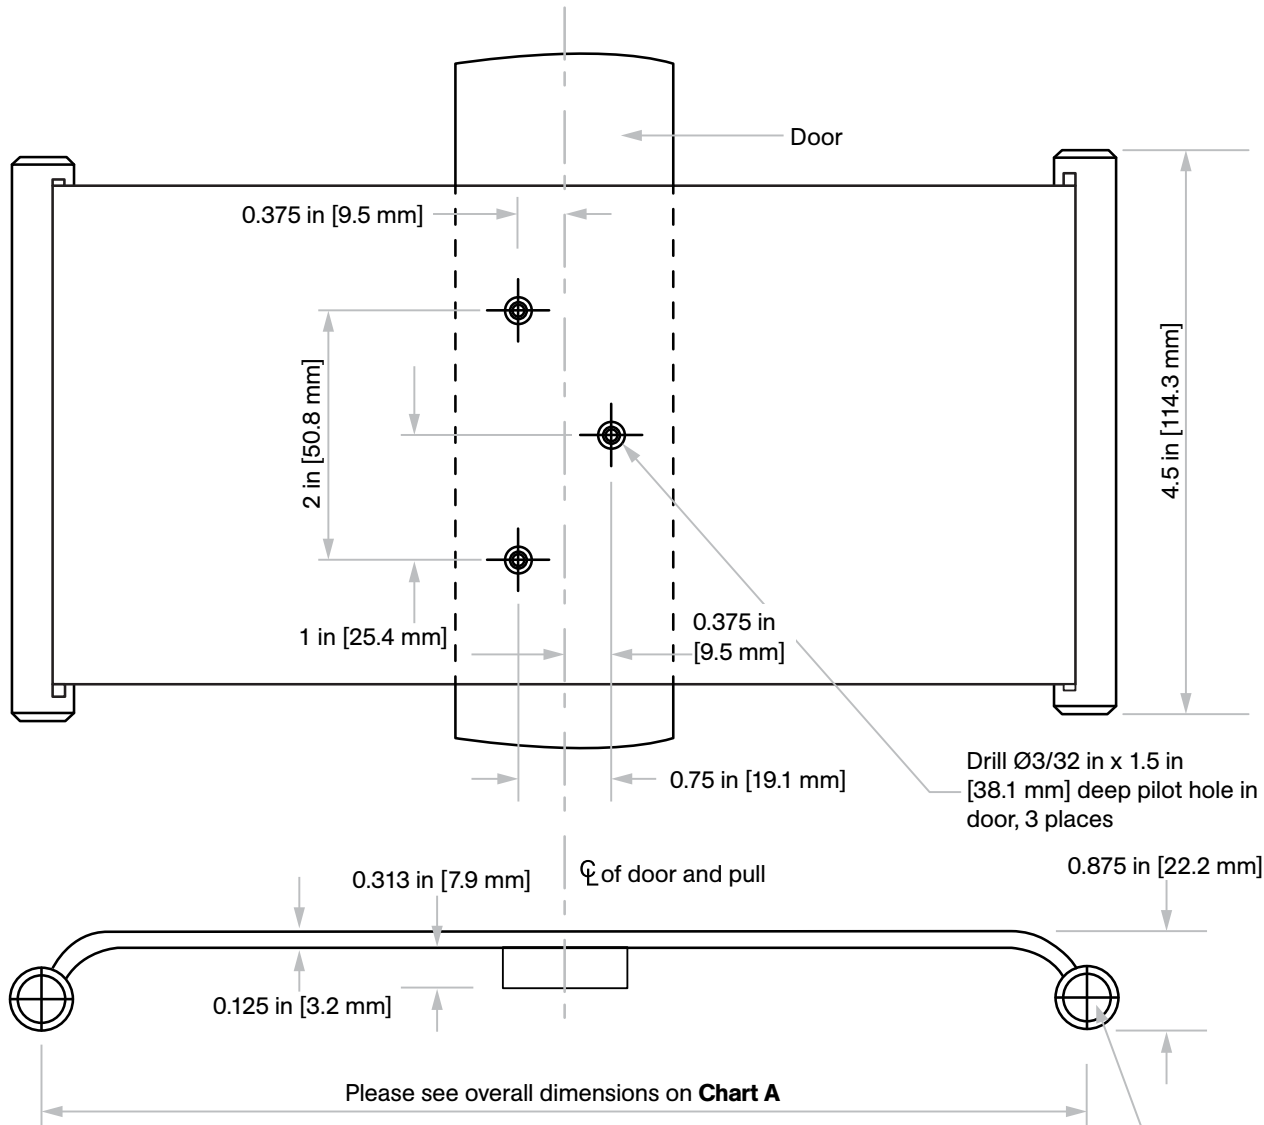

1. Prepare door as shown above.
 2. Attach pull to door using three (3) #6 x 1 5/8" FH PH WS (supplied)
 3. Insert three (3) plug/mute in screw holes to conceal screws and provide impact bumper.
 4. Install side decals as shown (see page 1)
- Center pull on door centerline (for 1 3/8 in [34.9 mm] and thicker wood doors)
 Height on doors is subject to installer discretion

Black derlin grips
 Ø1/2 in
 2 places

Please see overall dimensions on **Chart A**