

C-50P Door Pull

Barrier-Free (ADA Compliant)

Installation Instructions

Suitable for 4.5 in [114.3 mm] - 10 in [254 mm] frame thickness - see chart A
 Door must be aligned to the middle of jamb/pocket

Not to scale

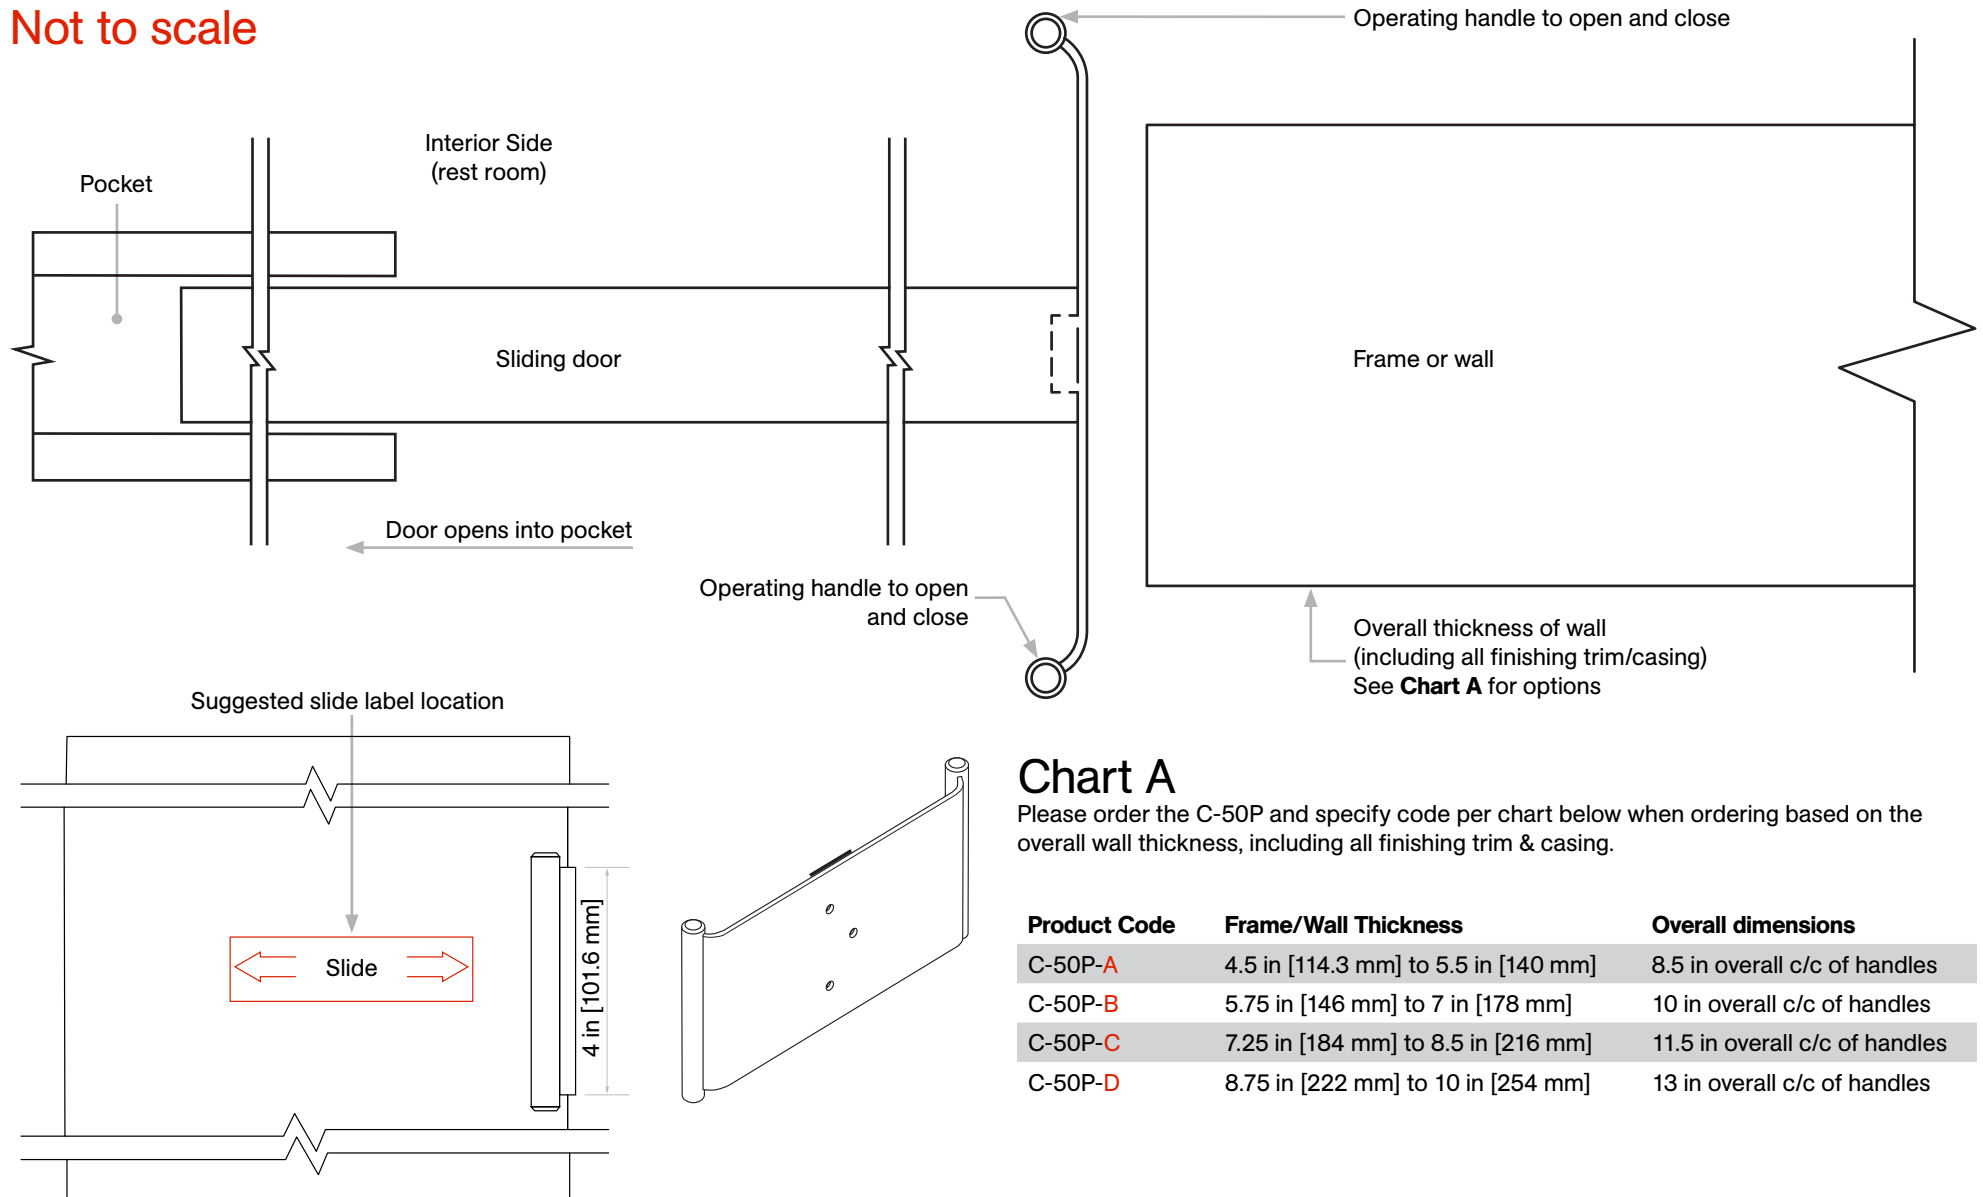


Chart A


Please order the C-50P and specify code per chart below when ordering based on the overall wall thickness, including all finishing trim & casing.

| Product Code | Frame/Wall Thickness | Overall dimensions |
|--------------|--------------------------------------|--------------------------------|
| C-50P-A | 4.5 in [114.3 mm] to 5.5 in [140 mm] | 8.5 in overall c/c of handles |
| C-50P-B | 5.75 in [146 mm] to 7 in [178 mm] | 10 in overall c/c of handles |
| C-50P-C | 7.25 in [184 mm] to 8.5 in [216 mm] | 11.5 in overall c/c of handles |
| C-50P-D | 8.75 in [222 mm] to 10 in [254 mm] | 13 in overall c/c of handles |

Door Prep Details

Suitable for 4.5 in [114.3 mm] - 10 in [254 mm] frame - see chart A
 Door must be aligned to the middle of jamb/pocket

Not to scale

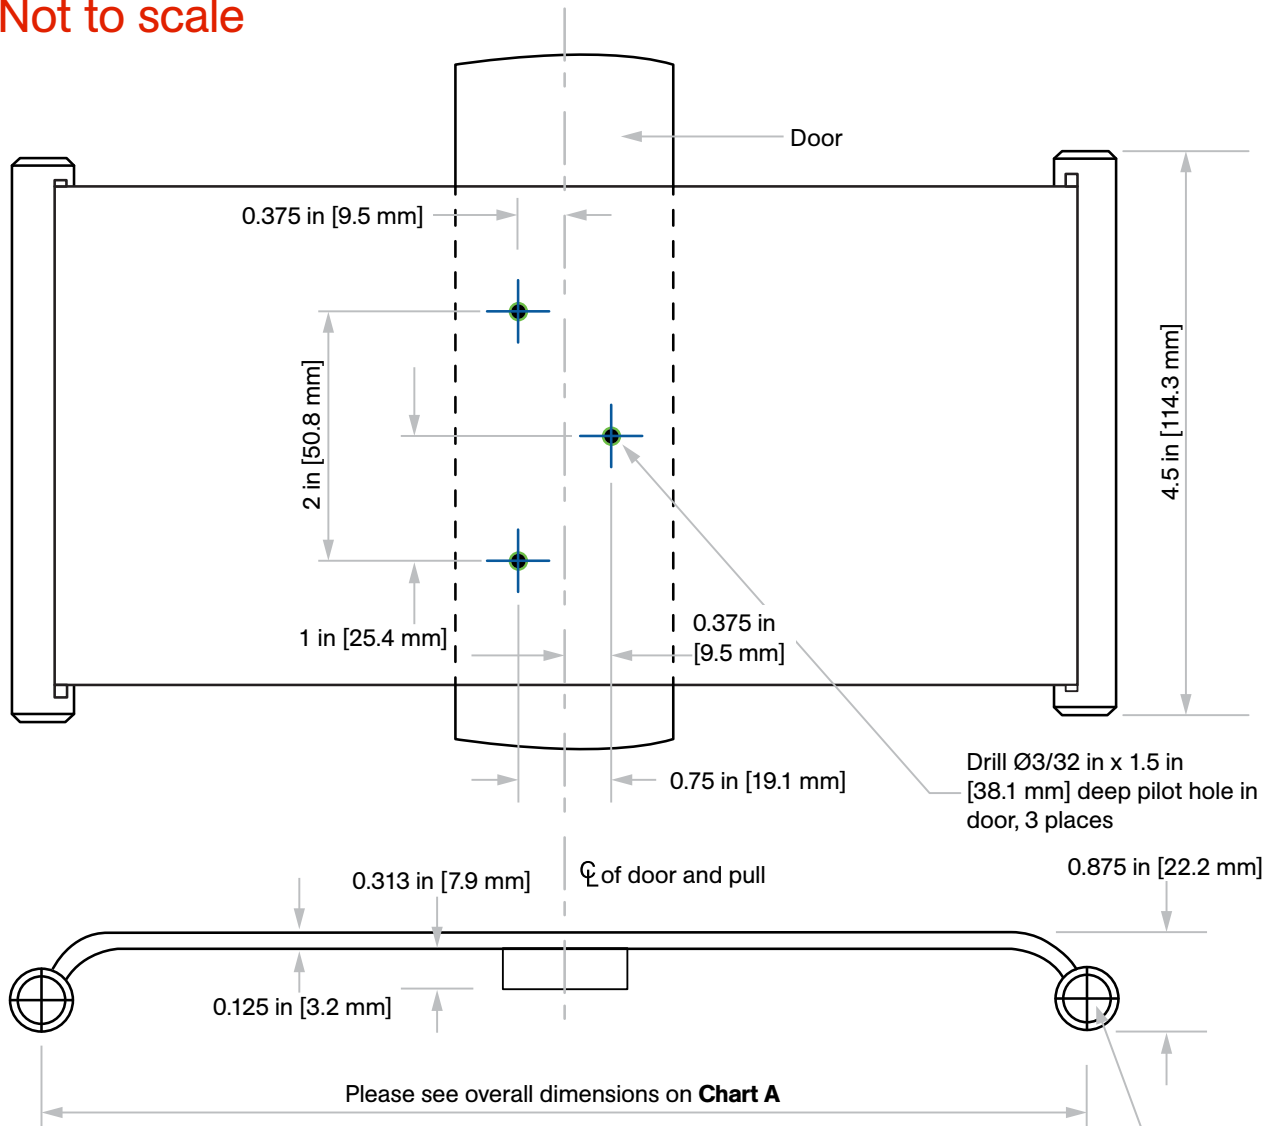

0.5 in
[12.7 mm]

1 in [25.4 mm]

4 in [101.6 mm]

0.125 in [3.2 mm]

1. Prepare door as shown above.
 2. Attach pull to door using three #6 x 1 5/8" Flat Head PH WS, supplied
 3. Insert three plug/mute in screw holes to conceal screws and provide impact bumper.
 4. Install slide decals as shown, see page 1
- Center pull on door centerline for 1 3/8 in [34.9 mm] and thicker doors.
 Height on doors is subject to installer discretion

Black derlin grips
 Ø1/2 in
 2 places

Please see overall dimensions on **Chart A**