

C-61 Edge Pull Only

Installation Instructions



Suitable for 1 3/4 in [44.4 mm] or 1 3/8 in [34.9 mm] thick doors.

Spring Loaded Edge Pull

Can be used with a privacy set.

Not to scale

KNC
Door Locks & Pulls

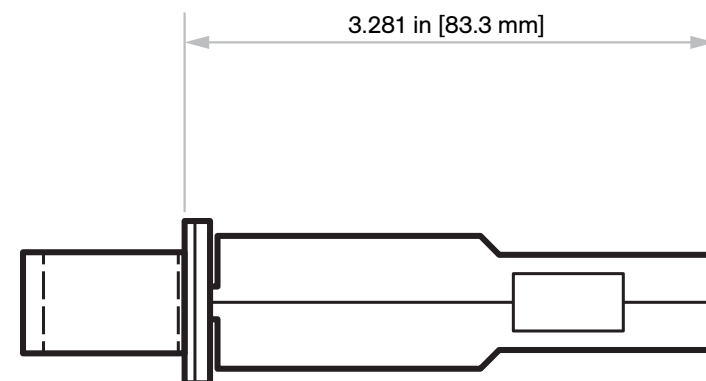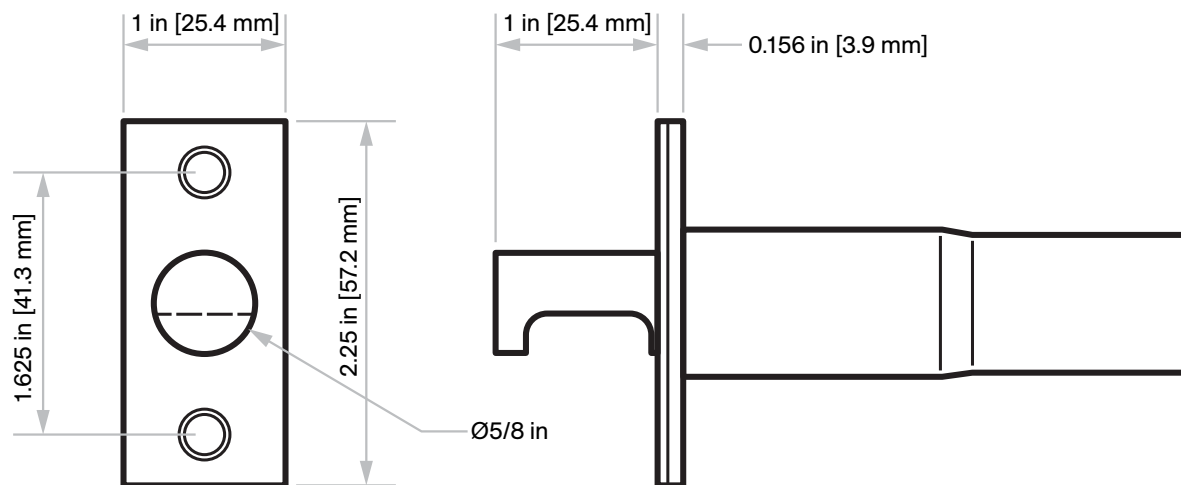


Door Prep Template

Responsibility:

Door and frame manufacturers are responsible for providing adequate construction or reinforcement for proper installation of hardware shown.

Not to scale

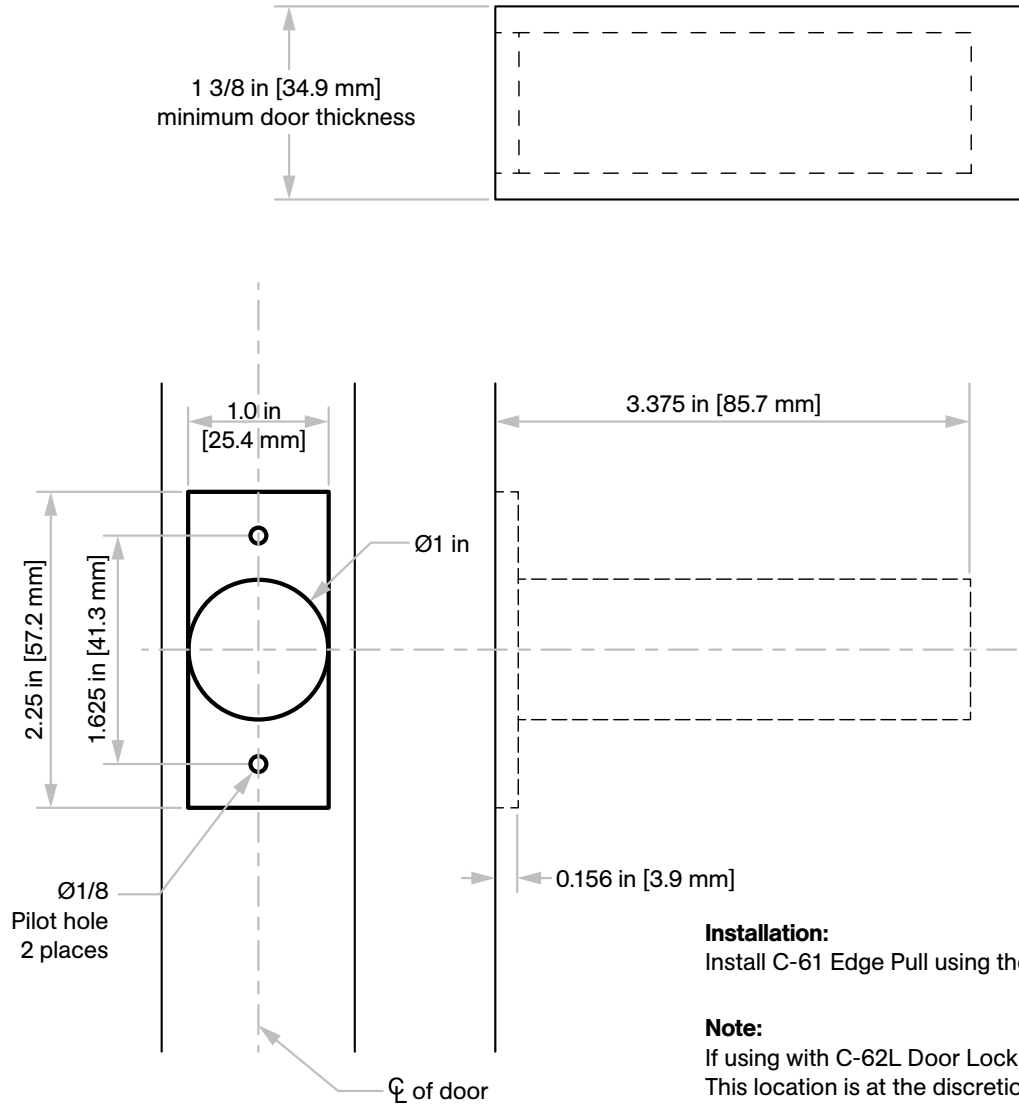

Installation:

Install C-61 Edge Pull using the (2) #8 screws provided.

Note:

If using with C-62L Door Lock, typically the C-61 Edge Pull is mounted below the C-62L. This location is at the discretion of the end user.

C-62L-RET Lockset


c/w C-60RE & C-60RT Round Flush Pulls

Installation Instructions

Not to scale


Suitable for 1 3/8 in [34.9 mm]* or 1 3/4 in [44.4 mm] thick doors

For other door thicknesses, please contact Customer Service. *To use the C-60RE & C60RT flush pulls on a 1 3/8 in [34.9 mm] thick door, the thru-bolted post on each flush pull are supplied with a notch that allows for shortening its length for 1 3/8 in [34.9 mm] thick doors. Twist off or cut with hack saw.

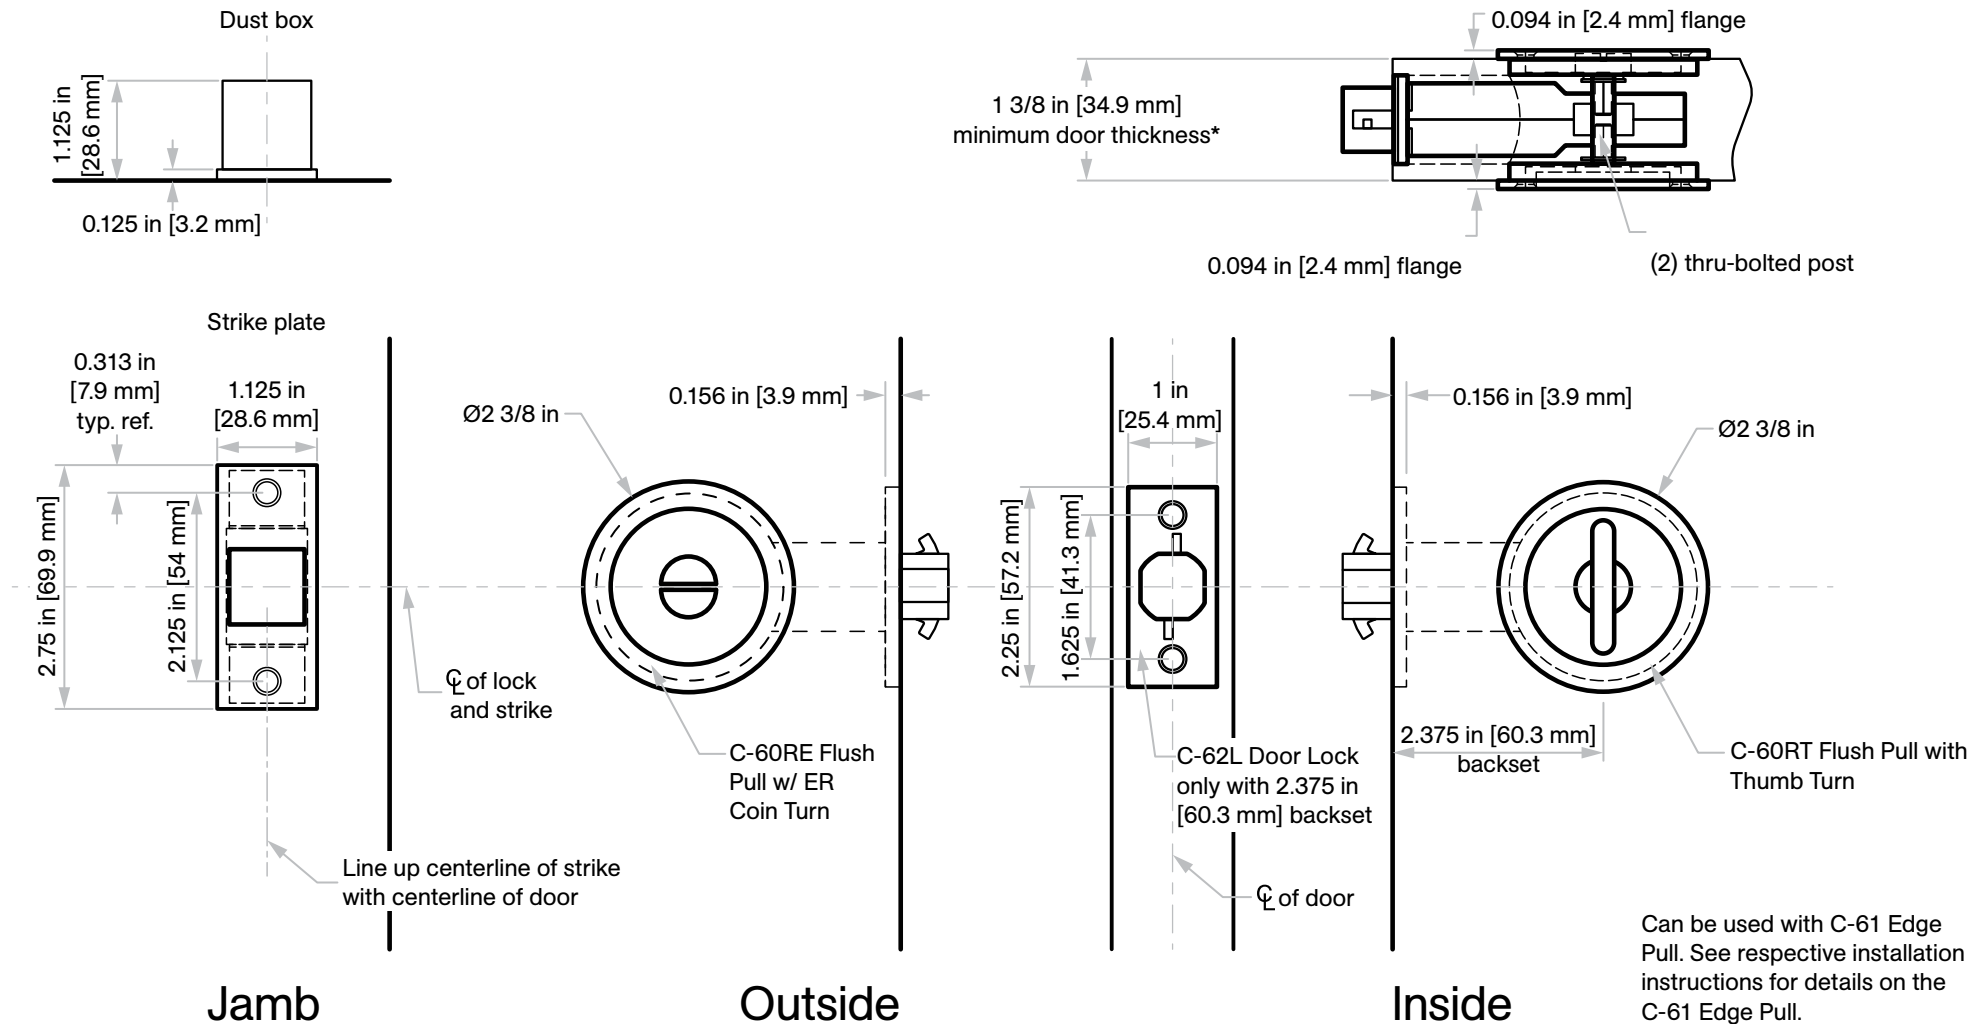

Door Prep Template

Not to scale

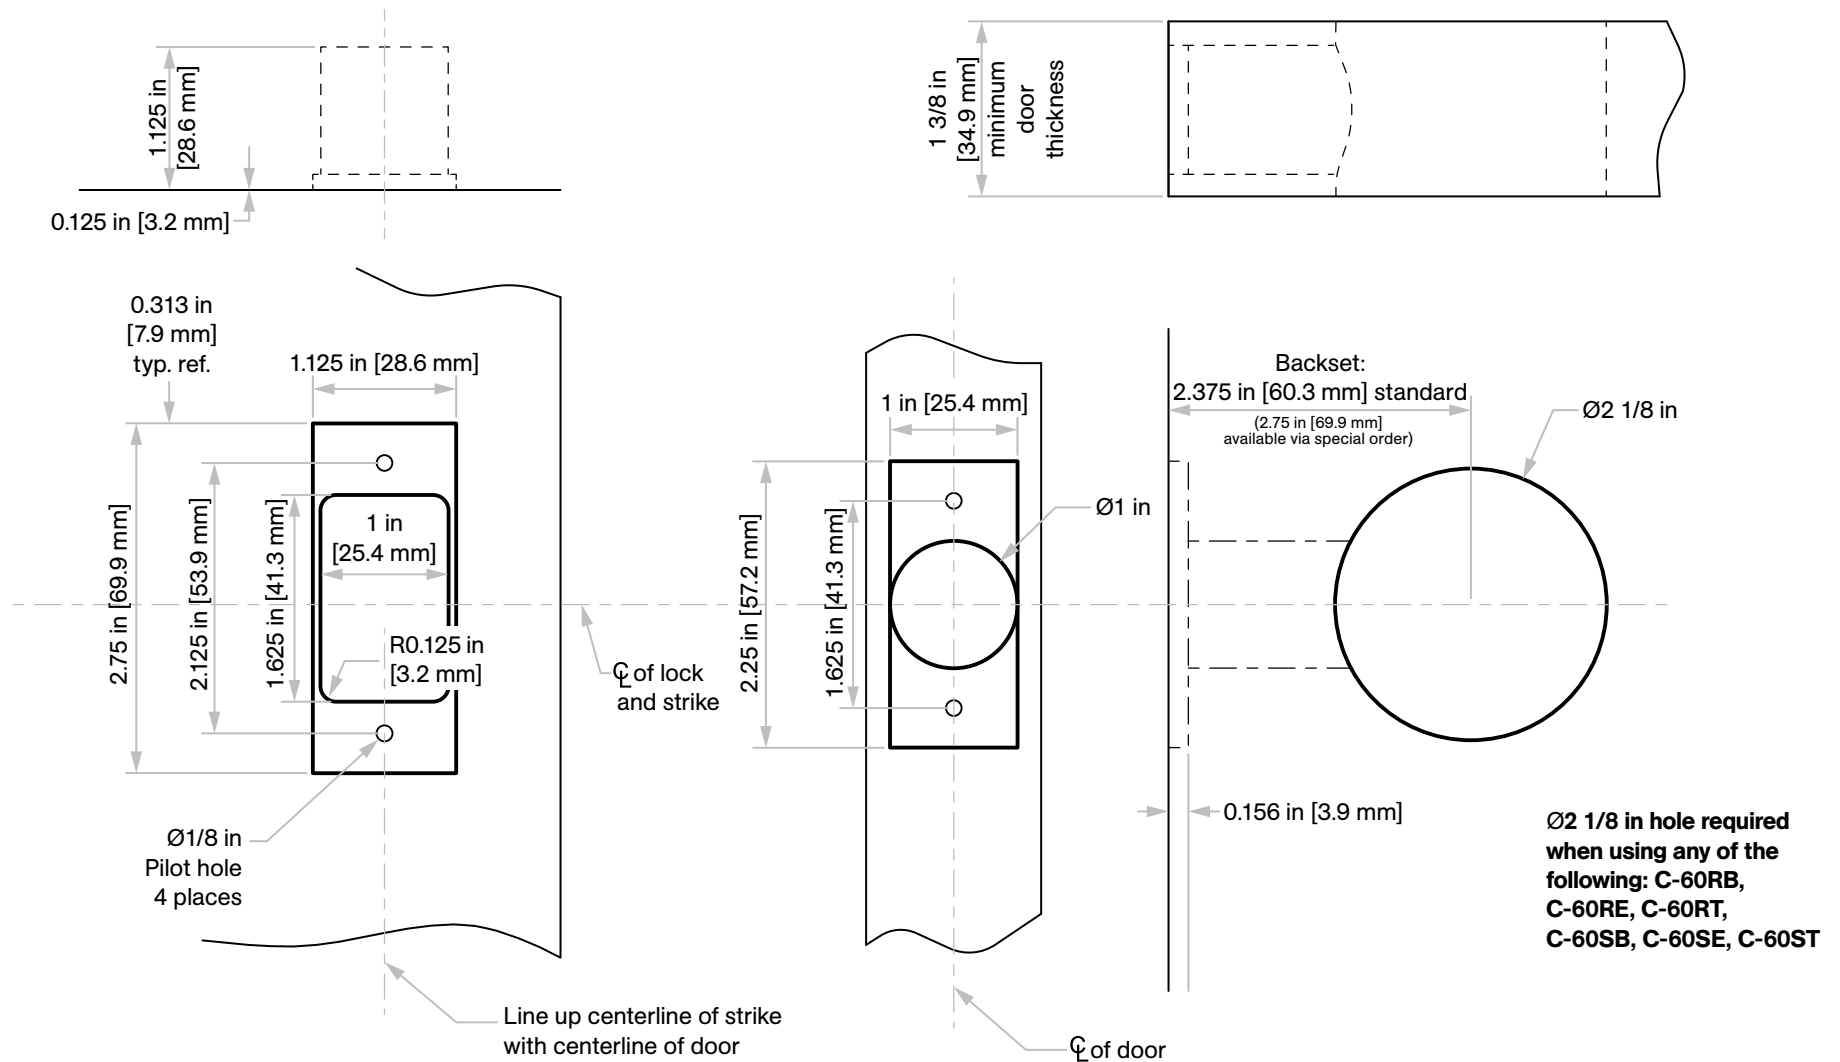

Responsibility:

Door and frame manufacturers are responsible for providing adequate construction or reinforcement for proper installation of hardware shown.

Installation:

Install C-62L Lock & Strike plate, and C-60RE & C-60RT using the (12) #8 screws provided.