

# C-61-BB Passage Set



Installation Instructions

**KNC**  
Door Locks & Pulls

## Specifications


**Door Thickness:** 1 3/8 in [34.9 mm] to 2 1/4 in [57.2 mm]

**Not to scale**

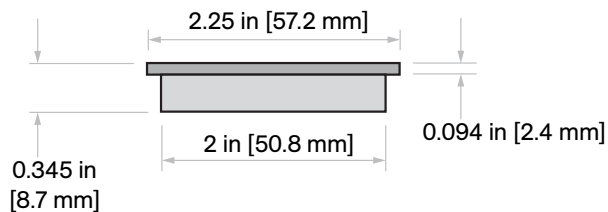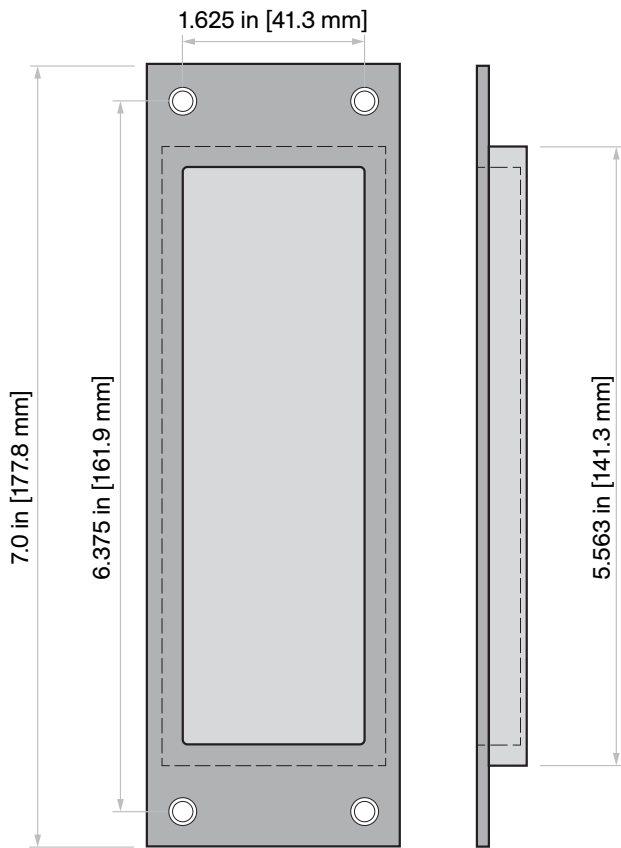

## Included Components

1x

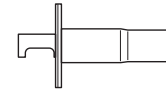


**C-61**  
Edge Pull Body

2x




**C-90B**  
Flush Pull

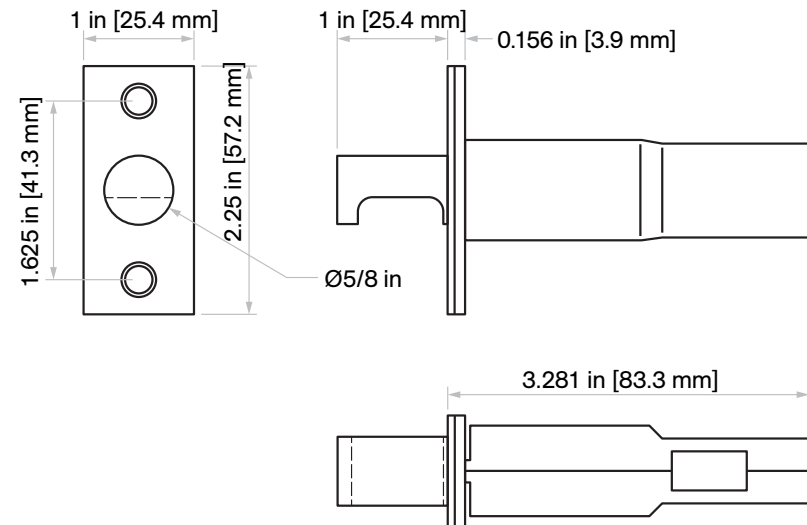

# Door Prep Template

Horizontal and vertical spacing of the flush pulls is up to the end user. However, we do suggest to line up the backset with the other locks on your project.


**C-90B**

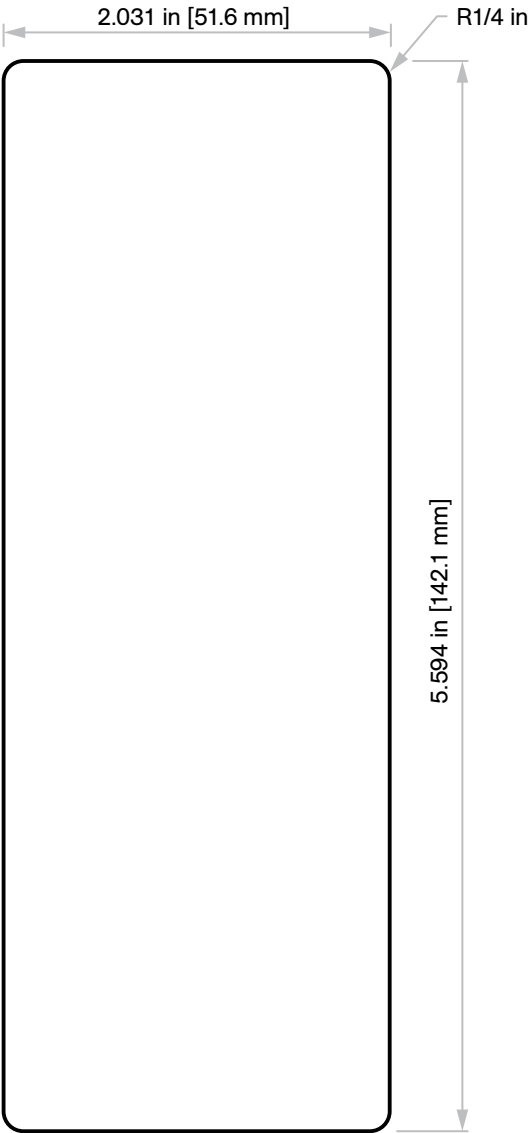

For example: 2 in [50.8 mm], 2.5 in [63.5 mm], 2.75 in [69.8 mm], 5 in [127 mm], and 6 in [152.4 mm]

**Responsibility**  
Door and frame manufacturers are responsible for providing adequate construction or reinforcement for proper installation of hardware shown.

**C-61**

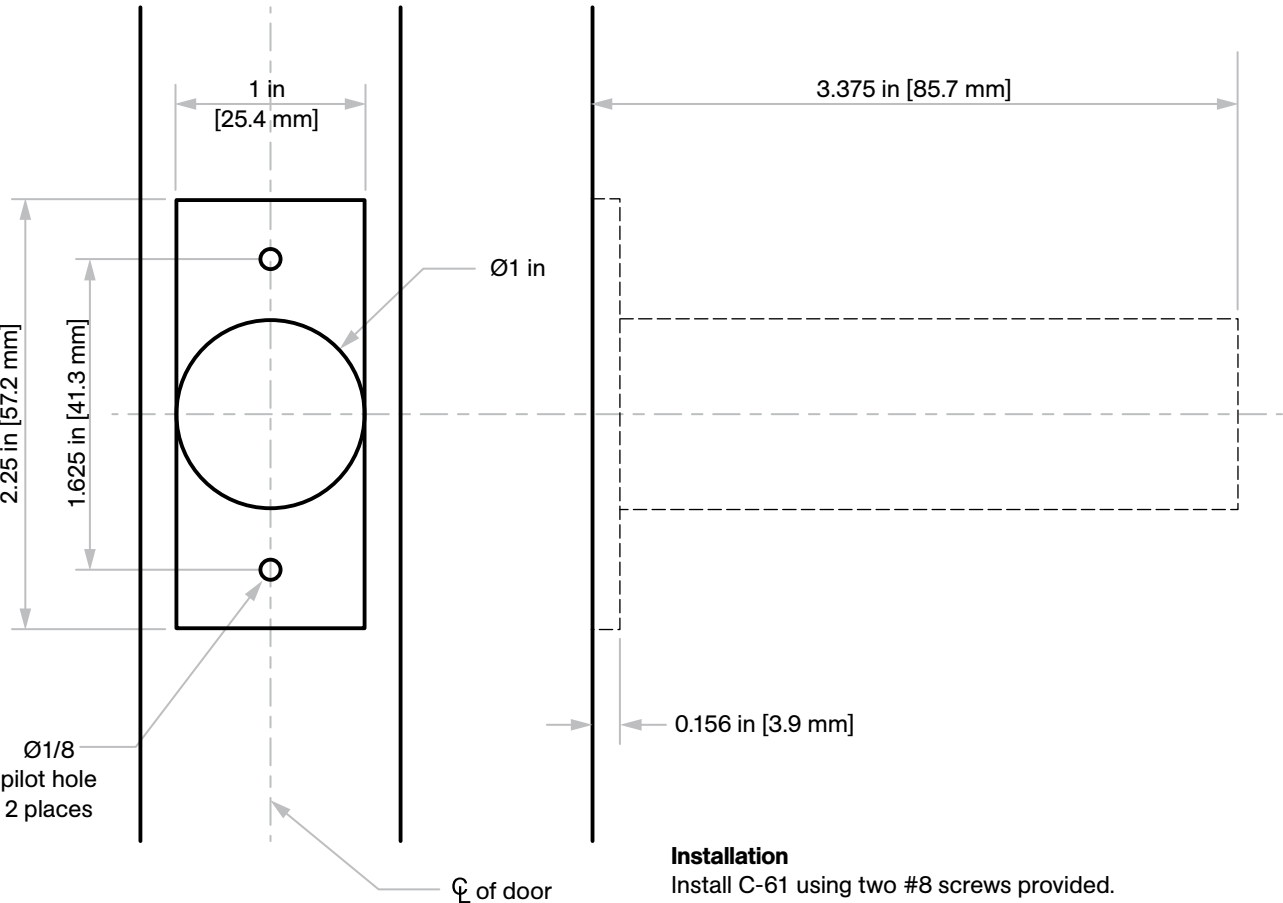

**Installation**  
Install C-61 using two #8 screws provided.