


C-61-SBB Passage Set

Installation Instructions

Specifications


Door Thickness: 1 3/8 in [34.9 mm] to 2 1/4 in [57.2 mm]

Not to scale

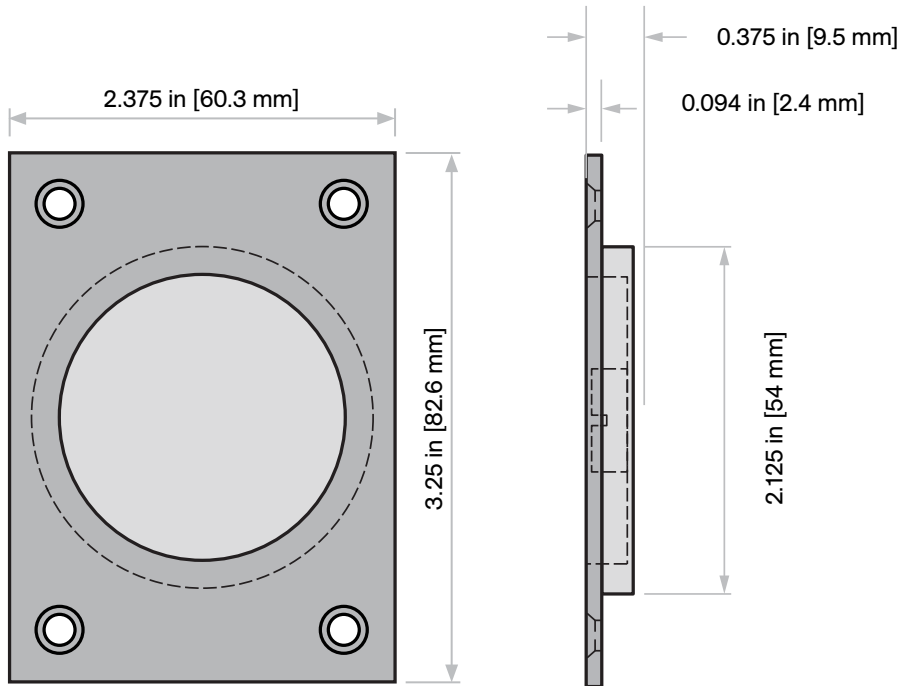


Included Components

1x




C-61
Edge Pull Body

2x



C-60SB
Square Flush Pull

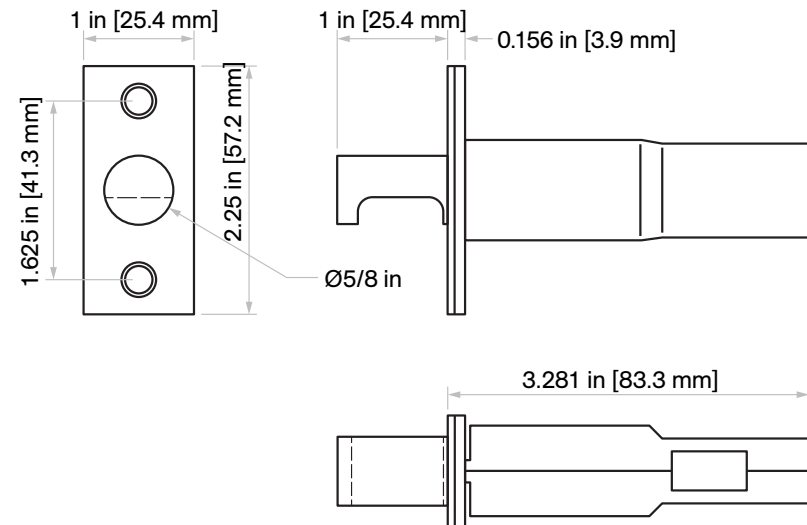


Door Prep Template

Horizontal and vertical spacing of the flush pulls is up to the end user. However, we do suggest to line up the backset with the other locks on your project.


For example: 2 in [50.8 mm], 2.5 in [63.5 mm], 2.75 in [69.8 mm], 5 in [127 mm], and 6 in [152.4 mm]

Responsibility
Door and frame manufacturers are responsible for providing adequate construction or reinforcement for proper installation of hardware shown.

C-60SB

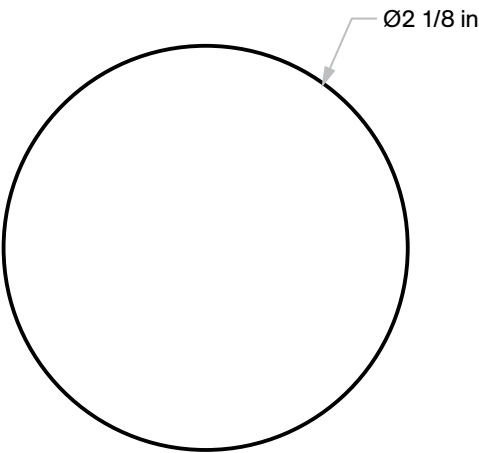

C-61

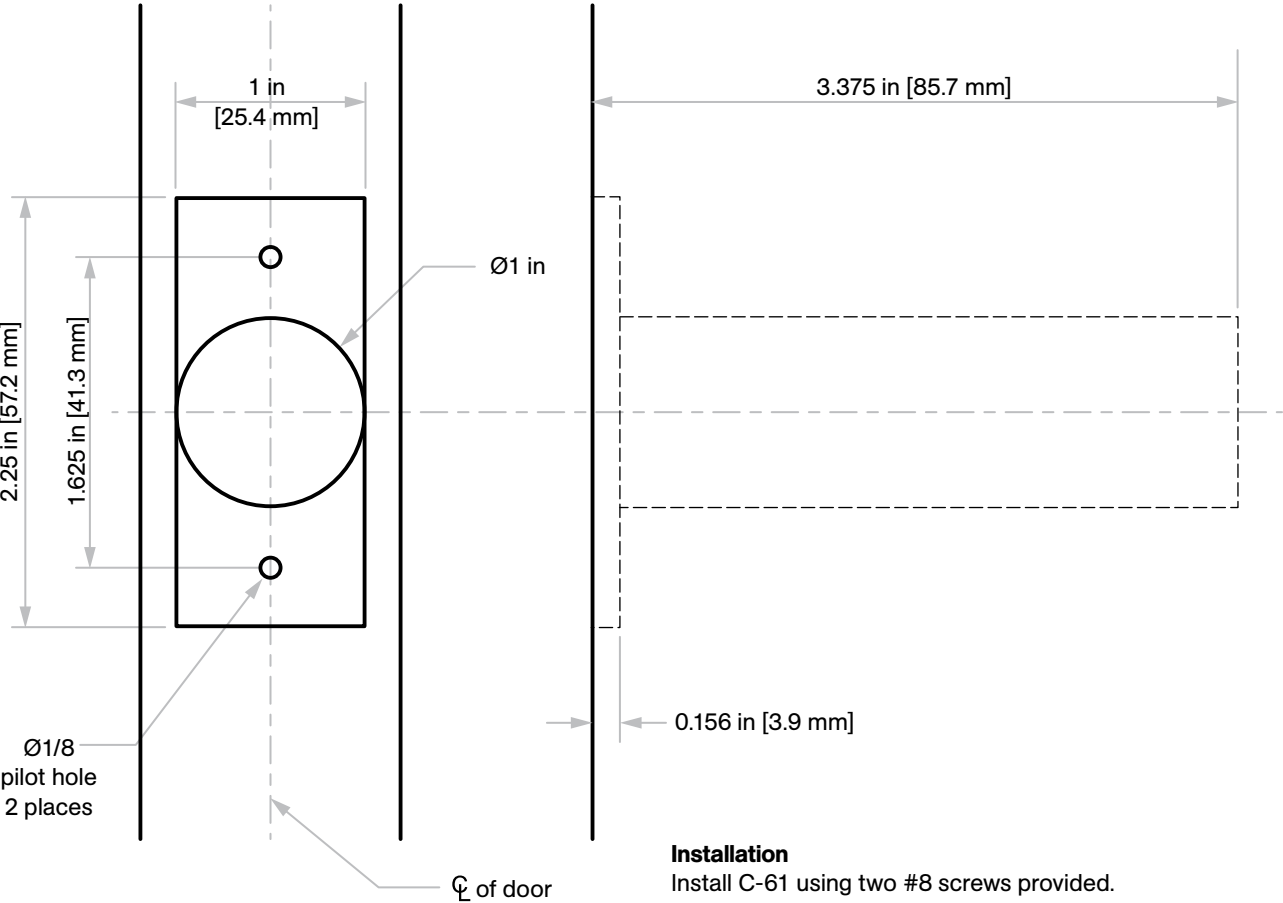

Installation
Install C-61 using two #8 screws provided.