

Installation Instructions

Case: Heavy gauge wrought

Armor Front: Brass, bronze, stainless

Dead Bolt: 1/2 in [12.7 mm] thick x 5/8 in [15.9 mm] high x 1 in [25.4 mm] throw

Pull: 1/4 in [6.4 mm] thick x 1 1/2 in [38.1 mm] high x 7/8 in [22.2 mm] swingout

Thumb Turn Hub: 3/16 in [4.8 mm] on the diamond

Cam: See details on right



Door Thickness: 1 3/8 in [34.9 mm] to 1 3/4 in [44.5 mm]

Dimensions

$W = 1.000$ in [25.4 mm]


$$X = 0.232 \text{ in } [5.9 \text{ mm}]$$
$$Y = 0.729 \text{ in } [18.5 \text{ mm}]$$
$$Z = 0.694 \text{ in } [17.6 \text{ mm}]$$

Not to scale

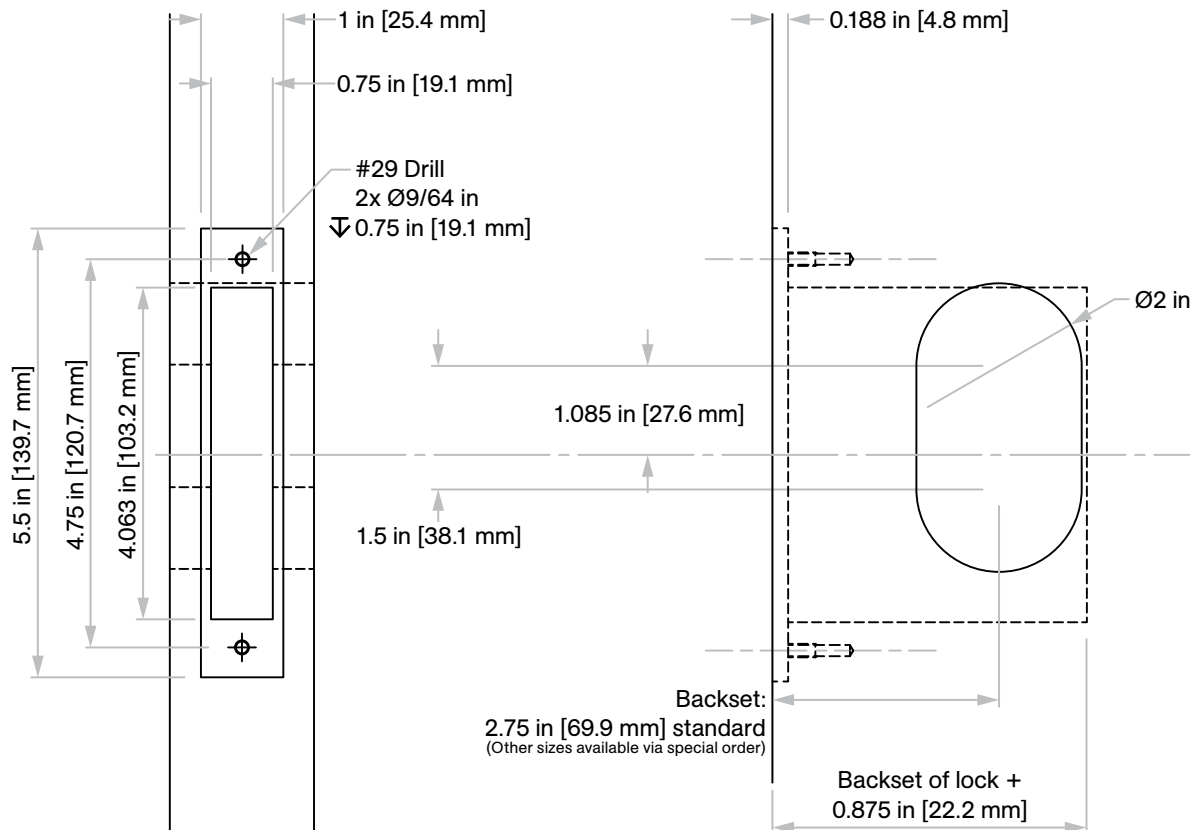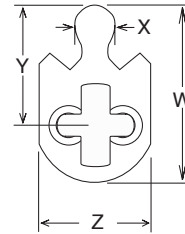


This diagram illustrates the connection of the door lock assembly to the door frame. It shows a vertical lock assembly on the left, which is mounted to a horizontal door frame on the right. The lock assembly includes a handle and a locking mechanism. The door frame has several mounting points, including a large circular hole and several smaller holes, which are used to secure the lock assembly. The diagram is labeled with '1' and '2' to indicate specific components or steps in the assembly process.


C-80L
Lock and
Edge Pull
Body



C-80C
Cylinder
Flush Pul




C-80T
Thumb Turn
Flush Pull



Cylinder

1 in Diameter hole
x 1 in Depth. 5-PIN
Schlage "C" Key
Way (will sit flush
with door)

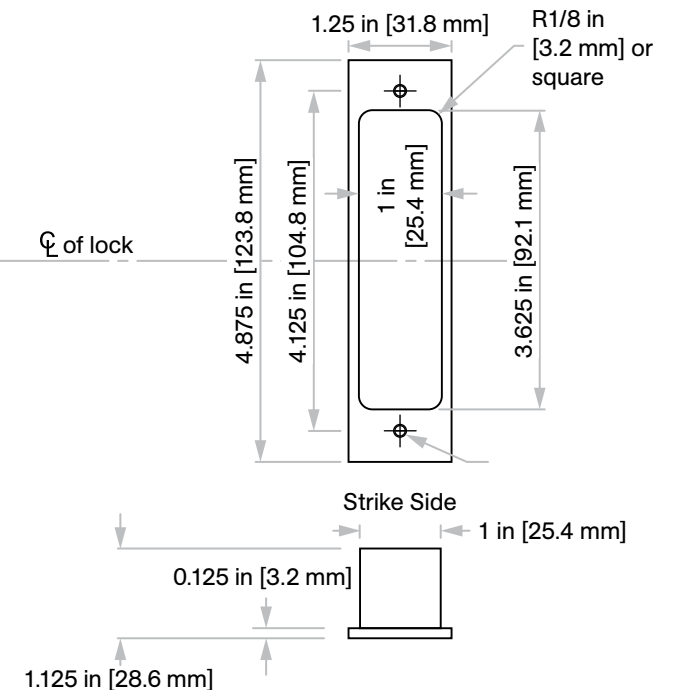

KN Crowder

1220 Burloak Drive, Burlington, Ontario, Canada, L7L 6B3

T. 1-866-999-1562 customerservice@kncrowder.com kncrowder.com

© 2020-2024 K.N. Crowder Mfg. Inc. All Rights Reserved.