



C-90AS Adjustable Strike

Installation Instructions

Included Components

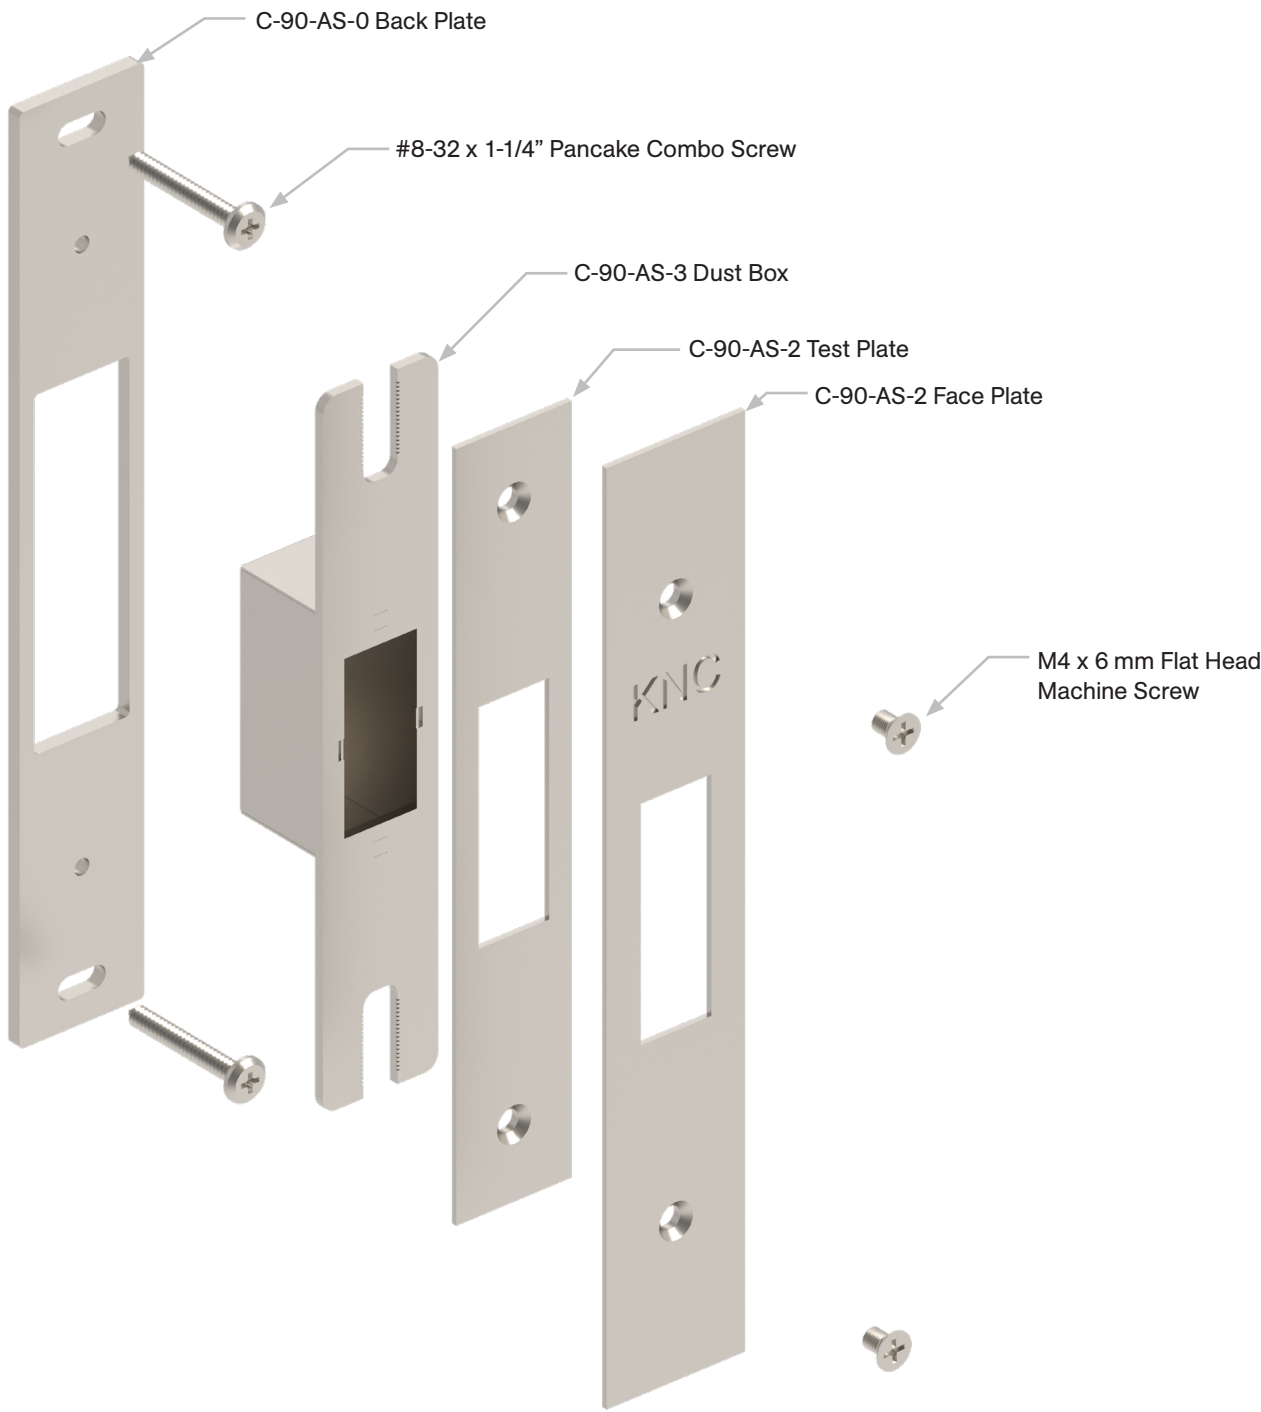

Strike Prep Template

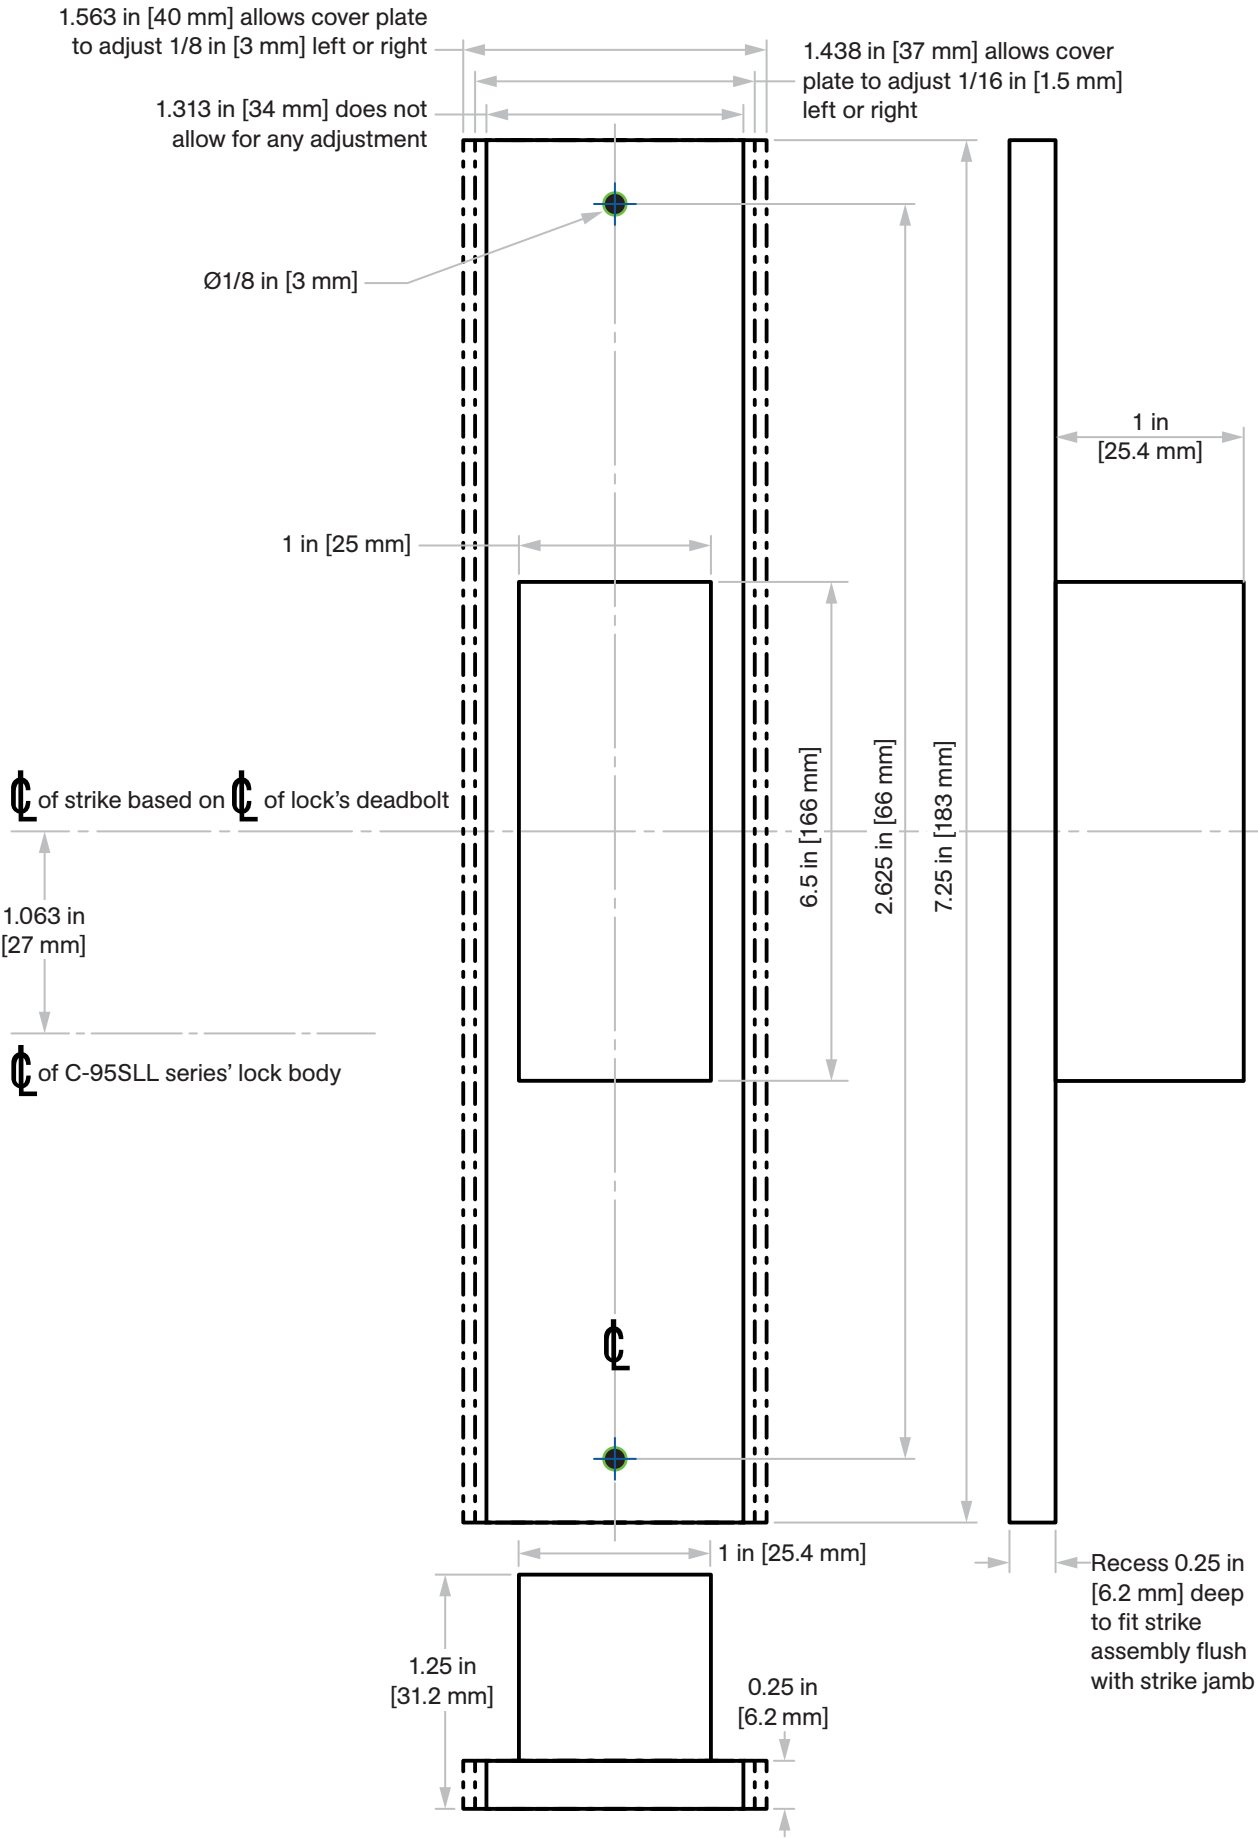


Installation Instructions


Step #1:
Once jamb is prepped for strike, loosely fasten Back Plate to jamb using two (2) #8-32 x 1-1/4" Pancake Combo Screws.

Note: Pre-drill holes through strike


- Aluminum: Ø5/32 in [4 mm]
- Wood: Ø9/64 in [3.6 mm]

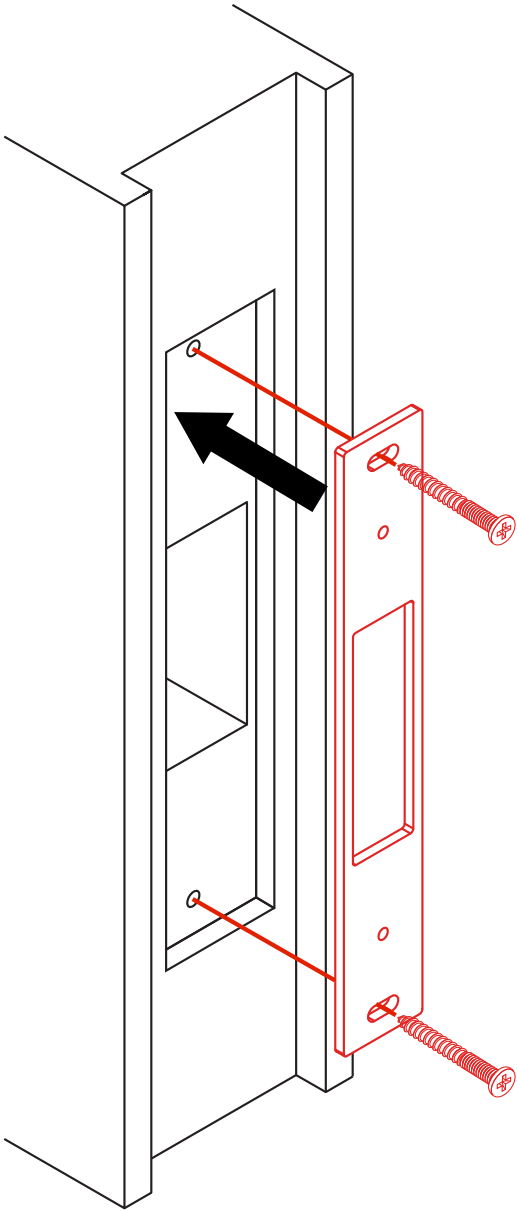


Step #2:
Insert Dust Box.

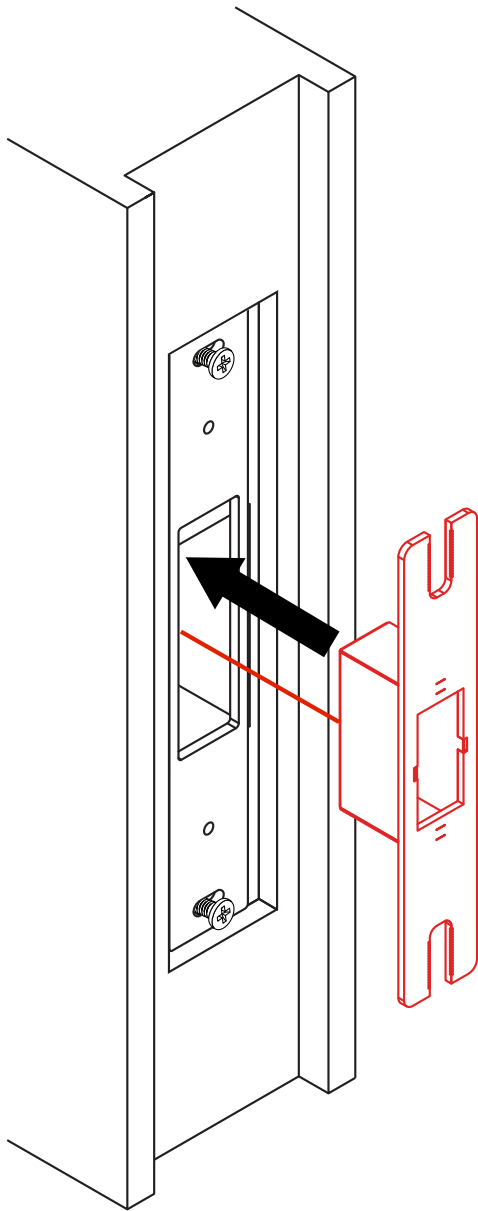


Step #3:
Loosely fasten Test Plate using two (2) M4 x 6 mm Phillips Head Machine Screws through top and bottom holes.

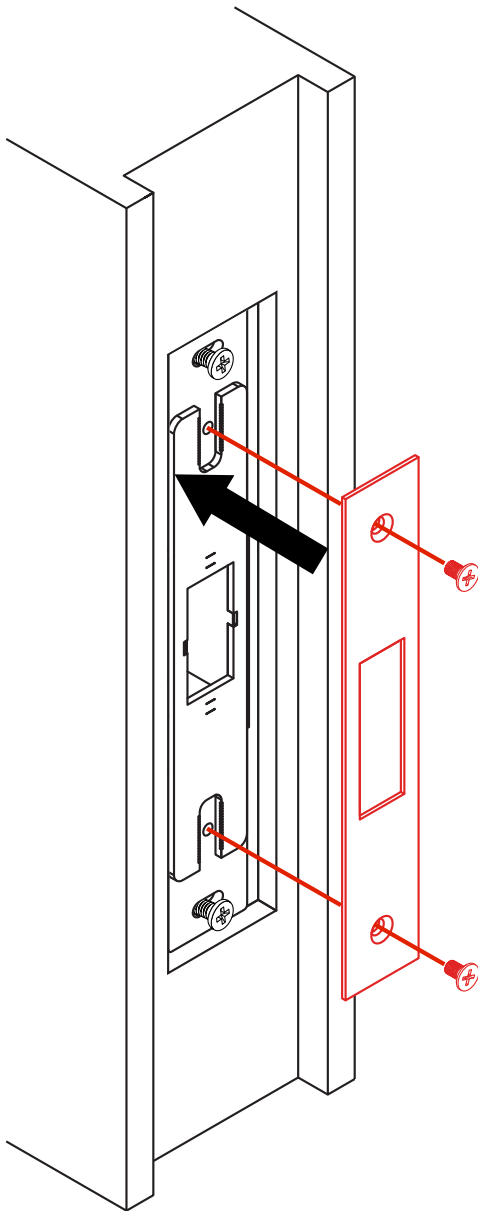

Step #4:
Make minor adjustments accordingly. Back Plate shifts horizontally ①, and Dust Box shifts vertically ②.

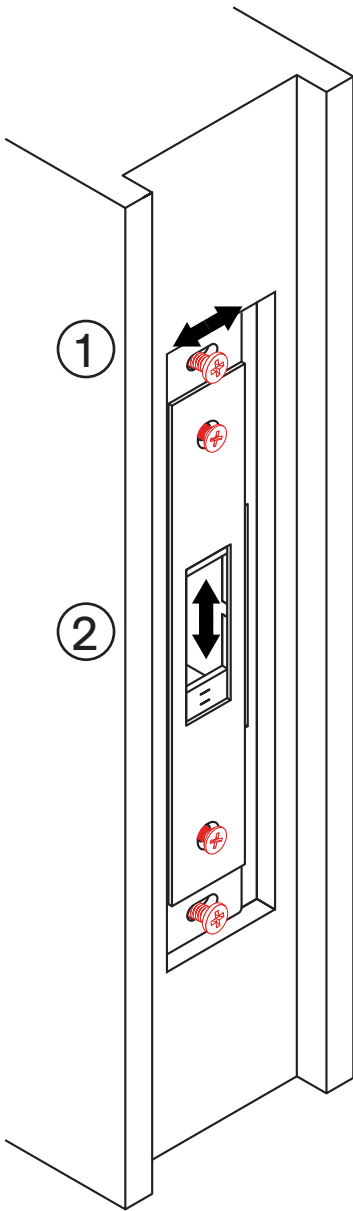

Step #5:
Once position is finalized, tightly fasten screws through Back Plate and unfasten Test Plate screws to remove Test Plate.

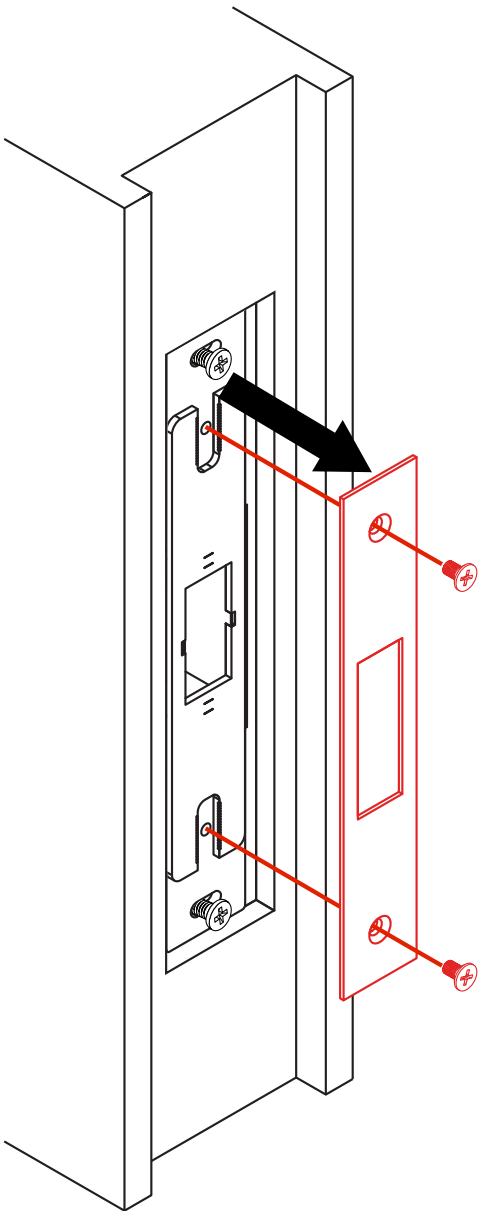

Step #6:
Fasten Face Plate using two (2) M4 x 6 mm Screws. Adjust Dust Box and tightly fasten.

