

# C-91 Edge Pull

Installation Instructions

## Specifications


**Case:** Heavy gauge wrought

**Armor Front:** Brass, bronze, stainless




**Pull:** 1/2 in [12.7 mm] thick x 2 in [50.8 mm] high x 1 1/4 in [31.8 mm] throw

**Door Thickness:** 1 3/8 in [34.9 mm] minimum

**Not to scale**

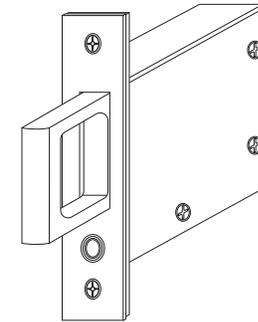


**C-91**  
Edge Pull Body

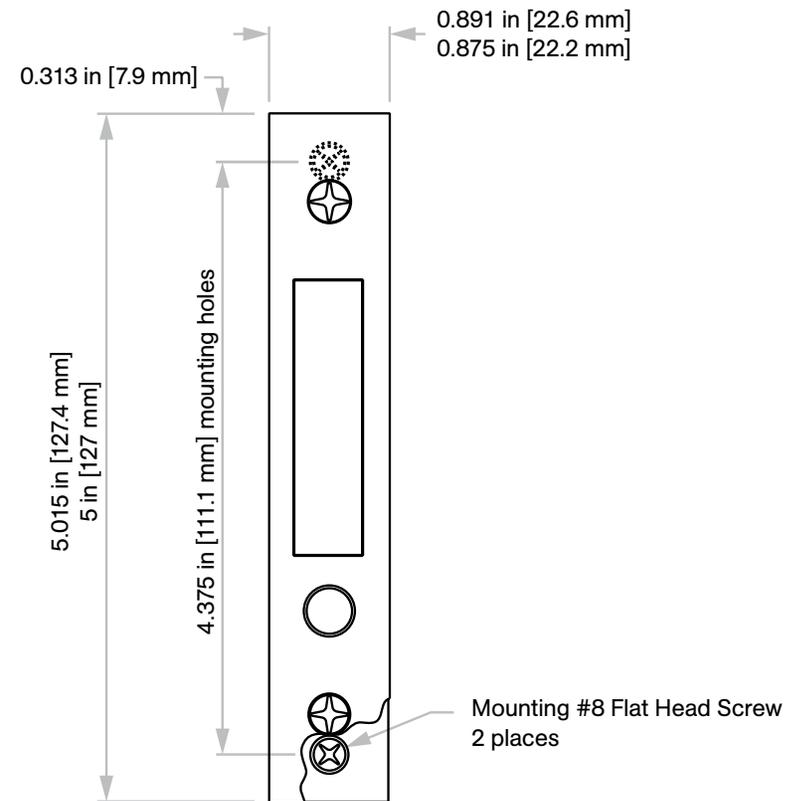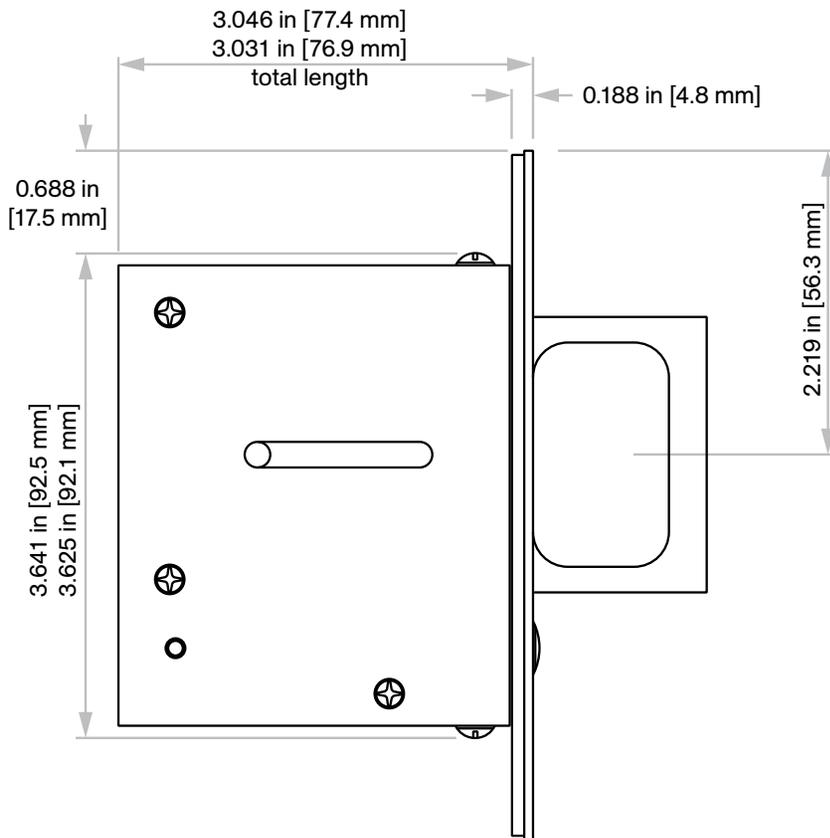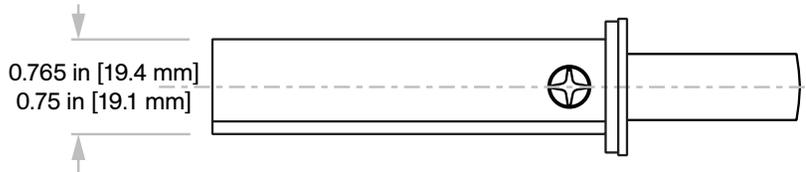


# Door Prep Template

Not to scale

Inside of Door

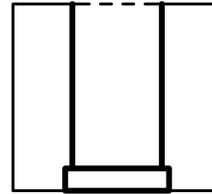

Outside of Door

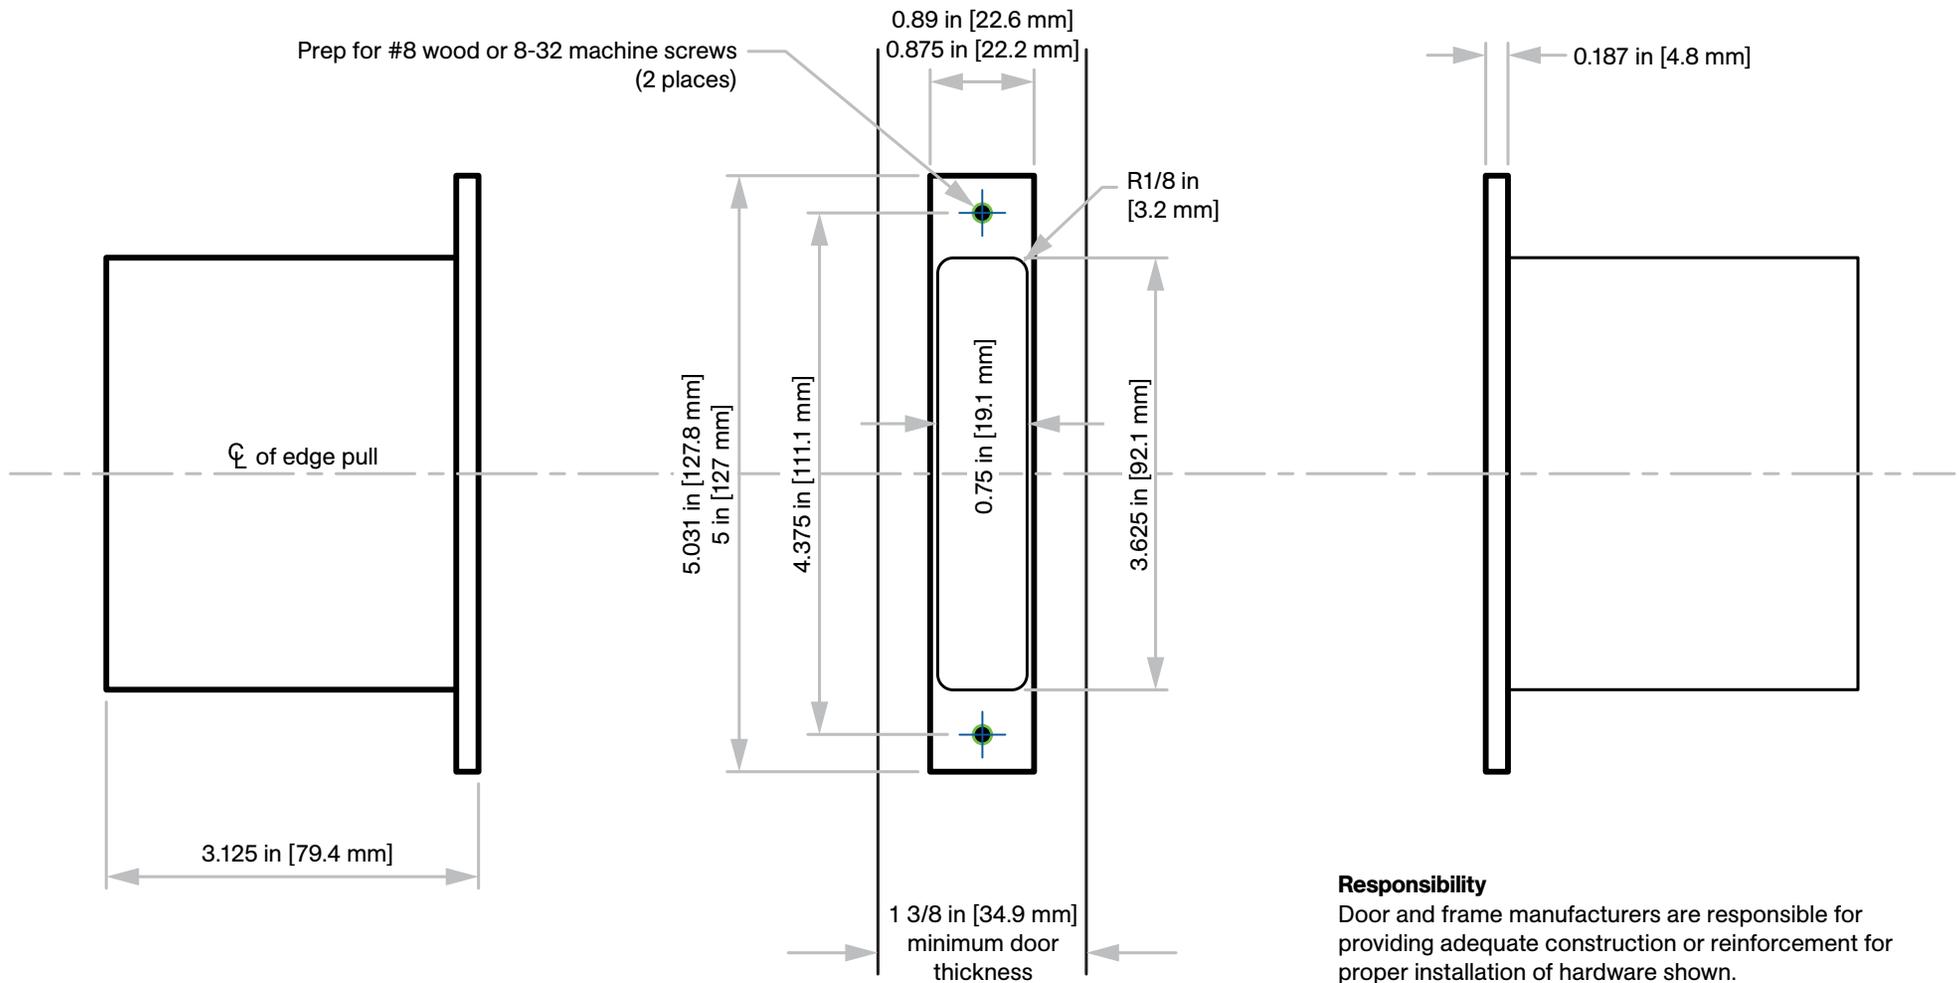

## Responsibility

Door and frame manufacturers are responsible for providing adequate construction or reinforcement for proper installation of hardware shown.