

C-94BL-SET Privacy Lockset


Installation Instructions

For 1 3/4 in [44.5 mm] thick doors only


Note: Door size = opening width plus 6 in [152.4 mm]
Example: 40 in [1016 mm] opening + 6 in [152.4 mm] = 46 in [1168.4 mm] wide door

Not to scale


Components Included:

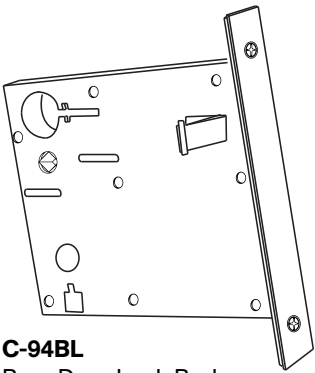


C-94BL
Barn Door Lock Body

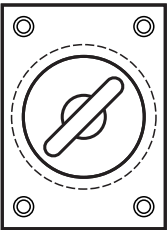

C-60ST
Square Thumb Turn Flush Pull

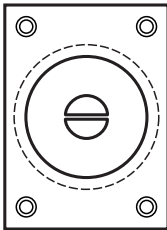


C-60SE
Square ER Coin Turn Pull

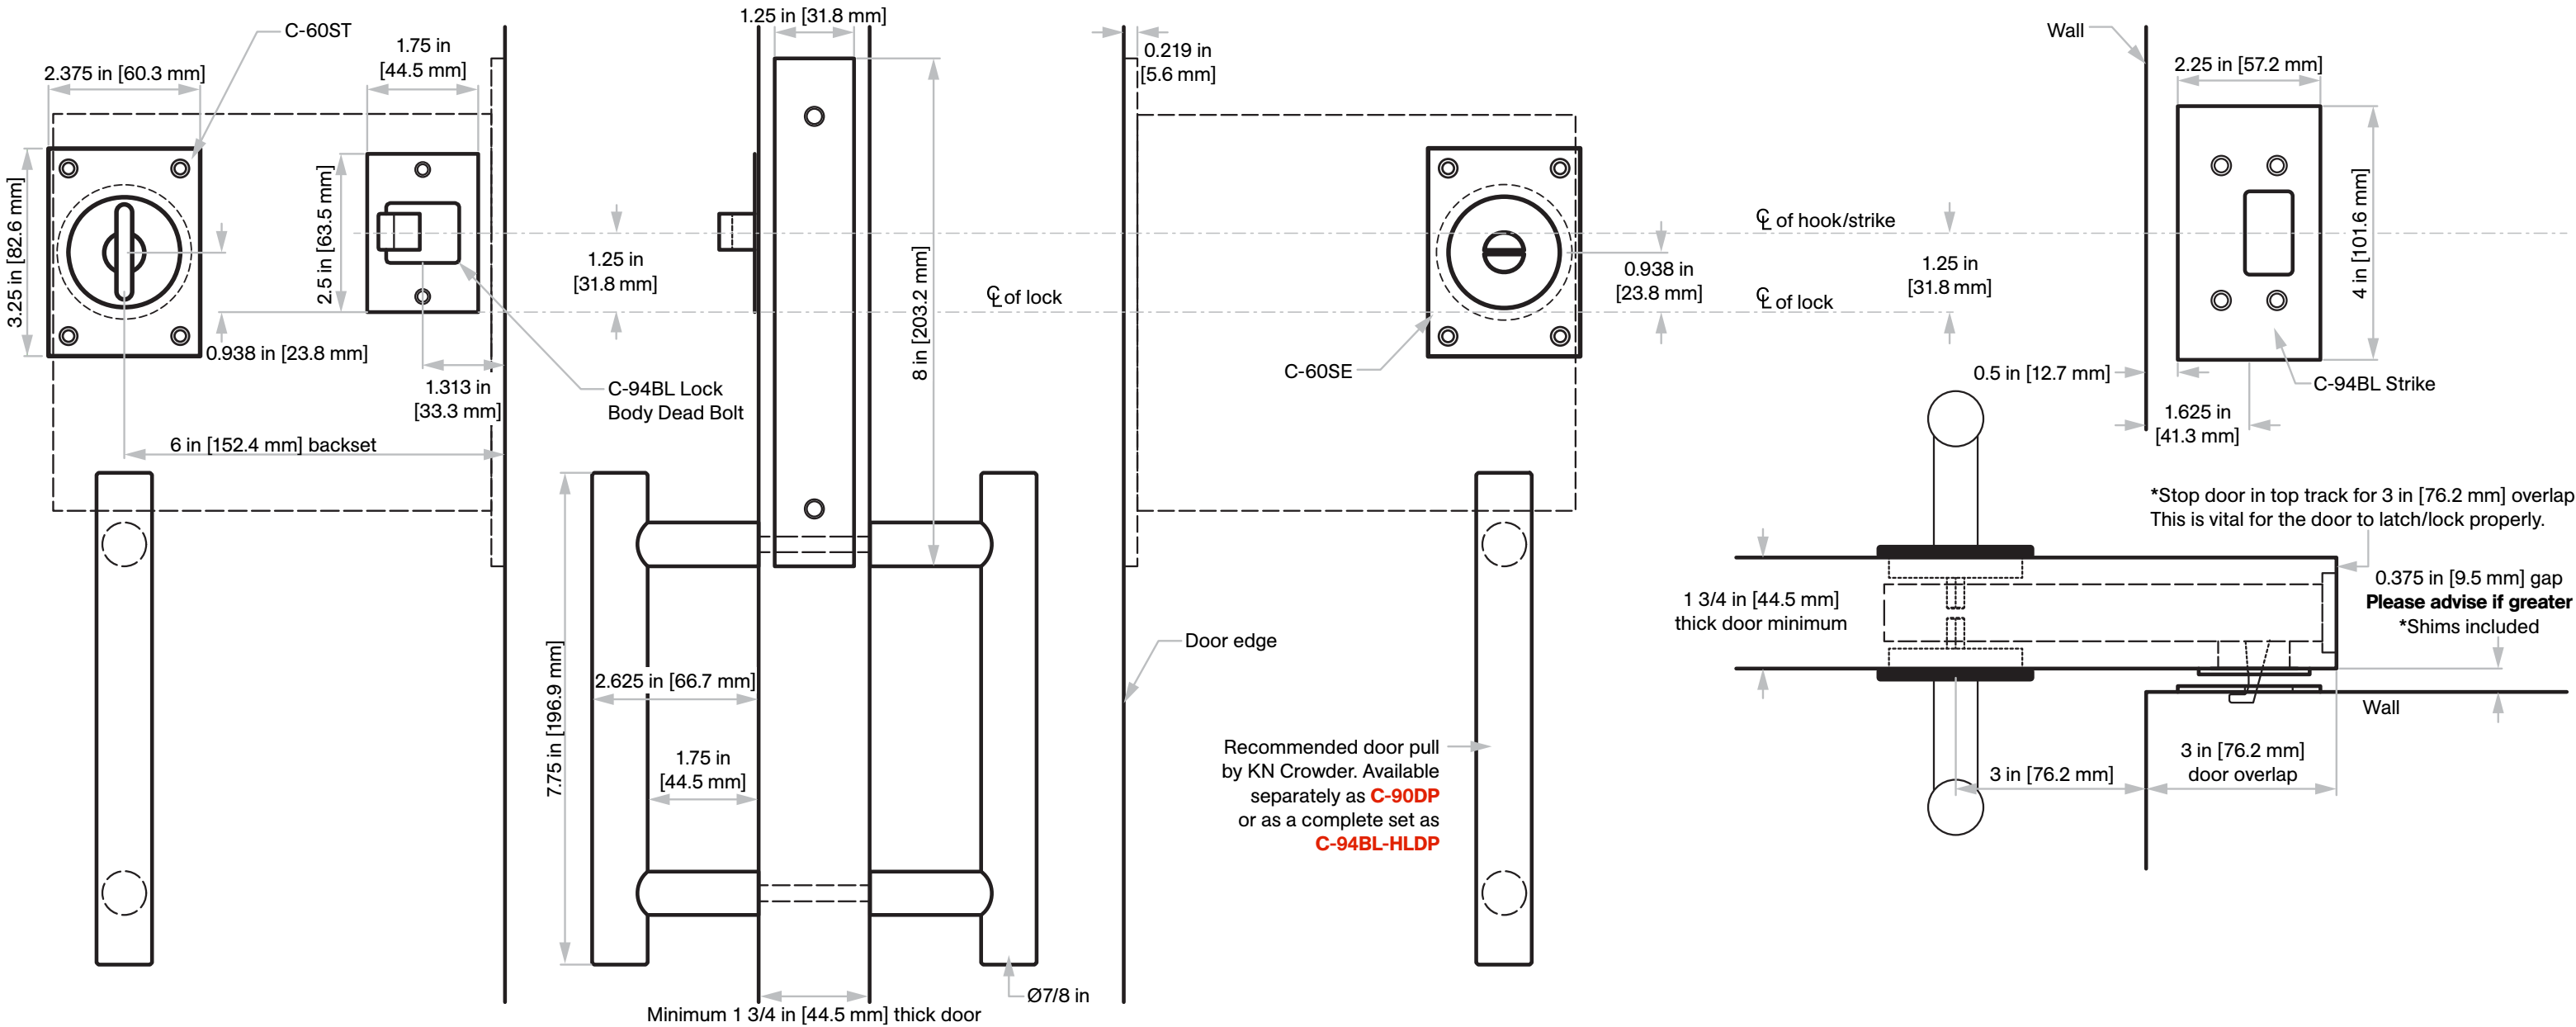

Door Prep Template

Not to scale Inside of Door

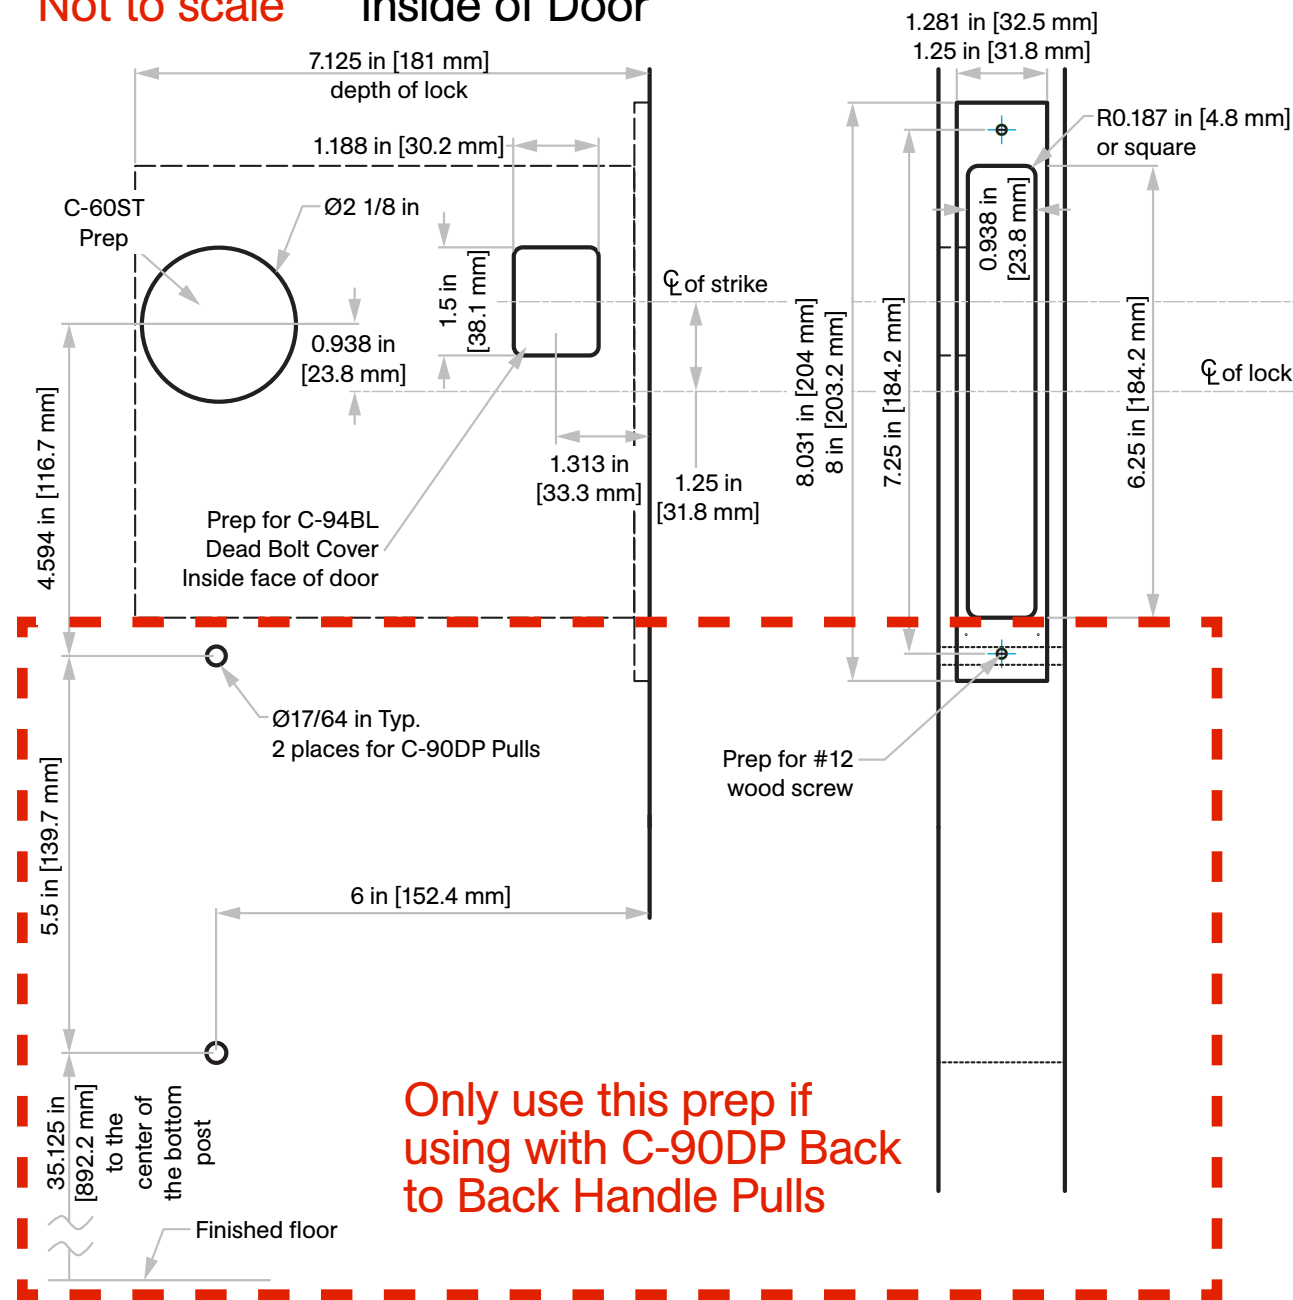

Only use this prep if
using with C-90DP Back
to Back Handle Pulls



Expose Screws
Rotate thumb turn 90 degrees to project bolt
and expose the two bolt screws



Remove Bolt from Lock Body

Extend the bolt and loosen screws without removing them and remove bolt assembly from the lock



Insert Lock into Door
Insert lock into door
Loosen insert mounting screws



Reattach Bolt

Slightly rotate loose thumb turn to make lock body screws visible

Reinstall bolt assembly by aligning screw holes

Tighten screws

Use thumb turn to fit bolt assembly back in





Install Armour Front

Secure lock in door by tightening screws into door

Install armour front onto basefront




Mount Cuff
Mount the bolt cuff aligning per template
Install trim accordingly

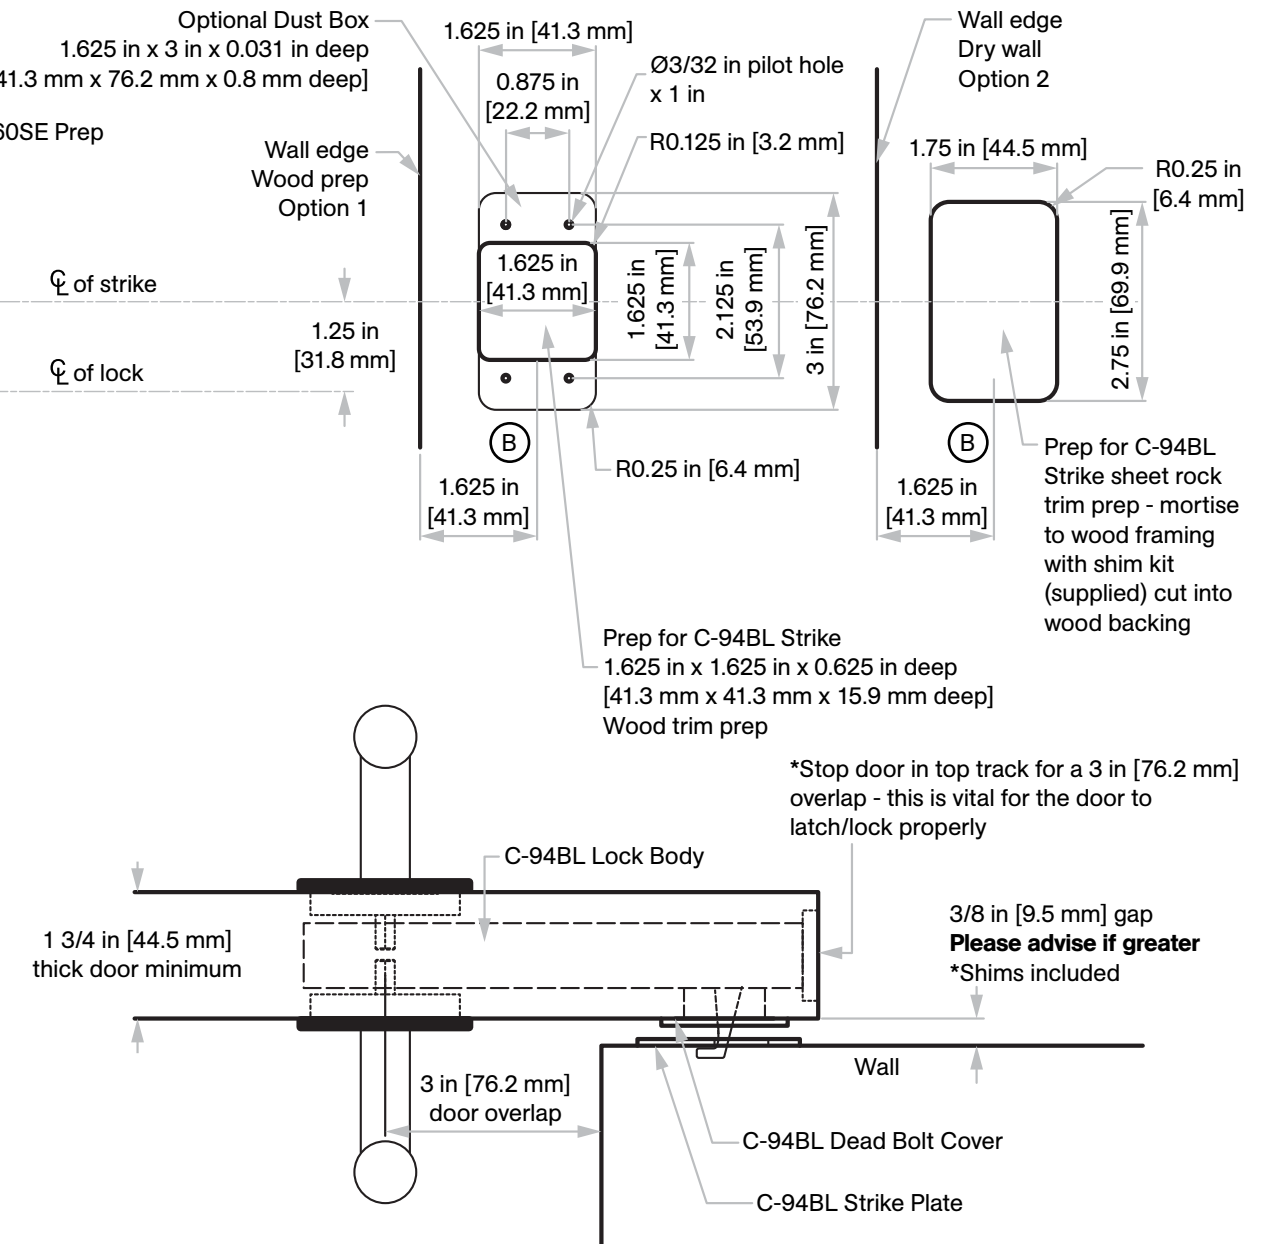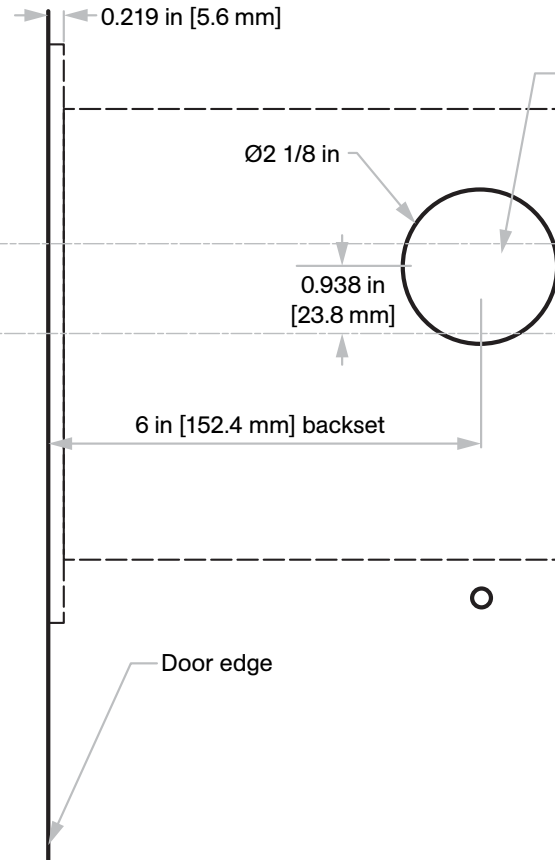


Strike Kit

Supplied Standard

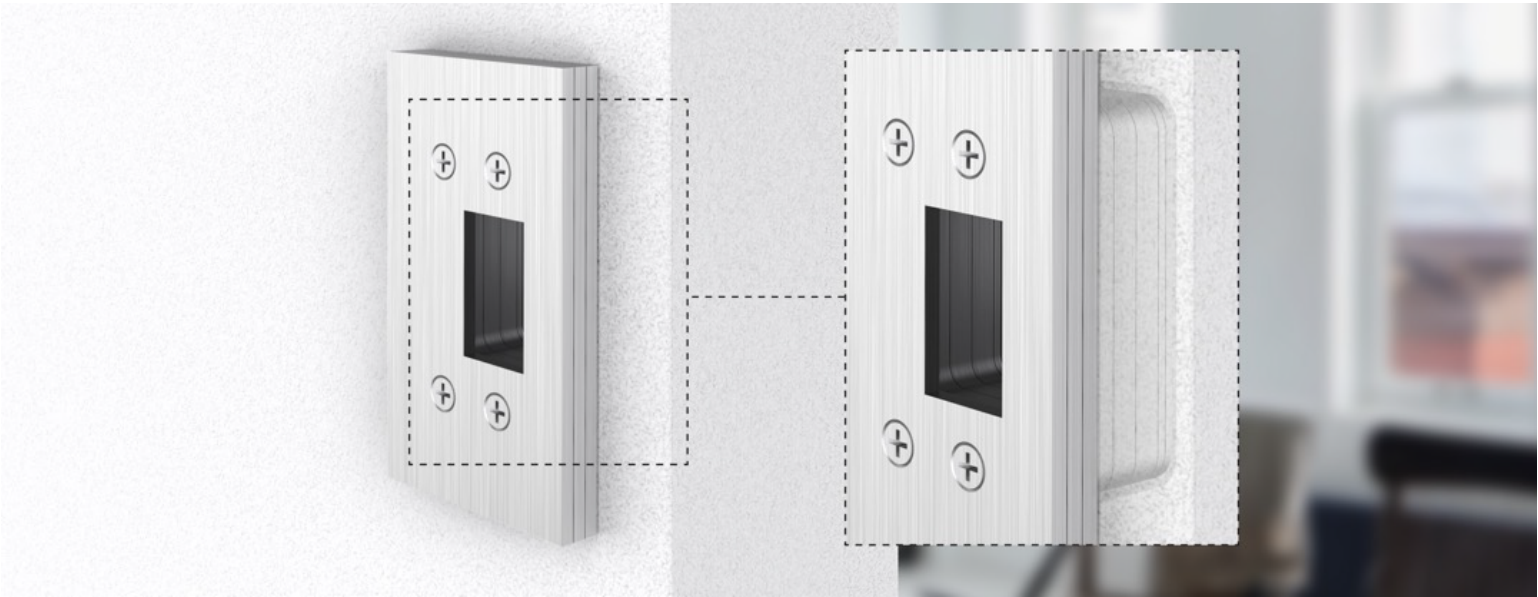

Not to scale

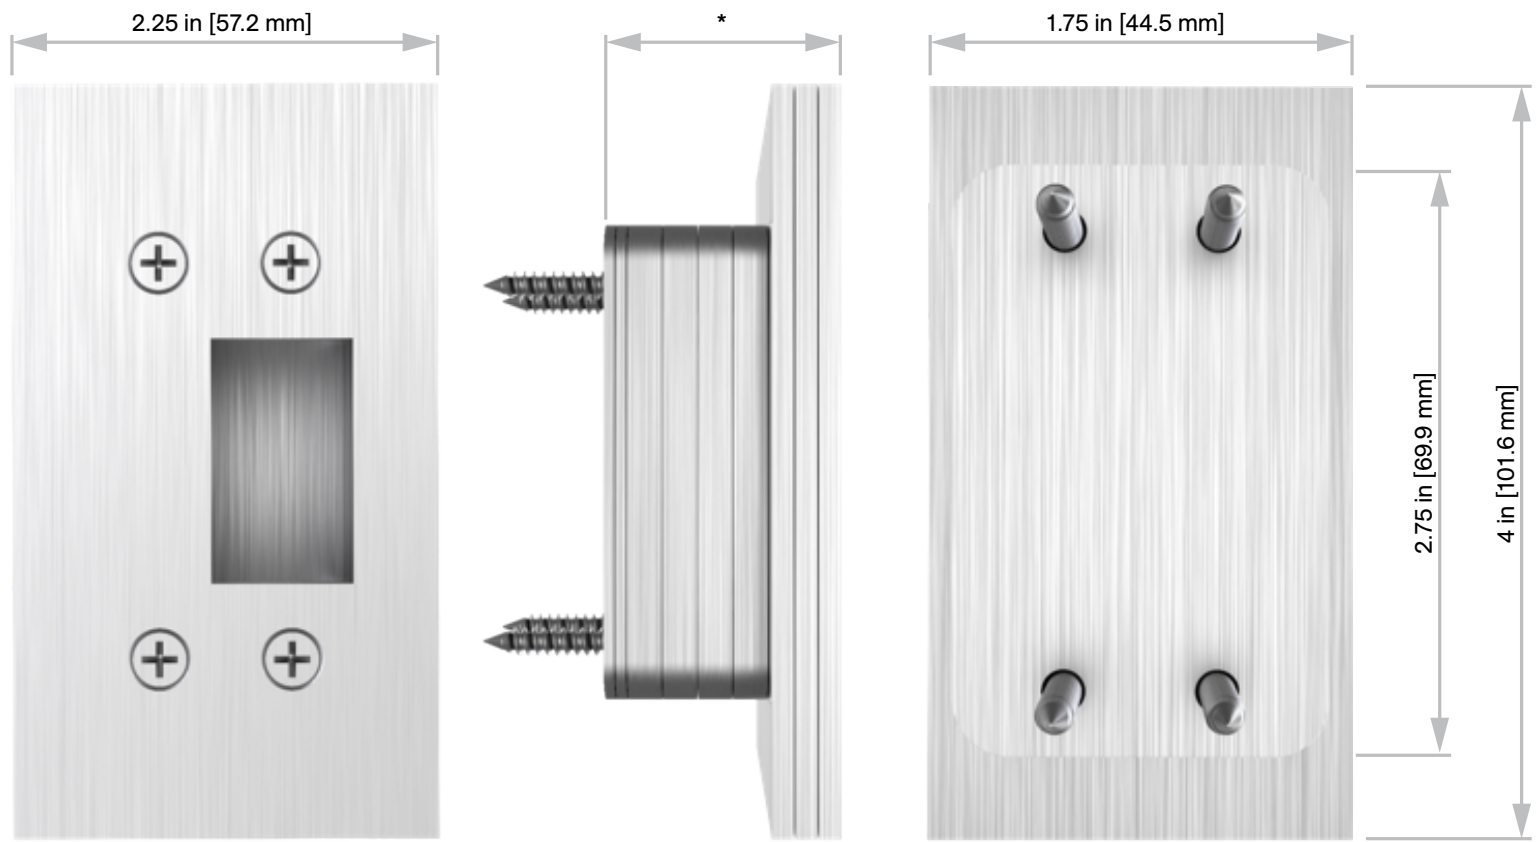

Number of drywall shims used is a function of drywall thickness.
Number of strike shims used is a function of the gap between the face of the door and the wall.

