

# C-99 RUBBER DOME BUMPER

## INSTRUCTION SHEET



### PARTS LIST



C-99 RUBBER  
DOME BUMPER



#10 X 1-1/4" SCREW (1)

C-99 RUBBER DOME BUMPER IS USED TO STOP THE DOOR FROM STRIKING THE JAMB OR THE INSIDE FRAMING STUD OF A POCKET

### INSTRUCTIONS:

#### STEP 1



LOCATE C-99 RUBBER DOME BUMPER AT MID HEIGHT OF DOOR. EXAMPLE: DOOR HEIGHT IS 84" THEREFORE C-99 WILL BE SECURED AT APPROXIMATELY 42" FROM THE FLOOR. SECURE WITH #10-1-1/4" SCREW (1).

#### STEP 2

SHIMMING MAY BE REQUIRED TO POSITION DOOR FLUSH WITH THE FINISHED JAMB WHEN DOOR IS INSIDE THE POCKET.

#### NOTE:

IT IS NECESSARY TO INSTALL C-99 BUMPER BEFORE DRYWALL IS APPLIED.

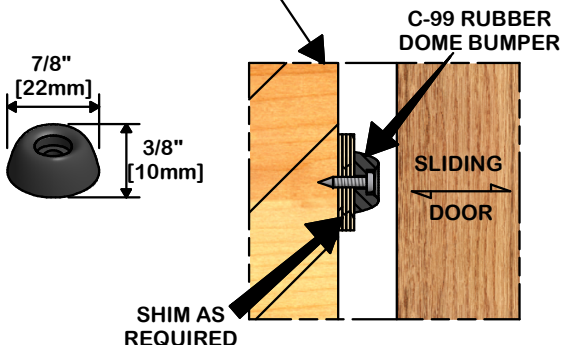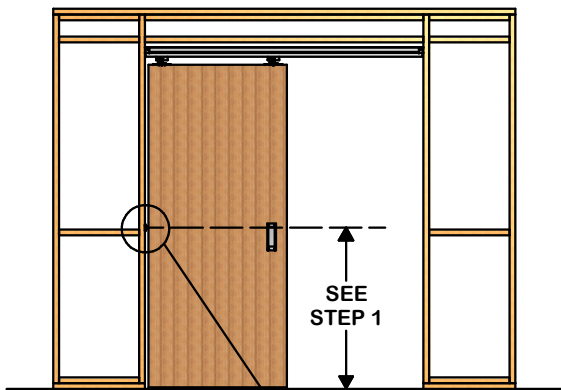

WEBSITE: [www.kncrowder.com](http://www.kncrowder.com)  
E-MAIL: [customerservice@kncrowder.com](mailto:customerservice@kncrowder.com)

#### **K.N. CROWDER MFG. INC.**

1220 BURLOAK DRIVE  
BURLINGTON, ONTARIO, CANADA, L7L 6B3  
TELEPHONE: 905-315-9788 - FAX: 905-315-8090  
TOLL FREE FAX: 1-800-567-0123

#### **K.N. CROWDER INC.**

210 EIGHTH STREET SOUTH  
LEWISTON, NEW YORK, U.S.A. 14092  
TELEPHONE: 1-716-754-8247  
TOLL FREE FAX: 1-800-567-0123