


# CCB-998

## Installation Instructions

### Heavy-duty Easy Connect Catch 'N' Close System

- Prevents bouncing and slamming of sliding doors
- Can be installed on both opening and closing ends of doors as narrow as 20 in [508 mm]
- Cycle tested up to 150,000 times
- For up to 300 lbs. [136 kg] using CC-998 with CC-3


## Parts List

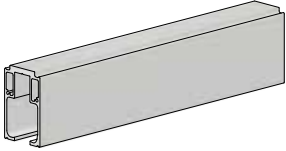

### CC-904 Top Mount Track x length (1)

Length = 2x door width, example:

36 in [914 mm] door = 72 in [1829 mm] track



### CC-921 End Cap (2)




### CC-902 Side Mount Bracket x length (1)

Length = same as track length, example:


72 in [1829 mm] track = 72 in [1829 mm] bracket

### Available in 4 lengths only:

72 in [1829 mm], 96 in [2438 mm], 120 in [3048 mm], and 144 in [3658 mm]. All lengths complete with punched oblong holes. See [Chart A](#).

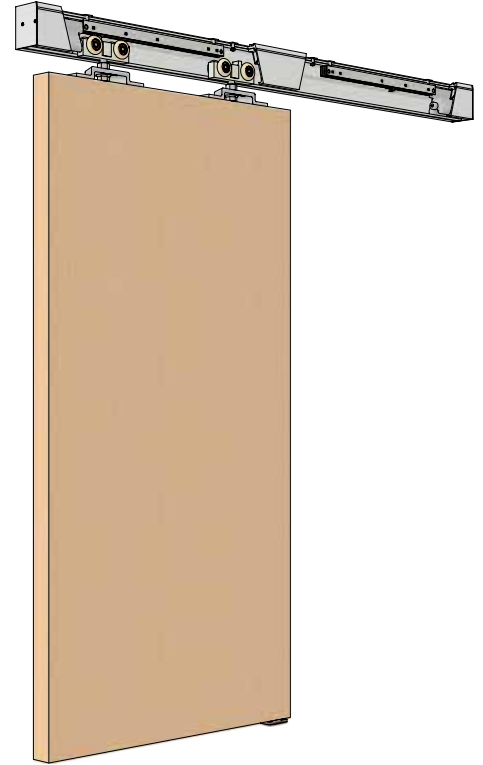

Complete CCB-998 kit illustrated.  
Cut-outs in track to expose components.




### CC-912 Hanger Body (2) c/w wheels



### 1/2-13 x 2-1/4" Hex Flange Bolt (2) [FT34]



### 1/2-13 K-Lock Nut (2) [FT33]



### C-998 Top Plate (2)




### #12 x 2-1/4" Flat Head Screws (16) [FT52]



### C-914 Guide Channel x length (1)

Length = door width, example:

36 in [914 mm] door = 36 in [914 mm] guide channel less set-backs if desired



### C-913 Floor Guide (1)



### Catch 'N' Close Closing Device (2) See details in instruction steps



### CC-101HD Catch 'N' Close In-Track Stops (2)



### #8 x 3/4" Pan Head Screws (4) [FT2]




### #10 x 1-1/2" Flat Head Screws (2) [FT7]




### #10 x 1-1/2" Self-Drilling Screws (4) [FT5]

# Optional Add-on Products

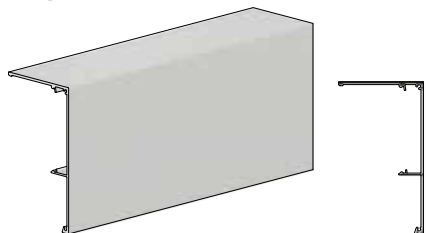



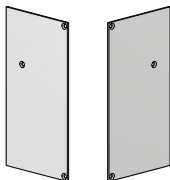

**CC-920 Snap-on Fascia x length**  
Length = same as track length, example:  
72 in [1829 mm] track = 72 in  
[1829 mm] fascia



**CC-922 End Caps (2)**  
Left and right

  
**#4 x 5/16" Flat Head Screws for end caps**  
[FT29]


## Chart A: Tab Nuts and #10-24 Machine Screws Quantity

	For CC-2/CC-3		For track	
	 #10-24 Tab Nuts [FT43]	 #10-24 x 1" Pan Head Machine Screws [FT45]	 #10-24 Tab Nuts [FT43]	 #10-24 x 1/2" Pan Head Machine Screws [FT44]
<b>CC-902 length</b>				
72 in [1829 mm]	4	4	6	6
84 in [2134 mm]	4	4	7	7
96 in [2438 mm]	4	4	8	8
120 in [3048 mm]	4	4	12	12
144 in [3658 mm]	4	4	14	14

**Note:** Hole spacing of punched oblong holes on CC-902 Brackets are as follows:  
1/2 in [12.7 mm] from each end, 19 in [483 mm] to next hole from starting hole, then 11 in [279 mm] on center to the middle.  
Spacing is repeated on opposite end to the middle of the CC-902 full length.


# Product Details and Dimensions

## Elevation View

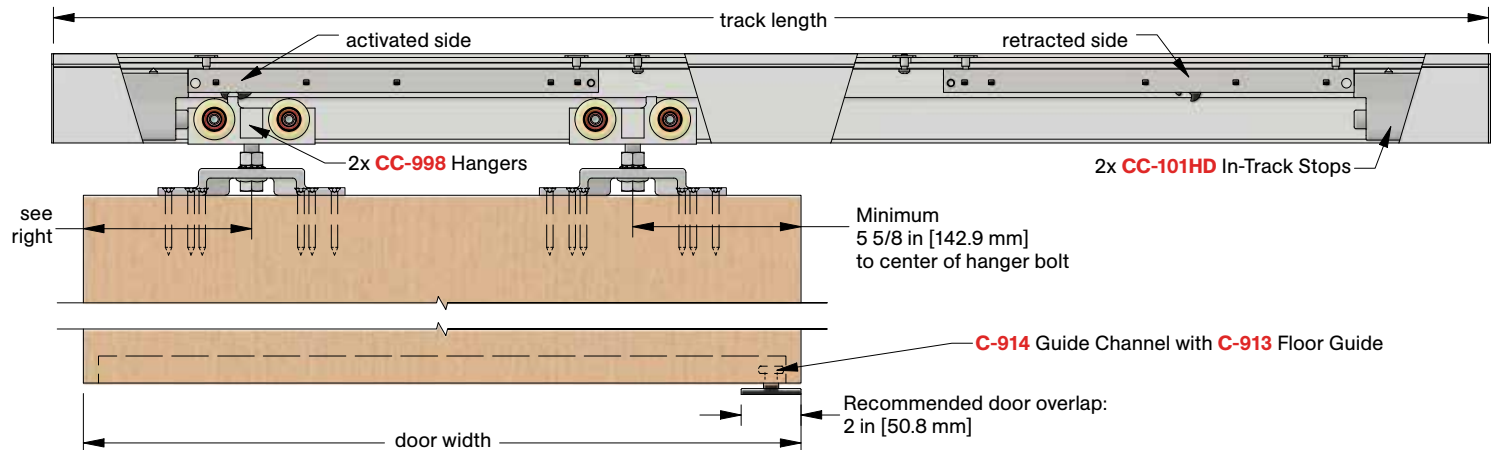


## Section View

\* indicates mounting locations to wall support on CC-902 Continuous Side Mount Bracket

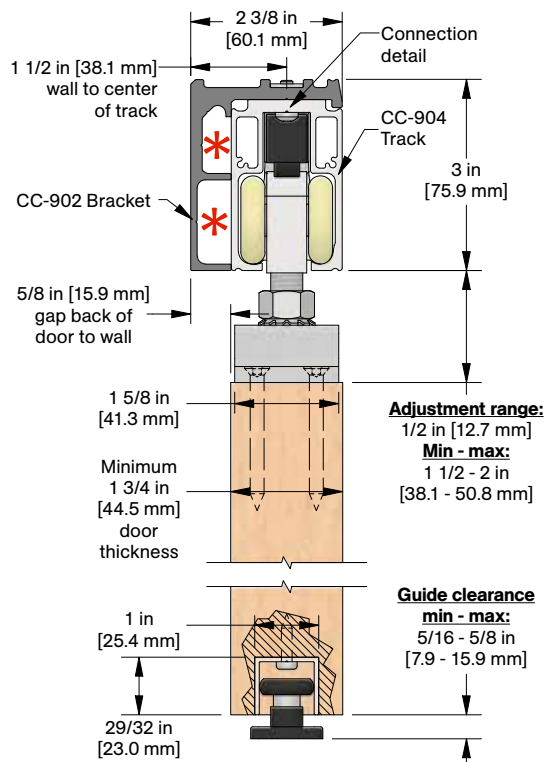


Optional CC-920 Snap-on Fascia, illustrated as solid black profile

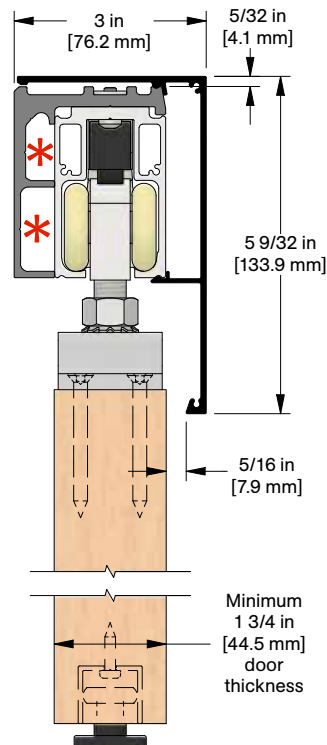

## Detail A



**Fastening detail for track and side mount bracket**  
CC-902 Side Mount Brackets are supplied with oblong holes.

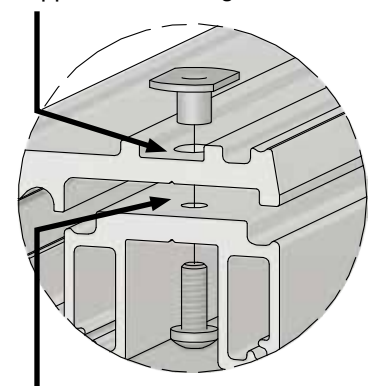

Holes in CC-904 Track by installer

## Typical installation location for floor guides

For barn door applications

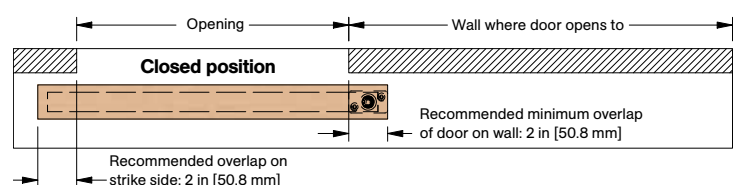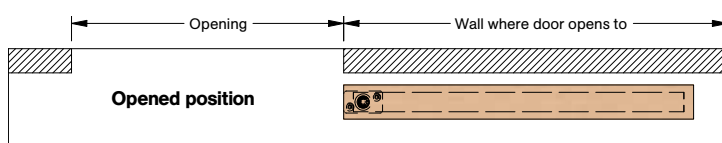

# Installation Steps


## Step #1:

Determine door size, header height, track position, and bottom clearance based on kit code ordered by using dimensions shown in detail views on previous page.

## Step #2:

Cut CC-902 if required. Based on support structure, determine fasteners to be used and drill mounting holes in CC-902 Continuous Side Mount Bracket, see illustration right. Mount CC-902 Continuous Side Mount Bracket to wall based on location determined in **step #1**.

**Note: Minimum 1/4 in [6.3 mm] structural bolts recommended to secure track. Solid backing is required and spacing is recommended to be between 12-16 in [304-406 mm] on center. Consult structural engineer to ensure adequate support and fastening.**

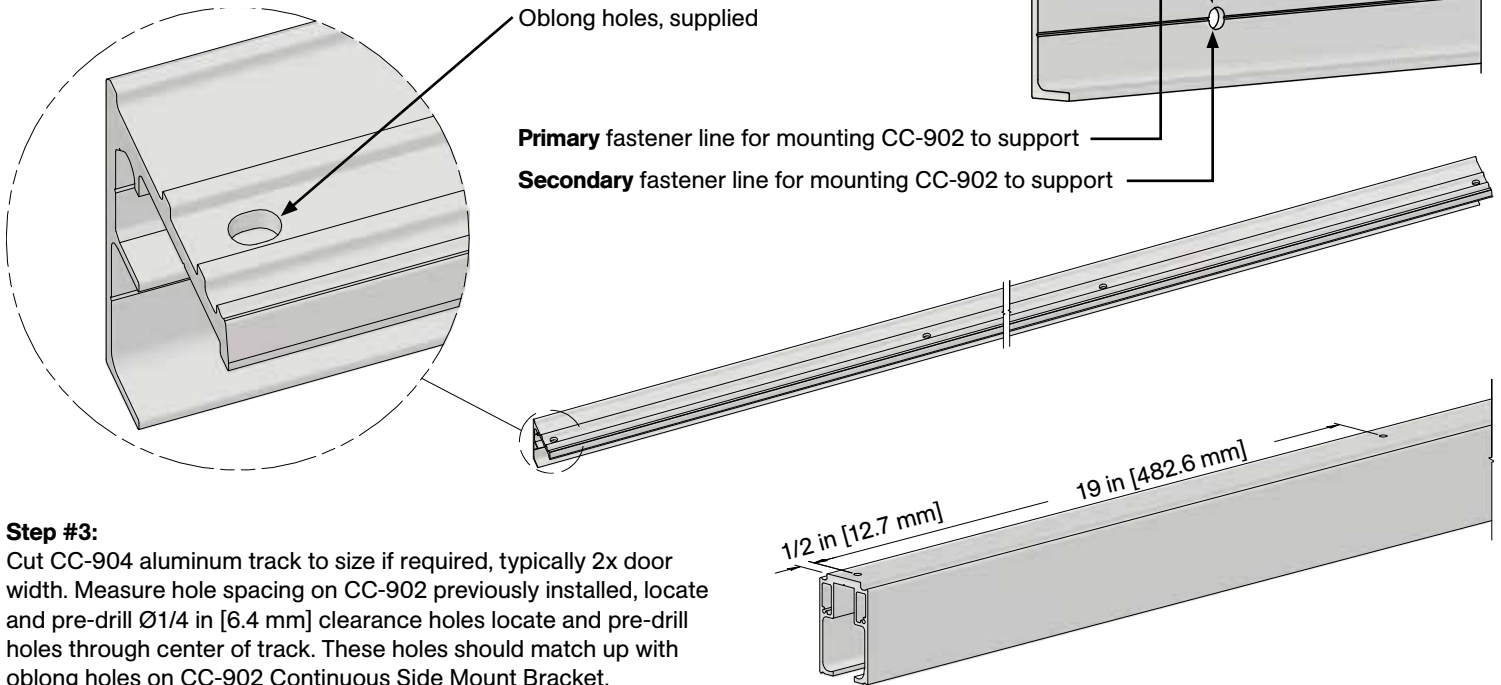

## Step #3:

Cut CC-904 aluminum track to size if required, typically 2x door width. Measure hole spacing on CC-902 previously installed, locate and pre-drill  $\varnothing 1/4$  in [6.4 mm] clearance holes locate and pre-drill holes through center of track. These holes should match up with oblong holes on CC-902 Continuous Side Mount Bracket.

## Step #4:



**Note: If access to the ends of the track is not available, steps #5 and 6 must be completed before step #4.**

Install tab nuts [FT43] from top side of CC-902 Continuous Side Mount Bracket into oblong holes. Ensure tab nut flat edges slide into "channel" on top of CC-902. See **Fig. 4A** below. This will prevent tab nut from turning when fastening.

**Note: If top of CC-902 is not accessible, please insert tab nut prior to installation of the CC-902 to support. Recommendation: Allow at least 1 in [25.4 mm] clearance between top of CC-902 and any obstructions that may be present to provide access to tab nuts. Ensure CC-902 is fully secured before installing CC-904 track as support fasteners will not be accessible.**

Using #10-24 x 1/2" Pan Head Machine Screws [FT44], secure CC-904 Track to CC-902 Continuous Side Mount Bracket by threading into previously installed tab nuts. See illustrations below. Ensure tab nut does not lift up and remains seated in "channel" at the top of the CC-902.

**Fig. 4A** Flat edge

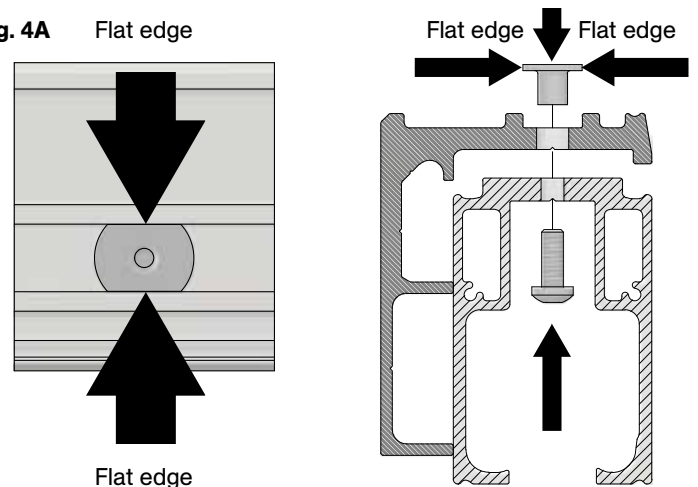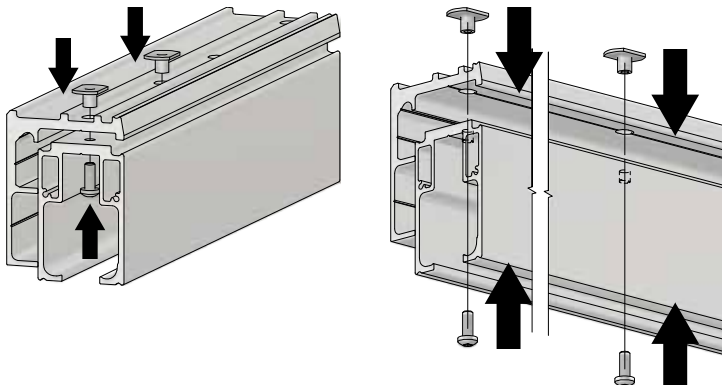




**Step #5:**

Assemble CC-998 Catch 'N' Close Hangers as shown below:

**Fig. 1** Thread 1/2-13 K-Lock nut [FT33] onto 1/2-13 Hex Head Flange Bolt [FT34] with lock washer facing bolt head.

**Fig. 2** Thread assembly from **Fig. 1** into CC-912 Hanger Body from underside, side opposite the trigger, do not thread in fully.

**Fig. 3** Completed CC-998 Hanger assembly, 2 x required.

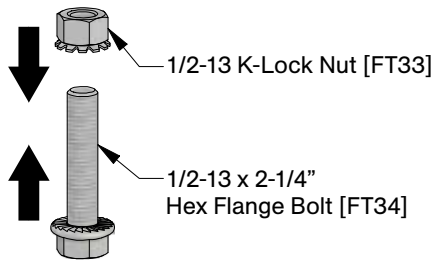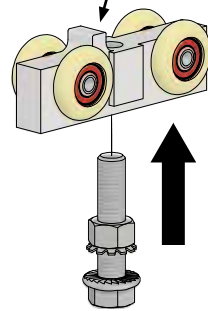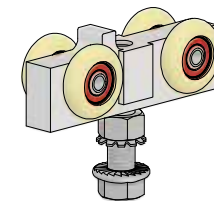**Fig. 1****Fig. 2****Fig. 3****Step #6:**

Slide one (1) CC-998 Hanger assembly (\*) with trigger facing end of track and one (1) CC-101HD In-Track Stop (●) into each end of track, as shown below.

**Note:** Leave screws on CC-101HD In-Track Stops (●) loose to allow stops to slide freely within track. Rubber bumpers of each stop (●) should face inward, toward middle of track.

\* CC-998 Hanger

● CC-101HD In-Track Stops



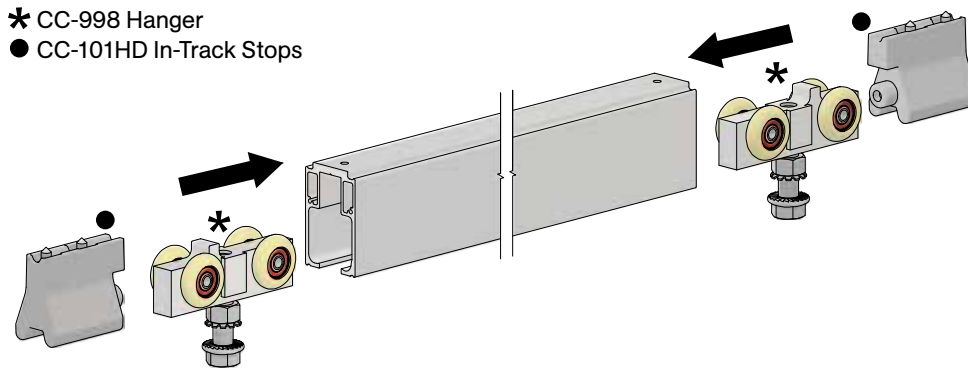



Illustration below shows correct positioning of stops in track

**Step #7:**

Locate center of "U" slot, dash line shown below, of C-998 Top Plate at 5 5/8 in [142.9 mm] from each edge of door or 2 1/2 in [63.5 mm] from edge of door to leading edge of top plate. Mark screw hole locations or use template on page 10 and pre-drill Ø9/64 in [3.6 mm] holes at least 2 1/4 in [57.2 mm] deep. Secure C-998 Top Plates with 8 per hanger, #12 x 2-1/4" Flat Head Screws [FT52]. See below.

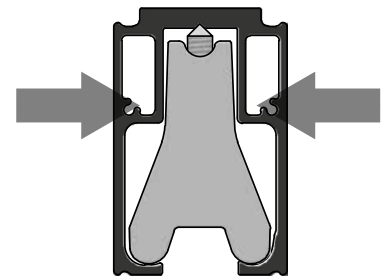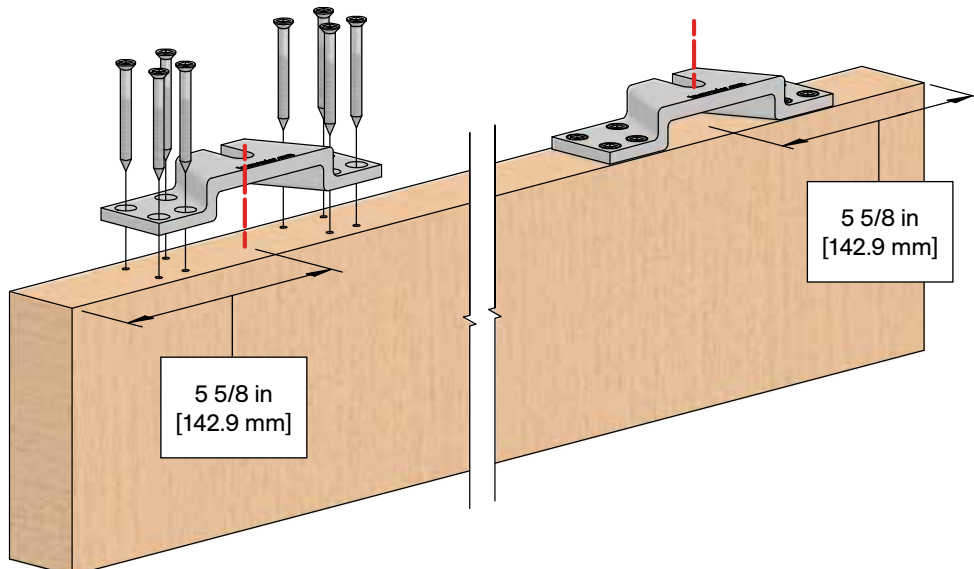


**Note:** If door has sufficient overlap, guide channel can be recessed into door without cutting a full-length slot in door. If guide channel will be fully recessed, it is recommended to have at least 1/2 in [12.7 mm] door material at each end of door before start of guide channel slot.

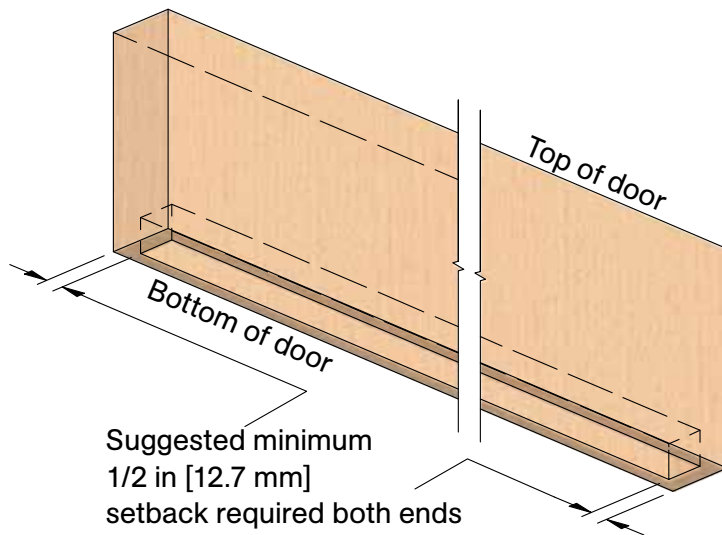


#### Step #8:

Prepare C-914 Guide Channel Slot in bottom of door:  
1 in [25.4 mm] wide in center of door, 29/32 in [22.9 mm] deep and set back 1/2 in [12.7 mm] from both edges of door. Make slot as accurate as possible for secure fit and neat appearance.

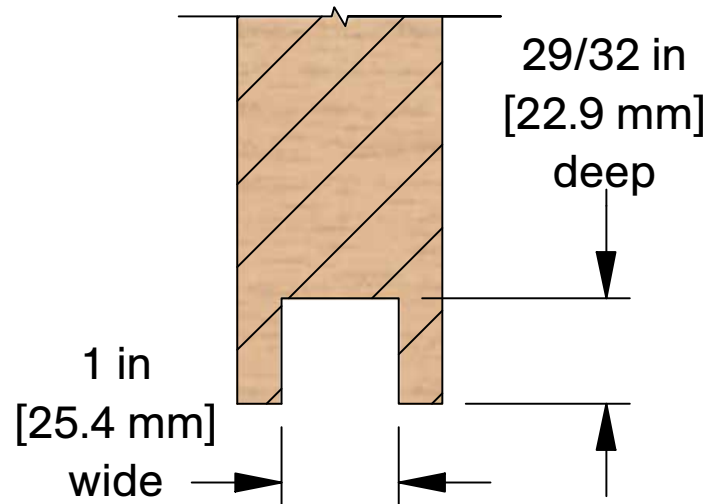


#### Step #9:

Cut C-914 aluminum guide channel to correct length as required. Drill holes in C-914 Guide Channel and pre-drill holes in door. Locate C-914 Guide Channel in slot and secure channel into place with (4) #8 x 3/4" Pan Head Screws [FT2].

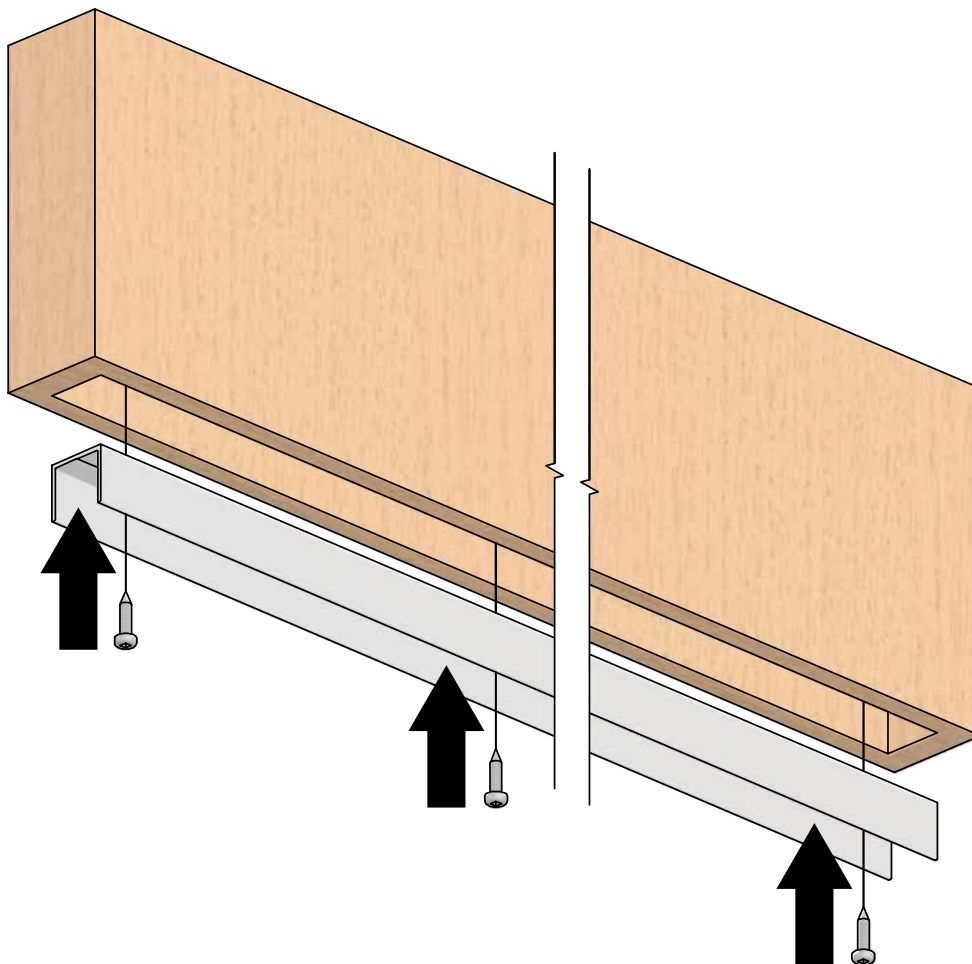


#### Step #10:


Position C-913 Guide per typical installation location details on page 2 and secure to floor with (2) #10 x 1-1/2" Flat Head Screws [FT7].

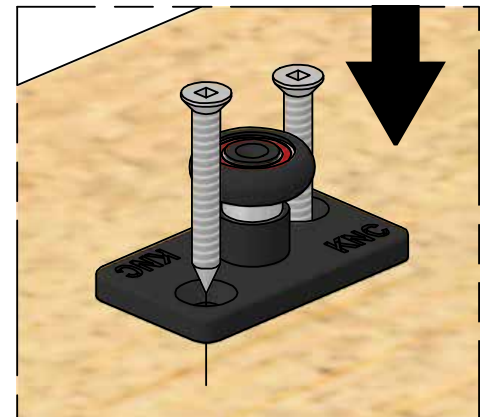

For 120 in [3048 mm] kits and up, C-913-2 Double Roller Floor Guide is supplied. Minimum 4 in [101.6 mm] overlap required.


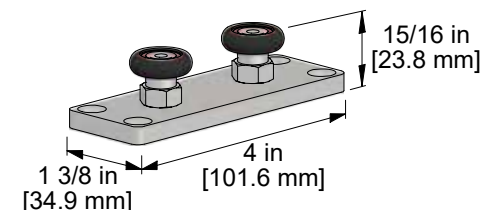




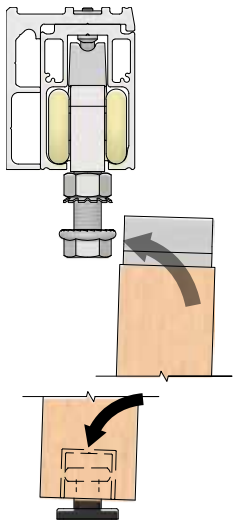

#### Step #11:

Raise door, position over guide, and under hangers in track. Lift door up and engage top plate "U" slot with 1/2-13 Hex Head Flange Bolt. Adjust door height and plumb by using 3/4 in wrench on hex head flange bolts. Lock final height adjustment with k-lock nuts using 3/4 in wrench.

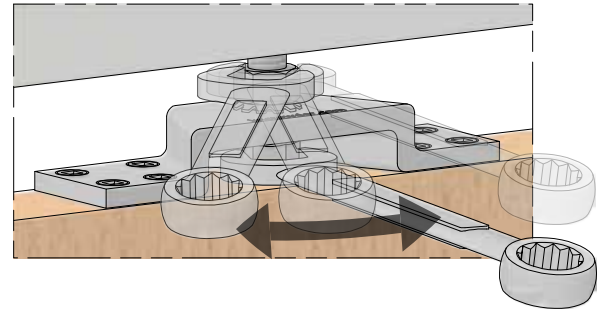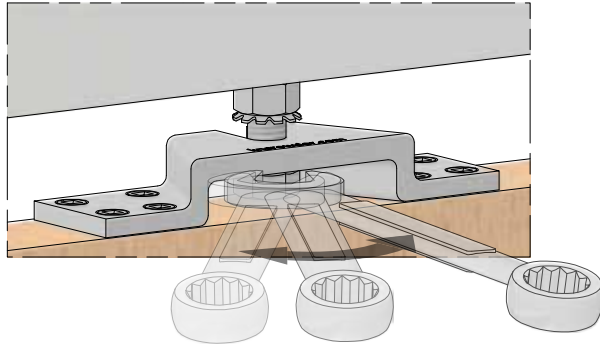

#### Step #12:


After door has been installed, position door approximately 5-10 in [127-254 mm] away from final position at one end, shown below with left side. Push loose CC-101HD Stop, installed in **step #6**, against hanger body.



#### Step #13:

With CC-101HD Stop loose, slide door to final/desired position of door as shown below.

**Note:** Ensure that strike and trim thickness are taken into consideration for final/desired position of door.

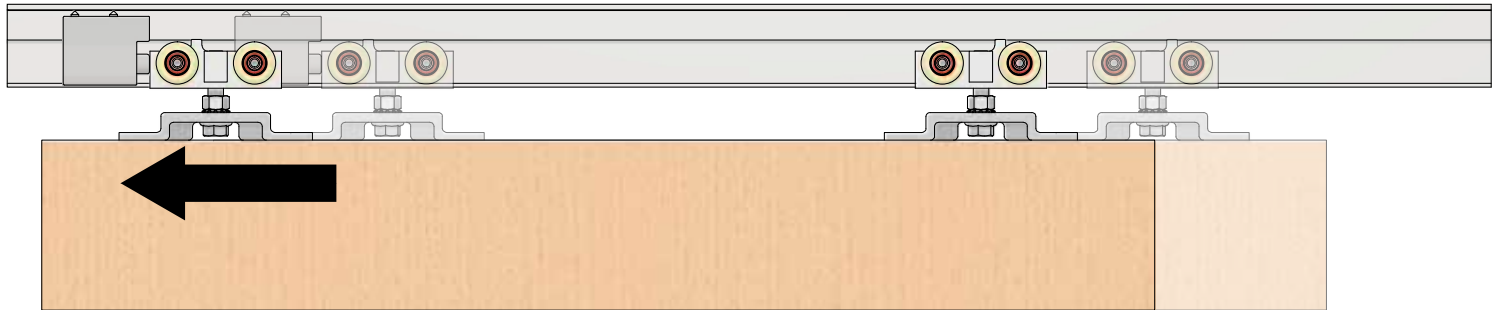

#### Step #14:

Once final position is achieved, slide door away from CC-101HD Stop. Lock CC-101HD Stop in position by tightening two cap screws on CC-101HD Stop with C-819 5/32" Allen Key. CC-101HD is secured by friction fit with cone point screws.



#### Step #15:


Repeat **steps #12 - 14** for opposite side.

**Note:** Ensure that strike and trim thickness are taken into consideration for final/desired position of door.

**Step #16:**

Before installing Catch 'N' Close Closing Devices, ensure devices are in retracted position as shown below. If not in required position, slide hook down until it locks in position.

**Note: Requires significant finger pressure.**

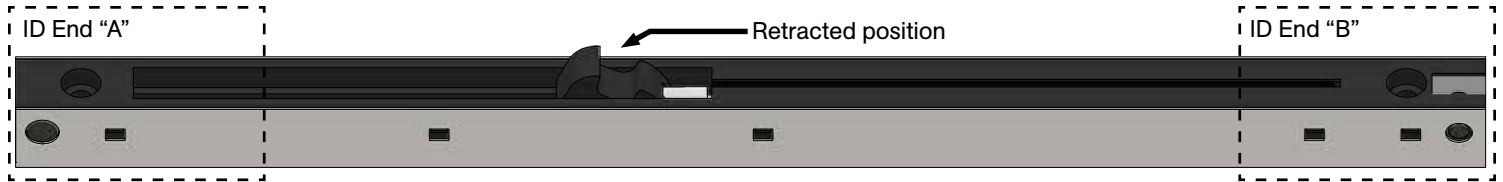
**Important Catch 'N' Close Closing Device Notes:**

If doors are 200 lbs. [90 kg] or less, ensure CC-2 Catch 'N' Close Closing Devices are used.

If doors are minimum 200 lbs. [90 kg] up to 300 lbs. [136 kg], ensure CC-3 Catch 'N' Close Closing Devices are used.



**Step #17:**

Place Catch 'N' Close Closing Devices into track with leading end "A" resting against upper body on CC-101HD Stops installed previously. See Illustrations right:

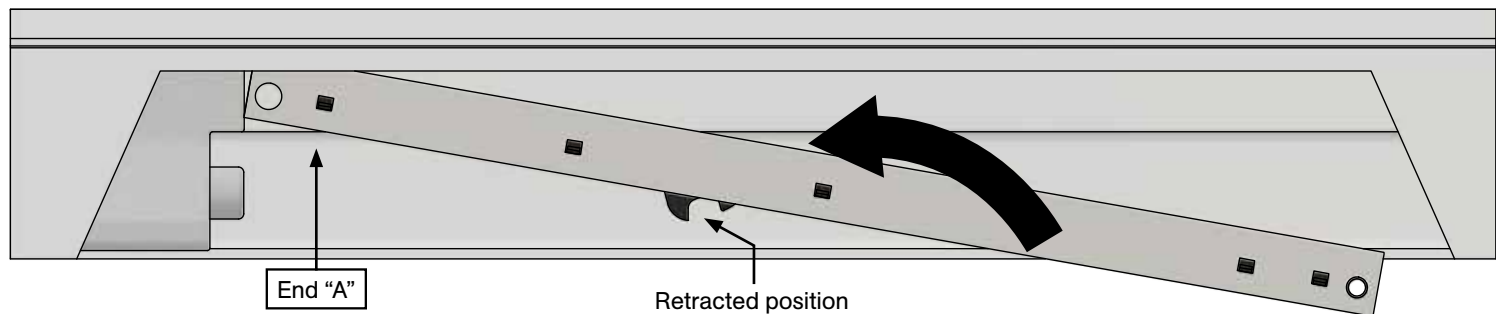**Step #18:**



Locate and secure Catch 'N' Close Closing Devices to track with (2) #10-24 Tab Nuts [FT43] and (2) #10-24 x 1" Pan Head Screws [FT45]. Pre-drill track and header bracket with Ø1/4 in [6.4 mm] drill bit. Repeat for opposite end with Catch 'N' Close Closing Devices installed in reverse as shown on front page in "Elevation View" illustration.

**Note: Do not overtighten screws. Secure first screw closest to CC-101HD Stop only and test system by sliding door to activate Catch 'N' Close. If in correct position, secure with second screw. Remove any drill fillings from inside track.**

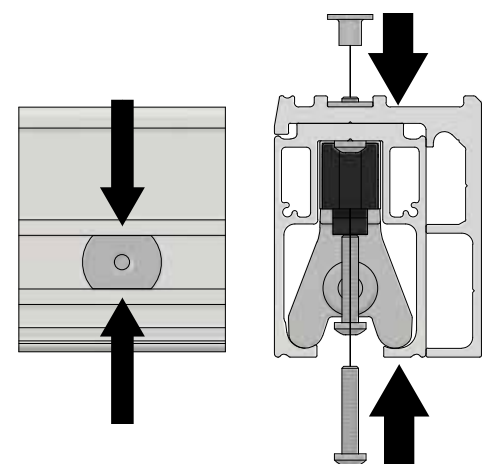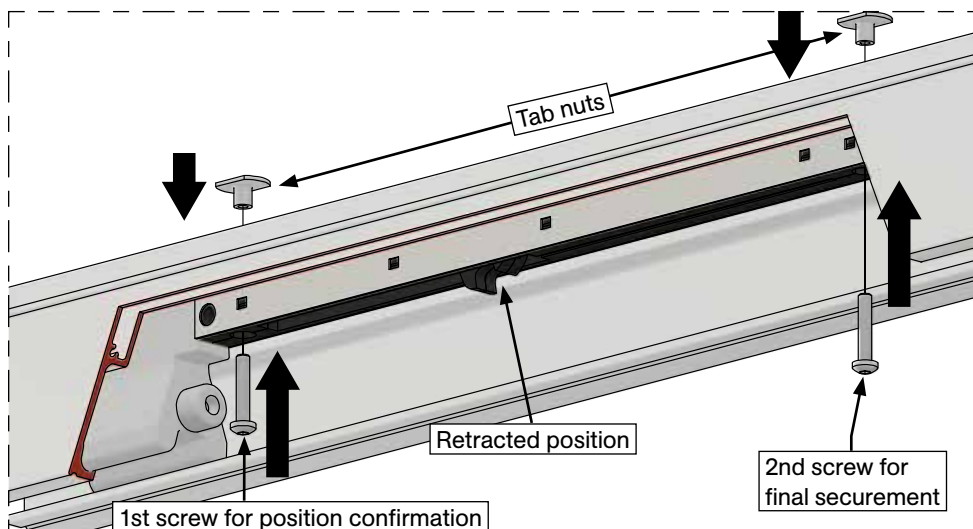



**Note:** Ensure area of track where Catch 'N' Close Device will be installed is free of fasteners. Securing Catch 'N' Close Device on top of a fastener may lead to operation issues or damage to the system.

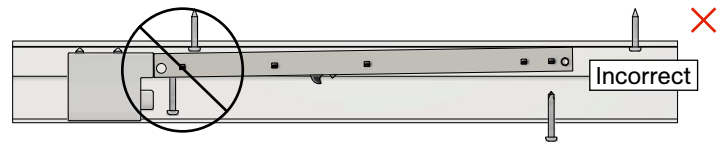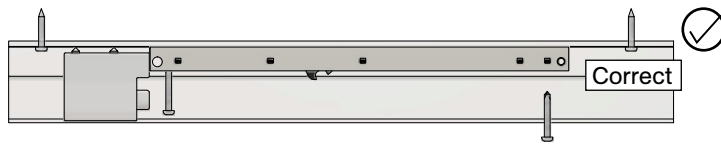


#### Step #19:

Test complete Catch 'N' Close system by sliding door to both left and right to activate closing devices.

#### Step #20: Supplied CC-921 End Cap installation

Install CC-921 End Caps as shown right with supplied #4 x 5/16" Flat Head Screws [FT29], 2 screws per end cap provided.

**Note:** Do not install with impact driver.

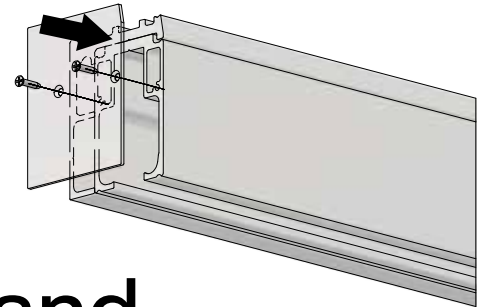

## Optional CC-920 Fascia and CC-922 End Cap Installation



#### Step #F1:

Cut CC-920 Fascia to correct length if required. Typically, fascia is same length as track previously installed.

#### Step #F2:

Lift fascia up to track and snap on as shown below.


**Note:** If fascia is loose and a tighter fit is desired, use a rubber mallet on inside leg of fascia to reduce gap at +/-24 in [610 mm] intervals.

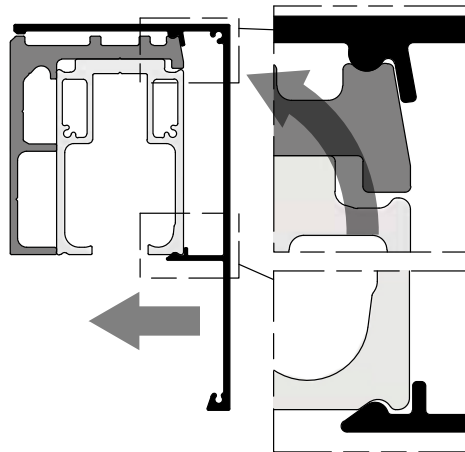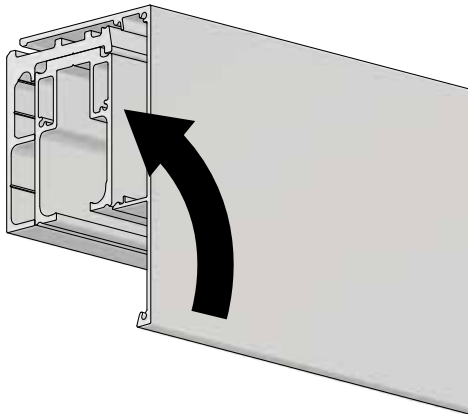

#### Step #F3:

Install CC-922 End Cap as shown with supplied #4 x 5/16" Flat Head Screws [FT29], 3 screws per end cap provided.


**Note:** Do not install with impact driver.

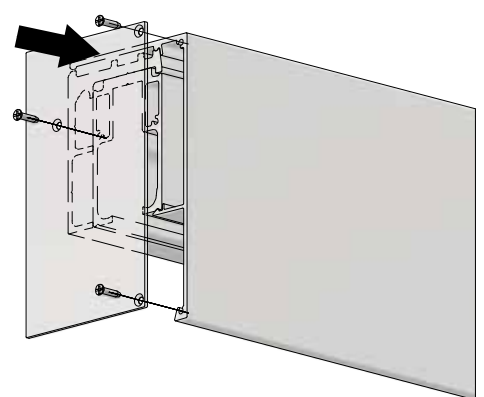

## Troubleshooting

Issue	Solution
Chatter/noise when door is sliding	Ensure there are no aluminum shavings within track. Shavings can become embedded in nylon tires and cause noise during operation.
Door is hard to move	Ensure guide channel secured to bottom of door is not over-tightened as this could cause sides of guide channel to "pinch" guide. Remove door and check guide channel by rolling guide roller in channel to ensure smooth travel. There should be little to no resistance. Ensure door is not dragging on bottom of floor/guides and adjust height of door as required.
Door rattles	Ensure locking nuts and screws on hangers are secured and not loose.
Door is not engaging closing device	Ensure hangers are correctly oriented. See <b>steps #5 - 6</b> . Ensure Catch 'N' Close Closing devices are in correct retracted or extended position prior to sliding door closed/open. See <b>step #20</b> .
Replacing the Catch 'N' Close Device	The Catch 'N' Close track and hardware system has been designed for easy installation. Remove two screws that hold Catch 'N' Close Closing Devices in place and replace device with a new one if failure occurs.

Top Plate Location Template

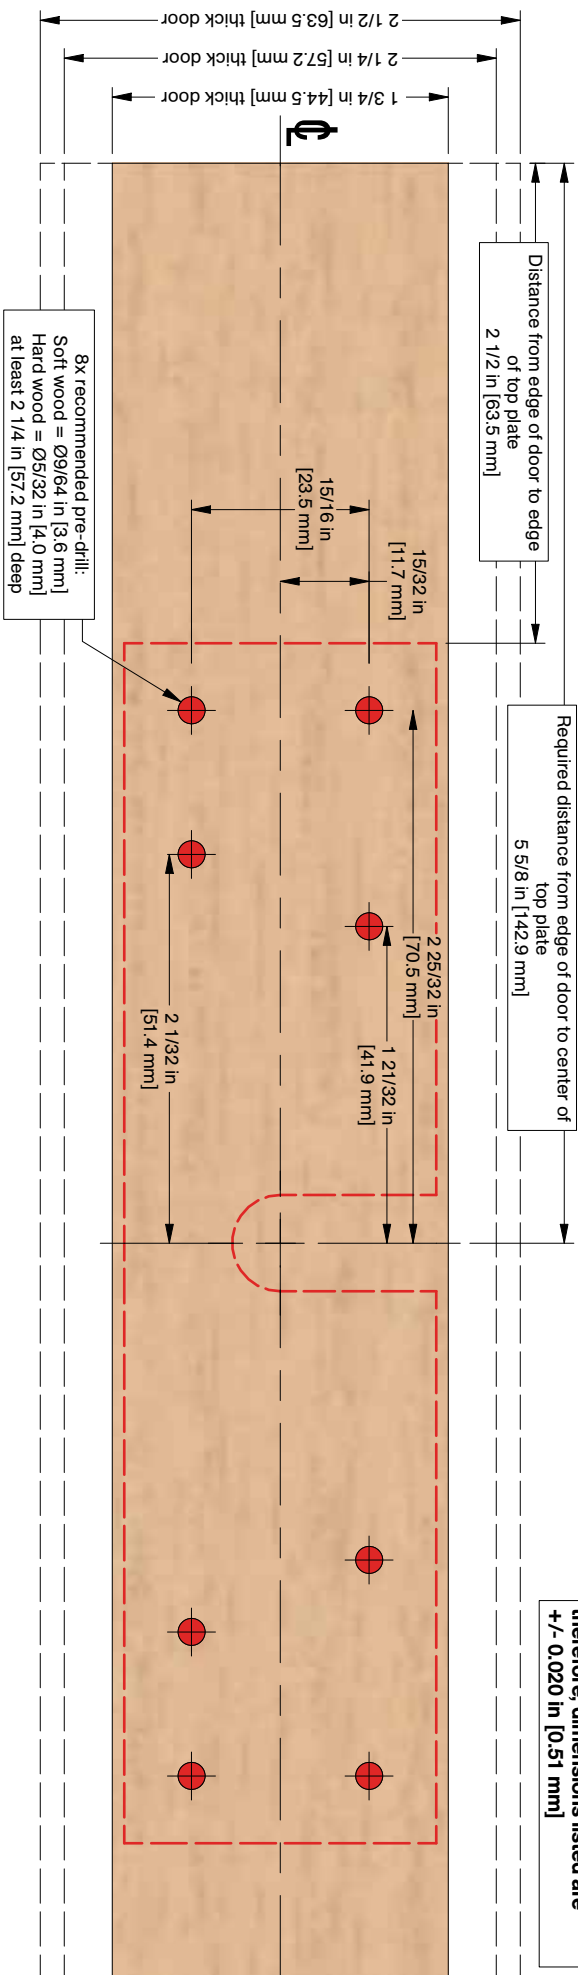

Top Plate Location Template

