


KNC

CT-55 Door Shoe

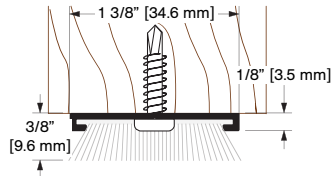


Installation Instructions

1. Measure and cut door shoe to fit.
2. Position seal on door with gasket compressed 1/16" against sill.
3. Mark screw holes.
4. Drill pilot holes for screws using a 7/64" (#36) drill bit.
5. Install with screws provided.
6. Adjust position so that gasket does not impede proper closing and latching of door.

KNC

CT-55 Door Shoe

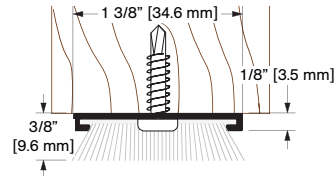


Installation Instructions

1. Measure and cut door shoe to fit.
2. Position seal on door with gasket compressed 1/16" against sill.
3. Mark screw holes.
4. Drill pilot holes for screws using a 7/64" (#36) drill bit.
5. Install with screws provided.
6. Adjust position so that gasket does not impede proper closing and latching of door.

KNC

CT-55 Door Shoe

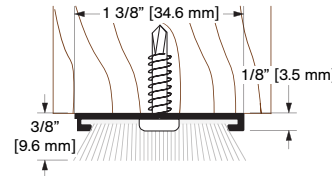


Installation Instructions

1. Measure and cut door shoe to fit.
2. Position seal on door with gasket compressed 1/16" against sill.
3. Mark screw holes.
4. Drill pilot holes for screws using a 7/64" (#36) drill bit.
5. Install with screws provided.
6. Adjust position so that gasket does not impede proper closing and latching of door.

KNC

CT-55 Door Shoe

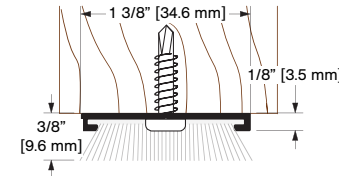


Installation Instructions

1. Measure and cut door shoe to fit.
2. Position seal on door with gasket compressed 1/16" against sill.
3. Mark screw holes.
4. Drill pilot holes for screws using a 7/64" (#36) drill bit.
5. Install with screws provided.
6. Adjust position so that gasket does not impede proper closing and latching of door.

KNC

CT-55 Door Shoe

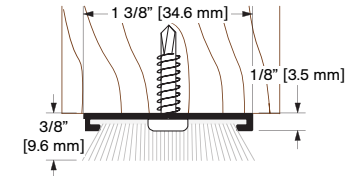

Installation Instructions

1. Measure and cut door shoe to fit.
2. Position seal on door with gasket compressed 1/16" against sill.
3. Mark screw holes.
4. Drill pilot holes for screws using a 7/64" (#36) drill bit.
5. Install with screws provided.
6. Adjust position so that gasket does not impede proper closing and latching of door.